

SLIDE™

SMARTWATCH

SW100



Quick Start Guide

Please read this manual before use.

Visit us at
www.slideusa.com
or contact us at
support@slideusa.com

INTRODUCTION

Thank you for purchasing this smartwatch. It is designed to synchronize your phone book and provide a variety of useful features.

When you activate your smart watch, please download the necessary files as detailed below. They are designed to work with your Android system.

Please Note: Currently, there is no software download for iPhone. However, with iOS 8.1 and above, you can synchronize your phone book, check your call history, and control music playback via Bluetooth®.

SOFTWARE DOWNLOAD

For Android phones, scan the QR Code below to initiate the download of the necessary software.

For iOS phones, open the Bluetooth® feature on both the smart watch and phone, and press "Search New" on the smartwatch.



When prompted, press "Pair." The watch will make a sound when it is successfully connected to the phone. To disconnect, go to either Bluetooth® screen and select "Disconnect."

PRODUCT DETAILS



POWER/HOME: Press and hold to power on/off. Press once to turn the screen on, or to return to standby.

BACK/HANG UP: Press to go back to the previous menu, or hang up a call.

VOLUME: Press to bring up volume adjustment.

CONFIRM/ANSWER: When in standby, press to enter the main menu. Use as a confirm key while in a menu, or to answer a call.

MICROPHONE: Location of internal microphone.

USB PORT: Used for battery charging and file transfer.

SPEAKER: Location of internal speaker.

RESET HOLE: On the back of the watch, press with a small pin to perform a system reset if the watch is acting abnormally.

WATCH FUNCTIONS

- **BLUETOOTH®:** Enable or disable Bluetooth® functions, adjust device visibility, and connect to other devices.
- **PHONE BOOK:** View mobile phone contacts from your phone.
- **DIALER:** Dial phone numbers for your phone.
- **MESSAGES:** View the phone's text message Inbox and Sent folders.
- **CALL HISTORY:** View Missed Calls, Dialed Calls, and Received Calls, and call back all corresponding contacts.
- **BT NOTICE:** Receive notifications from the phone when text messages arrive.
- **BT MUSIC:** Control the playback of music from your phone.
- **BT CAMERA:** Control your phone's camera functions.
- **SETTINGS:** Adjust the Clock, Volume, Language, Display, Battery, and Bluetooth® settings. You can also reset the watch to original settings by selecting Reset Data.
- **ANTI-LOST:** Keep a track of your phone via its Bluetooth® connection, and set alarms and ringtones to help locate your phone.
- **POWER SAVING:** Turn Power Saving settings on or off.
- **RINGTONE:** Adjust the ringtone settings for the watch.
- **CALCULATOR:** Use the watch as a calculator.

- **STOPWATCH:** Use the watch as a stopwatch.
- **PEDOMETER:** After setting your height, weight, pace, and step goals, track your activity with your watch.
- **SLEEP MONITOR:** Track your sleep habits with your watch.
- **ALARM:** Set alarms with various ringtones and alarm types.
- **CALENDAR:** Check your calendar on your watch.
- **REST:** Set alarms to remind yourself to take a break.
- **DRINK:** Set alarms to remind yourself to hydrate.

NOTES

- Charge your smartwatch fully before its first use. It should take about 2 hours to charge.
- Be sure that the software is properly installed. Certain functions, such as **BT Notice** and **BT Music**, will not work if the software is not installed.
- Always allow Phone Book access, as many functions require it to run properly.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARRANTY CARD

Customer Information

Model		Selling Company	(signature)
Customer Name		Phone Number	
Sales Phone Number		Purchase Date	
Product IMEI Code			
Customer Address			
Sale Address			
	SUMMARY		
DATE	SYMPTOMS	SERVICING	NOTES