

Table of Contents

1 FCC Warning Statement	3
2 Tablet Introduction	4
2.1 Tablet Operation and Preparation	4
2.2 Tablet Status and Reminder	4
3 Quick Start Guide	5
3.1 Key Functions	5
3.2 Startup and Shutdown	5
3.3 Apps	6
3.4 Home Page	7
3.5 Language & Keyboard	8
4 Basic Settings	9
4.1 Wireless and Internet	9
4.2 Bluetooth	9
4.3 Data Usage	11
4.4 Airplane Mode	11
5 Multi-Media	16
5.1 Music	16
5.2 Video	17
5.3 Camera	18
5.5 FM Radio	19

Caution:

- Keep your tablet, battery, and charger dry at all times.
- Do not expose your tablet to excessive shaking or shock.
- Do not expose your tablet to extreme heat or cold.
- Do not disassemble the device or its accessories, or the warranty on the tablet is void.

Safety Warning:

- Never use your tablet while driving a car.
- When flying, be sure to either turn off the device or switch to Airplane Mode.
- Keep your tablet away from magnetic equipment, as the tablet's electric field may erase data stored on the magnetic equipment.
- Please respect others' privacy and legal rights when using your tablet.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2 Tablet Introduction











2.1 Tablet Operation and Preparation

Battery Charging

If this device has already been used, please use the AV adapter to fully charge it.

2.2 Tablet Status and Reminder




Notification icons

	New email		Airplane Mode on
	USB connected		USB connected
	Return button		Downloading
	Display recently used applications		Home button
	Battery life		WIFI connected, internet is available

3 Quick Start Guide

3.1 Key Functions

Description:

Power button	Press to sleep/wake up, hold down to startup and shutdown.
Volume + (up)	Increase the volume.
Volume - (down)	Decrease the volume.
HOME button (home) 	Return to home screen.
Back button (back) 	Return to previous screen.
Open windows button 	Display recently browsed history.

3.2 Startup and Shutdown

Startup

Hold POWER key for three seconds to start the tablet.

Shutdown

- 1) Hold the POWER key, it will open shutdown window.
- 2) Shutdown window contains Mute Mode, Airplane Mode, Reboot Mode, and Shutdown options.

3.3 Apps

To open an app, simply touch it once.

To close an app, click on the square button on bottom of the screen, and slide the apps you want closed to the left.

To change the location of an app on the home screen, hold down the app and slide it to its destination.

To create a folder, slide an app onto another app you wish to group it with. You can then name the folder by opening the folder and clicking on “unnamed folder.”

To delete an app, simply hold your finger on the app until an X appears on the screen, and slide the app to the X.

To view all apps, select the “All Apps Icon,” shown below.




To download apps that did not come installed on your tablet, you can visit the Google Play store located on your home screen.

Password/Pin Code

To set a PIN number or Password lock on the tablet, open the Settings application, click on “Safety,” then “Screen Lock,” and then choose whichever method you prefer.

3.4 Home Page

When in the main interface as below (Picture 3.2), long press the blank area and it will popup windows to set Wallpaper, Folder, Widgets, and Shortcut.

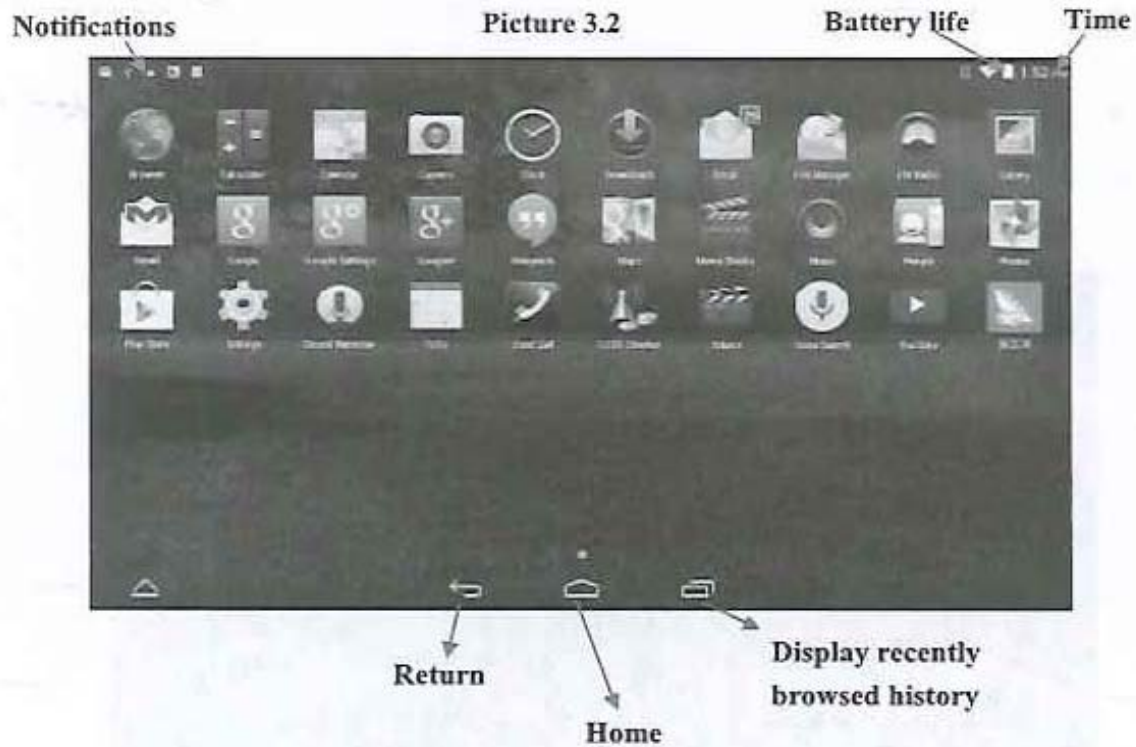


Change the wallpaper of desktop

- 1) On the home page, hold down any blank space in main screen, and a window to change the wallpaper will pop up.
- 2) Click the "Gallery" or "Wallpaper Gallery" to select the wallpaper.

3.5 Language & Keyboard

 1. Click the Settings app.
2. Click "Language and Keyboard."
3. In the text setting area all the keyboards will be available.
4. Select the typing method you want.

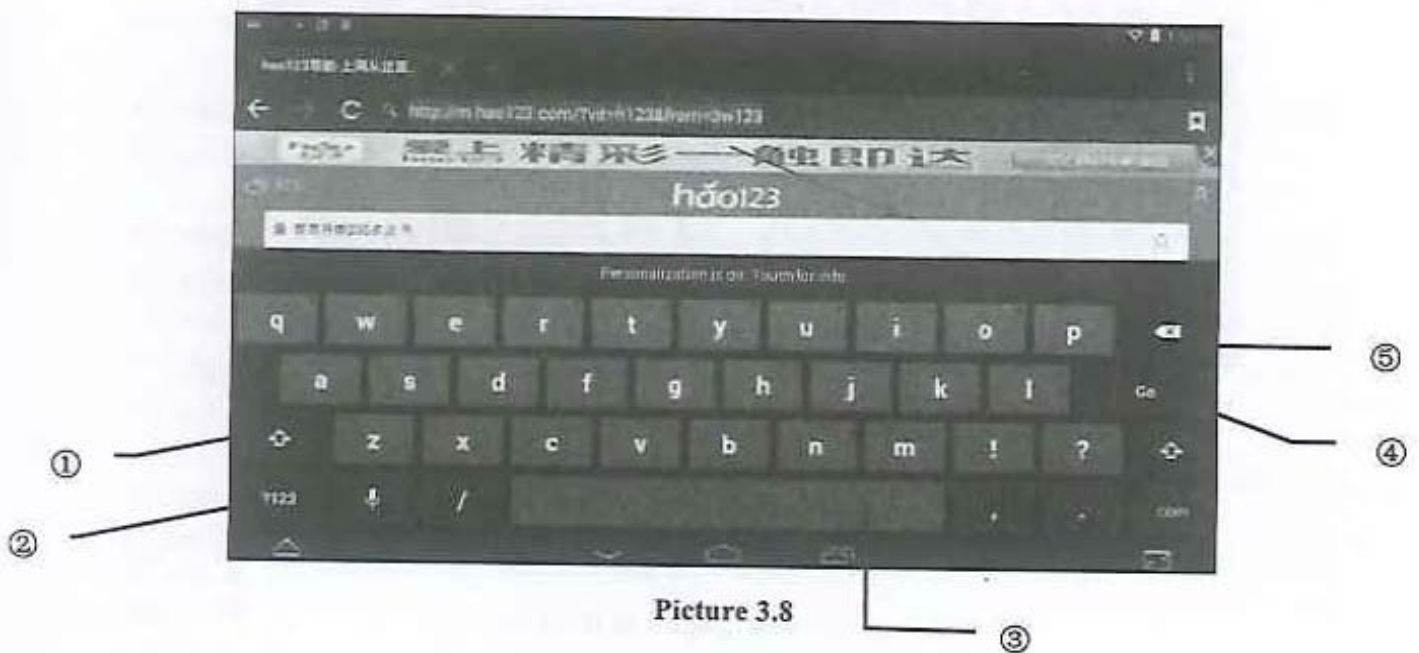

Picture 3.8

1	Switch between capital/lower-case
2	Letters/numbers
3	Space
4	Enter
5	One click for backspace, click and hold to delete all.

4 Basic Settings

4.1 Wireless and Internet

1. Connect Wi-Fi

- 1) In the main menu open the Settings app.
- 2) Click "WLAN," open Wi-Fi, and the tablet will automatically search for available Wi-Fi.
- 3) Choose the Wi-Fi you want to connect to. If it has a password, the password window will pop up; enter the password, and click connect.



Picture 4.1


4.2 Bluetooth

1. Bluetooth Function Operation

- 1) Click the Settings app in the main menu.
- 2) Click "Bluetooth" and open it.
- 3) Click "Search Device." The tablet will automatically search for bluetooth devices nearby, as in Picture 4.2.



Picture 4.2

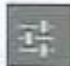
- 4) Click the available Bluetooth device, enter any necessary password, and match the device to connect.
- 5) After a successful match, you can click  to enter into Picture 4.3.



Picture 4.3

4.3 Data Usage

To check WIFI data usage, click “Data Usage,” as in Picture 4.4

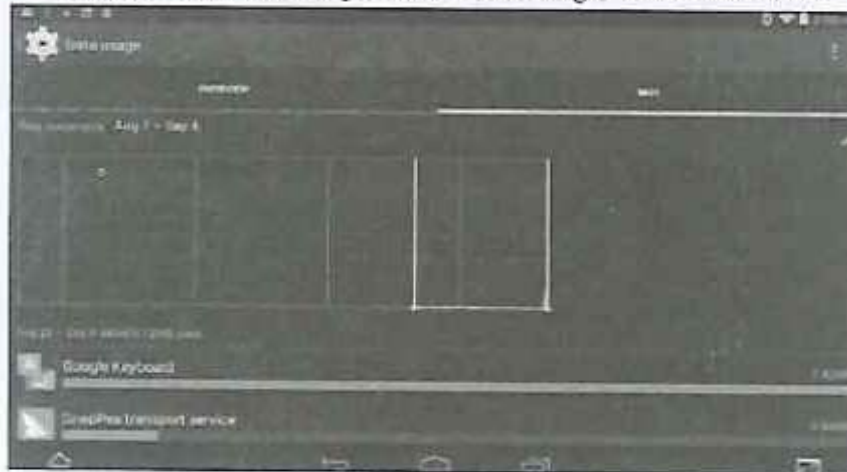

Picture 4.4

4.4 Airplane Mode

When in Airplane Mode, the tablet cannot send or receive data. To enable or disable Airplane Mode, simply swipe down from the upper right corner of the screen and pull down the menu that opens on the top of the screen. Then, click on Airplane Mode.

4.5 Display

1. Adjust the screen brightness

- 1) Click Settings app.
- 2) Click “Display,” and then choose “Brightness.”
- 3) Drag the indicator to adjust the brightness, as shown in Picture 4.5.



Picture 4.5

- 4) Click OK after the brightness is adjusted.

2. Wallpapers

- 1) Click the Settings app.
- 2) Click "Display," then click "Wallpaper."
- 3) You can choose different wallpapers from your photos and videos, as shown in Picture 4.6



Picture 4.6

3. Auto-Rotation

Auto-Rotation is when the tablet automatically switches from a vertical view to a horizontal view when turned sideways. To toggle this option on and off, simply swipe down from the upper right corner of the screen to pull down the menu that opens on the top of the screen, and select "Auto-Rotate."

4. Sleep

- 1) Open the Settings app.
- 2) Click "Display."
- 3) Click "Sleep."
- 4) Set the sleep time as you want, as in Picture 4.7.



Picture 4.7

5. Font size


Click "Font Size" to adjust the font size, as in Picture 4.8.



Picture 4.8

4.6 Battery

Open Settings, select "Battery," and you can view the battery life, as in Picture 4.9.

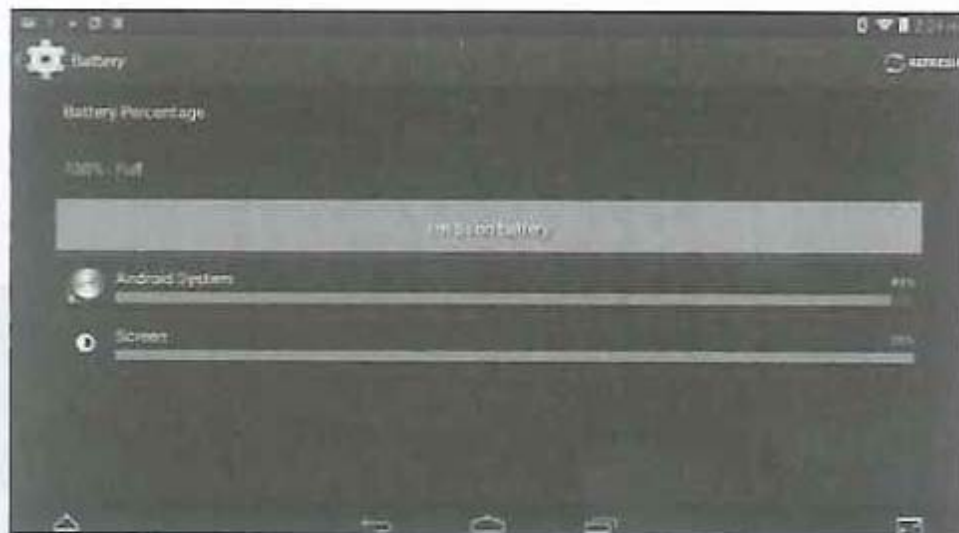

Picture 4.9


4.7 Account Sync

1. Open the Settings app.
2. Click “Account” and sync, as seen in Picture 4.10.



Picture 4.10

3. Click “Add an Account,” as seen in Picture 4.11.

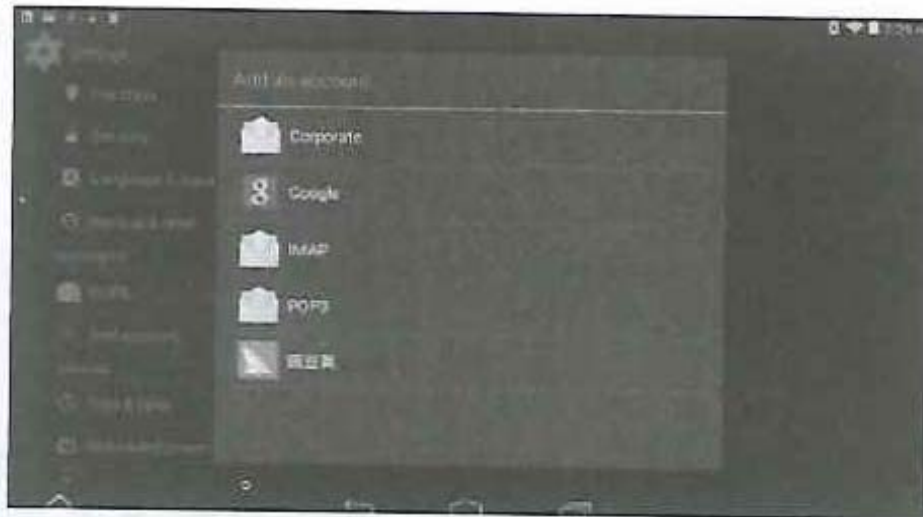


Picture 4.11


4.8 Backup and Reset

Connect to WIFI and login to your google account, and choose "Backup My Data." The system will backup your data into the Google server.


5 Multi-Media

5.1 Music


Open the Music app by clicking the music icon, , and click the music you want to play, as in Picture 5.1:

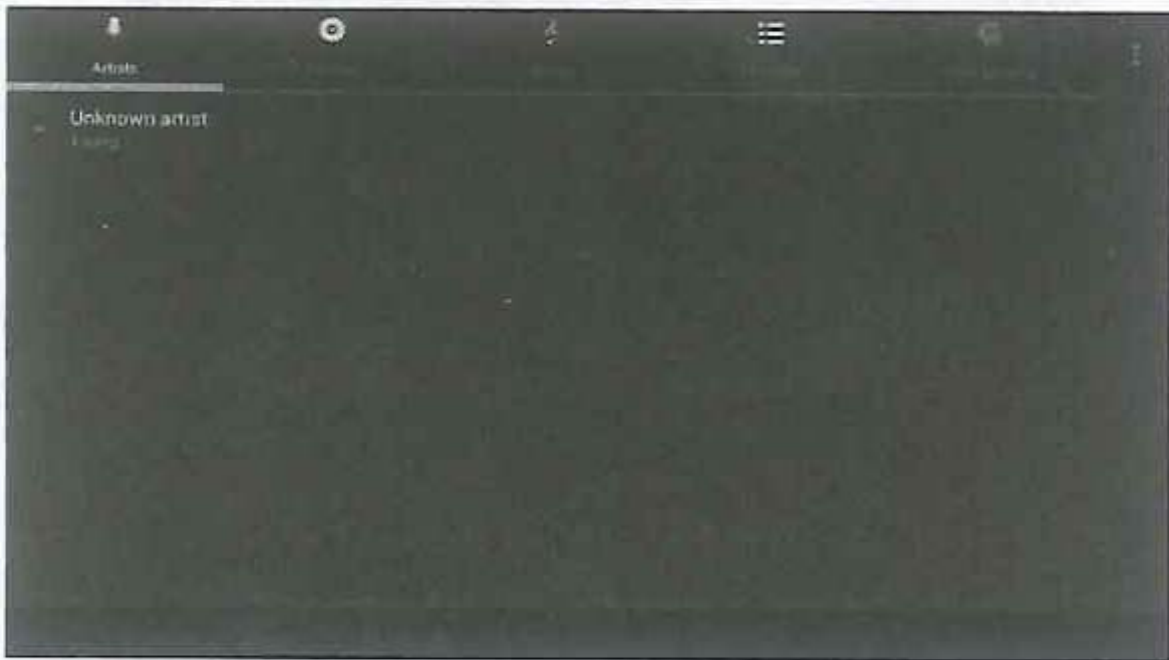

Picture 5.1

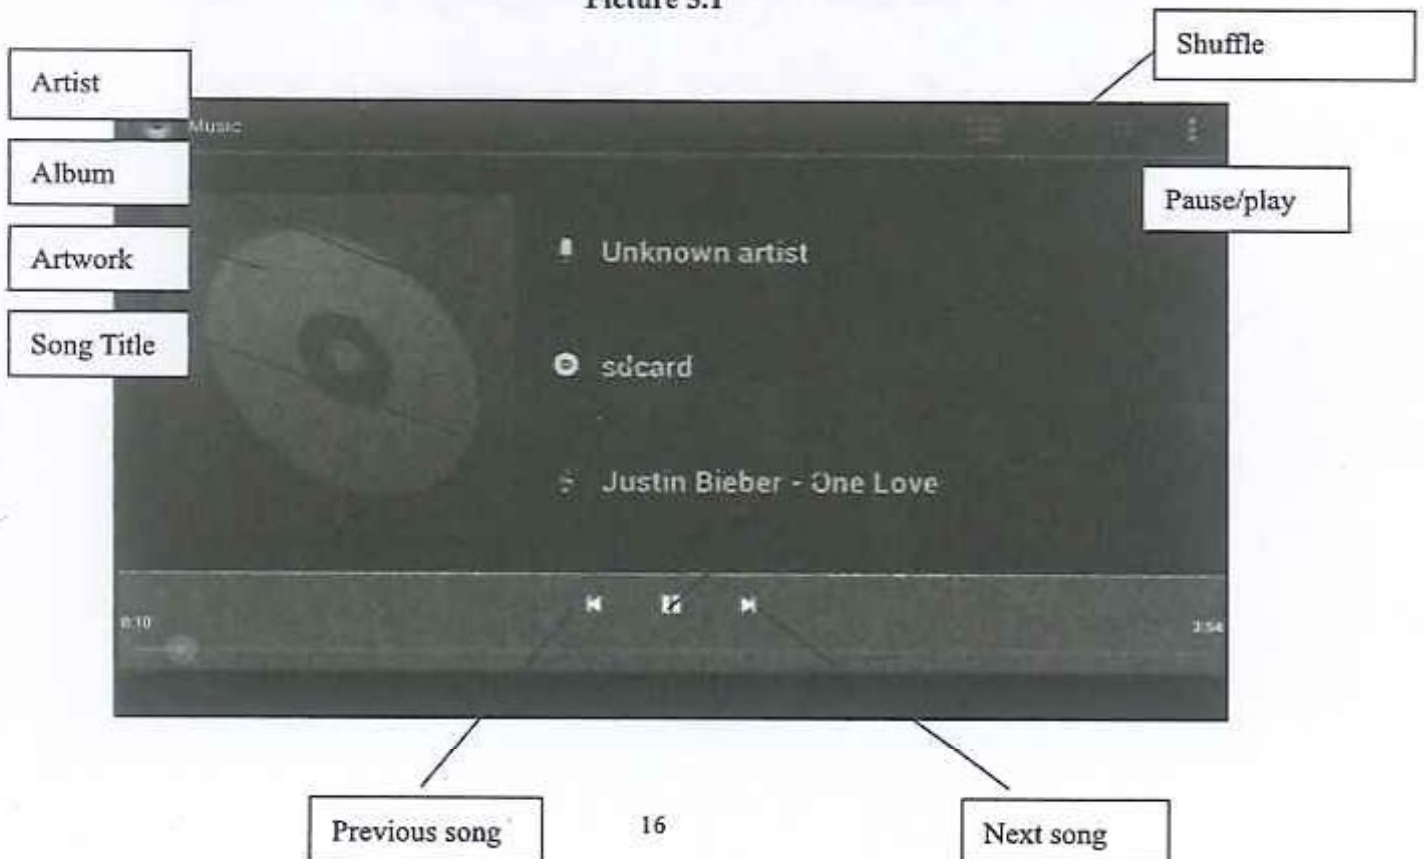 

5.2 Video

To enter the Video Player, choose the  icon in the main menu. Then, choose the video you want to play.




Adjust
Play
Progress


Play/Pause

Choose
the
Screen
Mode

Picture 5.3

5.3 Camera

 
In the home screen, click the camera icon, , to enter into camera mode.

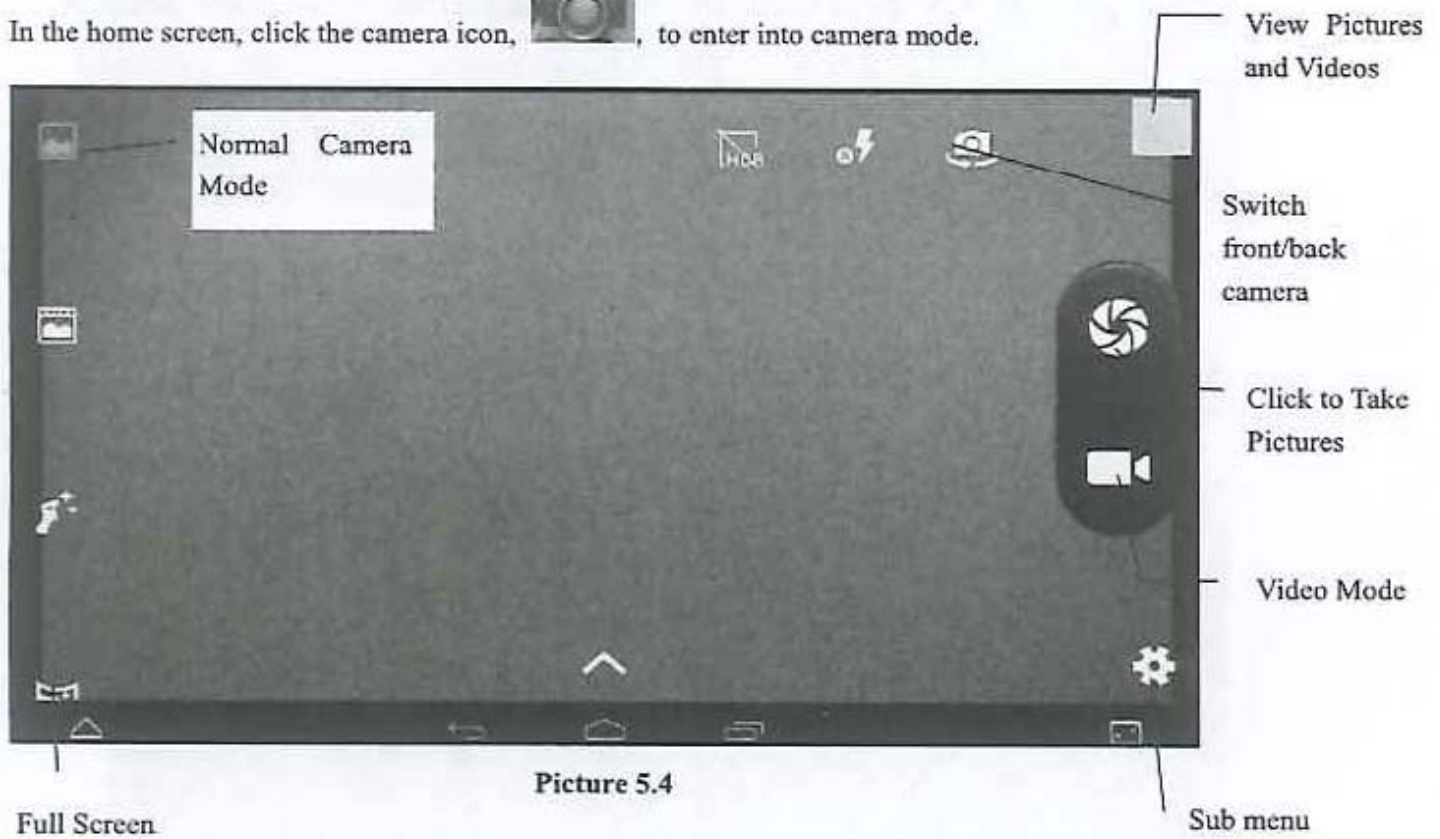


Picture 5.4

 
5.5 FM Radio



Click the FM Radio icon, , to enter into the FM radio interface:

- The radio button operation instructions are as seen in Picture 5.5:
- Save channels: Click the  button to save the channel, and the channel will appear in your channels list.

Note: You need to insert earphones to use as an antenna when using FM radio. If there is no antenna, your tablet can't search any frequencies.

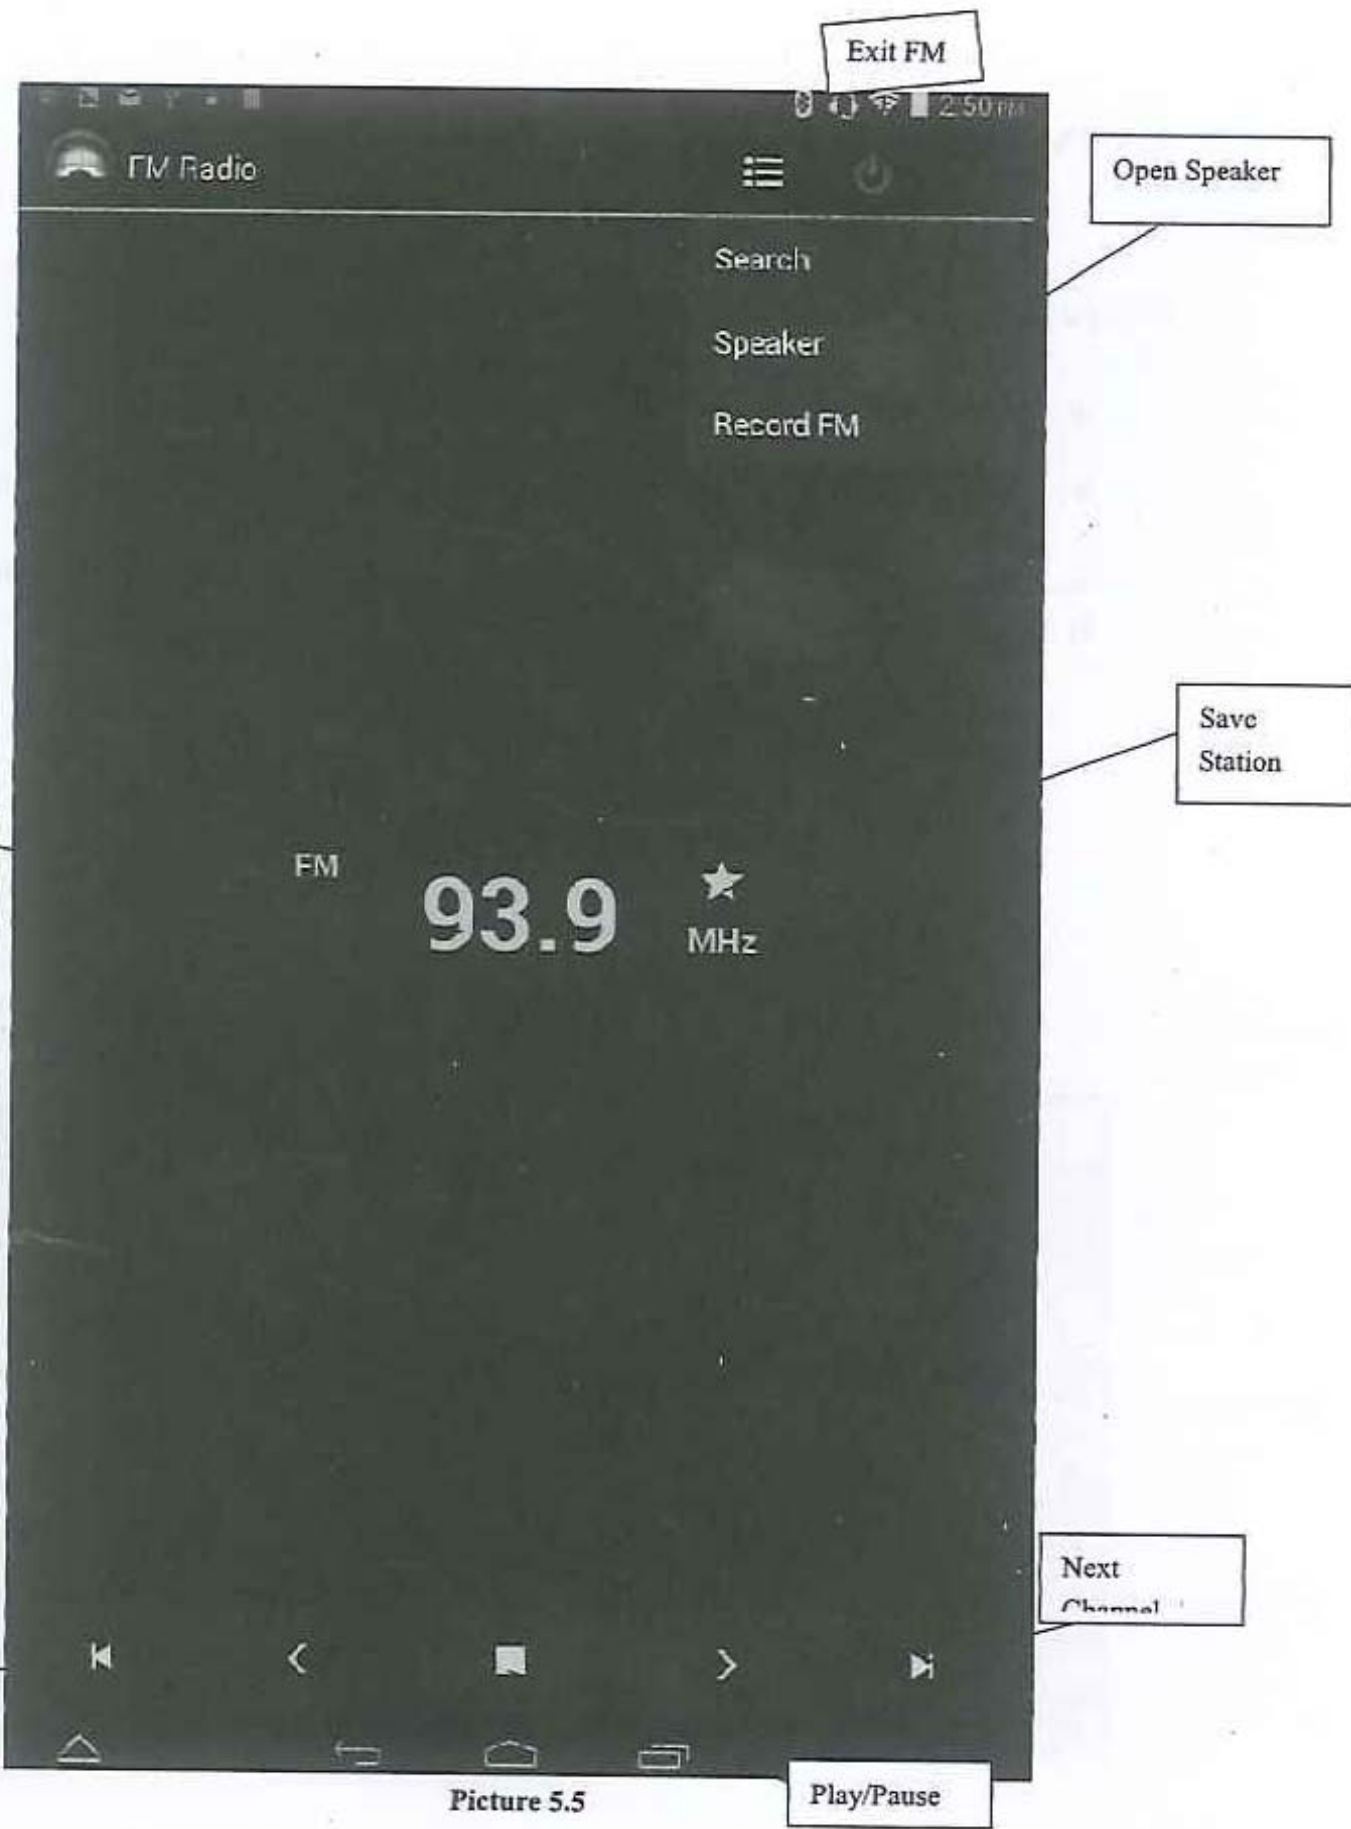

Picture 5.5