

60mm

75 mm

## Wireless Headphone



### Power ON/OFF

Press and hold the "Ⓞ/M" button for 2 seconds to turn headphones On. Press and hold the "Ⓞ/M" button for 5 seconds to turn headphones Off. The headphones automatically enter into wireless mode when turned on.

### Wireless Function

Wireless Pairing: While headphones are in wireless mode (the indicator light will flash blue and red), use your wireless enabled device to search for and select "FunFones", the headphones will prompt when the device is successfully paired. The indicator light will turn steady blue.

### Listen to Music

**Pause/Play Music:** Press "⏮/⏭" button located on the left side of the headset. The blue indicator light is on once every 5S.

**Volume:** Press and hold "+" to increase the volume; press and hold "-" to decrease the volume on the headphones. Headphones will play a warning tone when maximum and minimum volume levels are reached. You can also adjust the volume on your device. The blue indicator light is on once every 5S.

**Next/Previous Song:** Short press "+" to choose the next song; short press "-" to choose previous song. You can also select the next/previous song on your device. The blue indicator light is on once every 5S.

### Phone Features

**Receiving a Call:** While playing music in wireless mode, when there is an incoming call, press the "⏮/⏭" button to answer call; press the "⏮/⏭" button once again to end call. The indicator light turns steady blue.

**Volume:** When taking a call, short press "+" to increase the call volume; short press "-" to decrease the call volume.

**Redial:** Press "⏮/⏭" button twice to redial the last number.

**Reject an Incoming Call:** Press & hold the "⏮/⏭" button for 2 seconds to reject a call.

### Charging

**Recharging:** Plug the Micro USB cable into the Micro USB port on the side of the headset, and connect the other end of the cable to any USB power source. The LED indicator will glow red while headphones are charging, and turn off when full charged. Charging time is approximately 2 hours. Playing time is approximately 4 hours.

### Safety

Do not tamper with battery to avoid danger of explosion.

Do not expose to environments with excessively high temperatures.

### Accessories

USB Charging Cable x 1

Instruction Manual x 1

FCC ID: 2AJXA-BTHP-2

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.