



APPENDIX 1 PHOTOS OF TEST SETUP

Test Mode 1

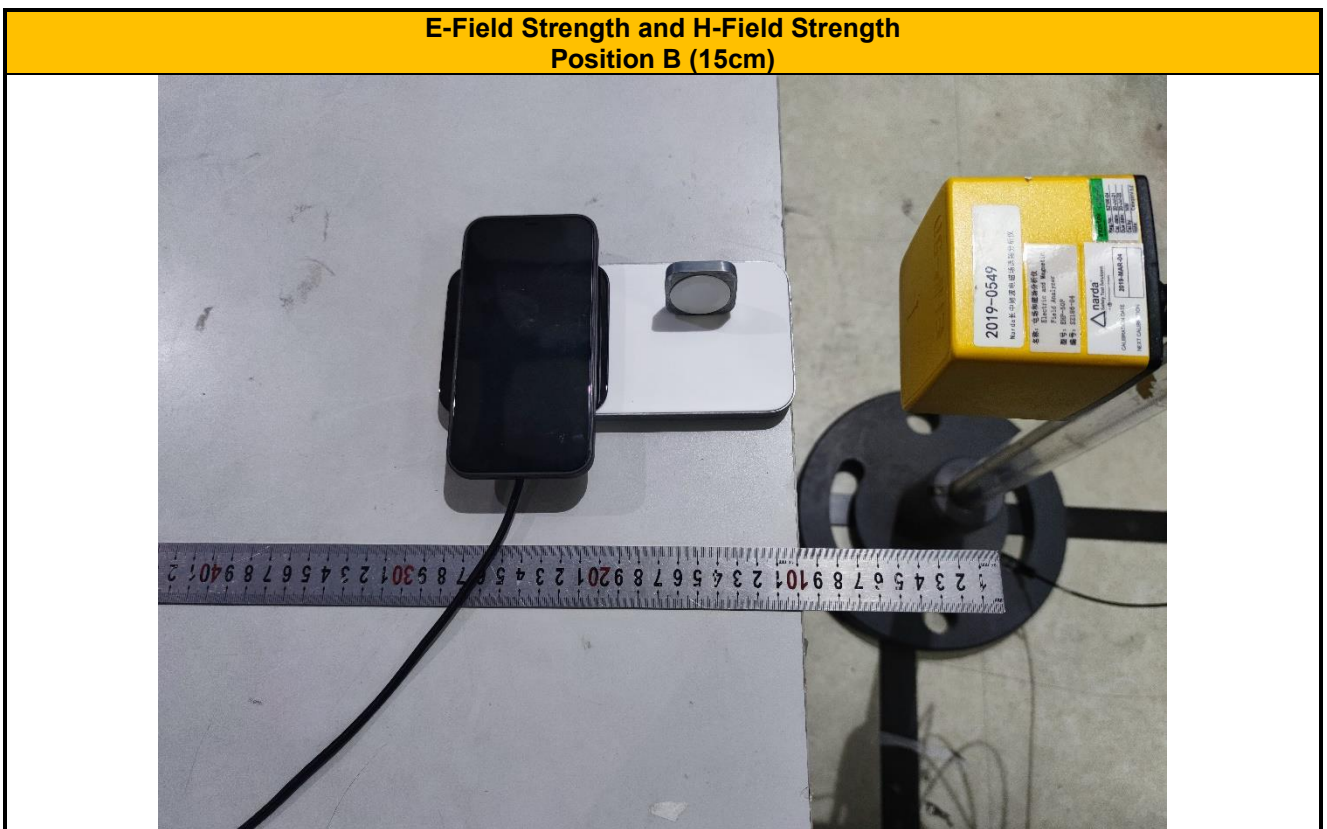


**E-Field Strength and H-Field Strength
Position C (15cm)**

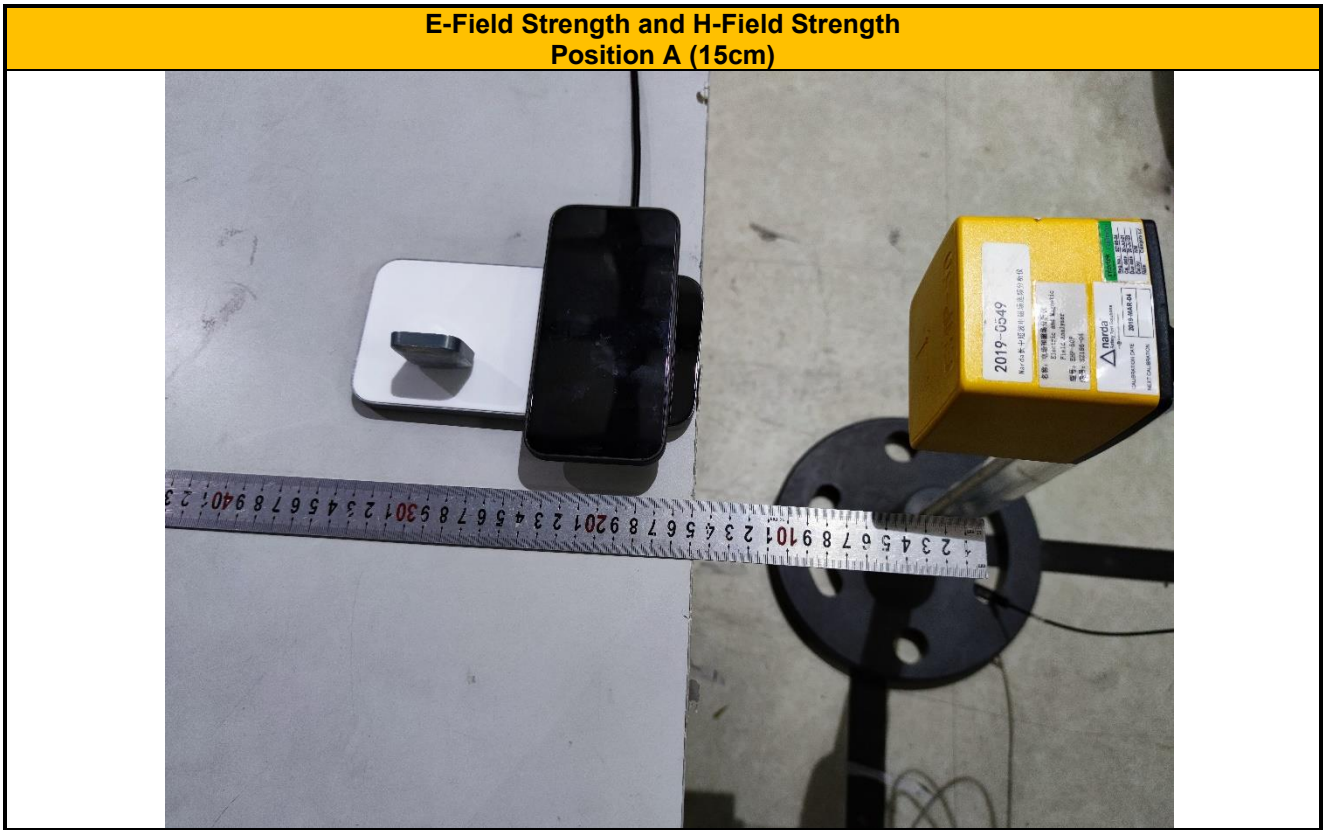

**E-Field Strength and H-Field Strength
Position D (15cm)**





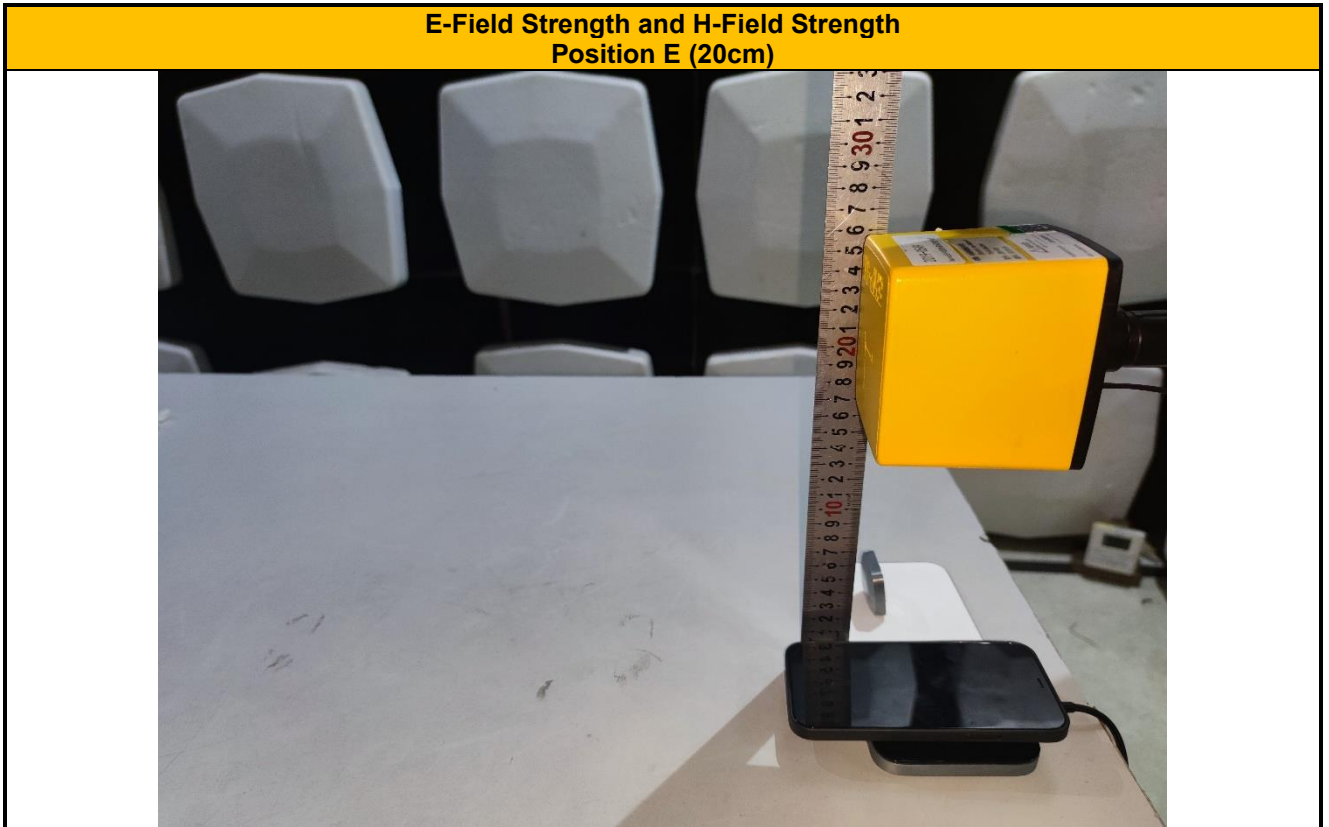

Intertek Testing Services Shanghai

Address: Building 86, No. 1198 Qinzhou Road(North), Shanghai 200233, P.R. China
Tel: +86 21 61278200 Fax: +86 21 54262353


Test Mode 2

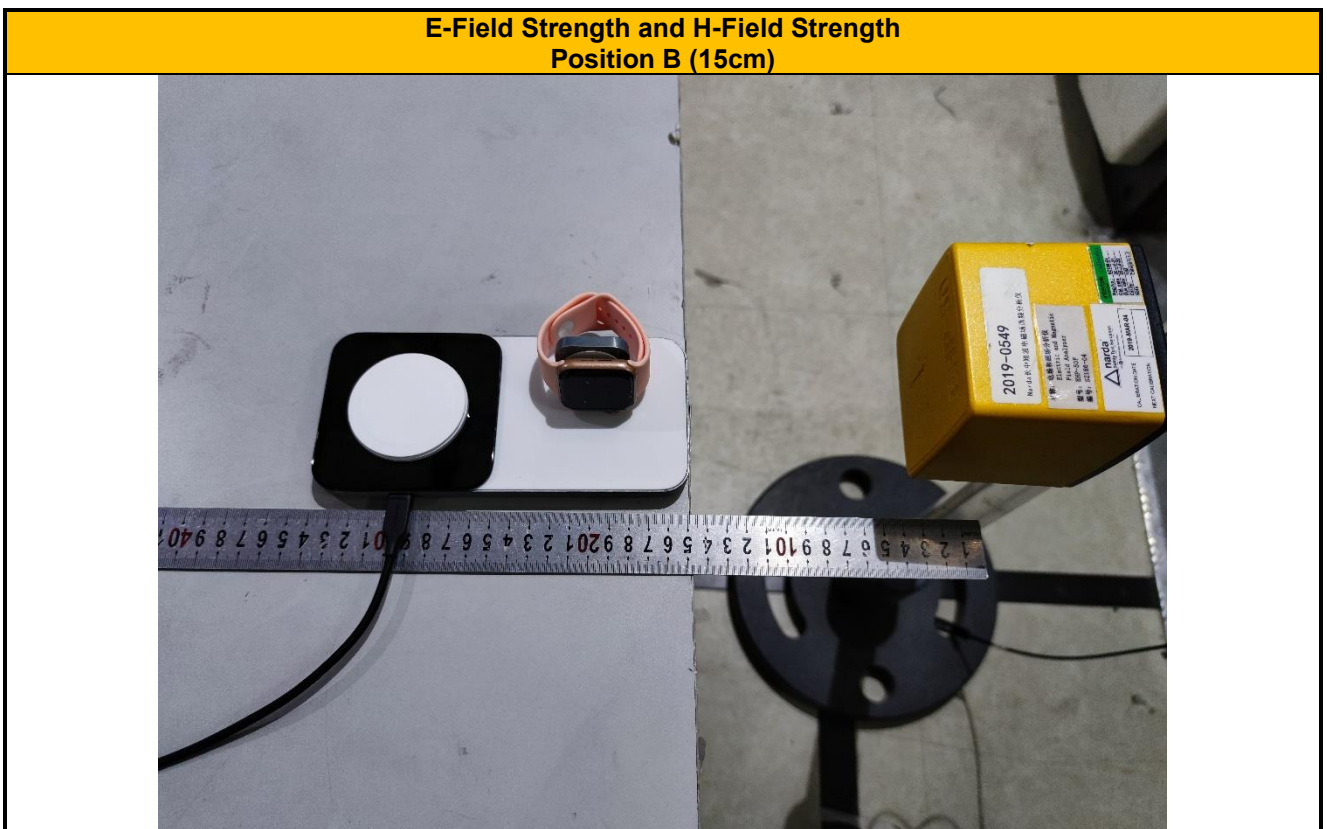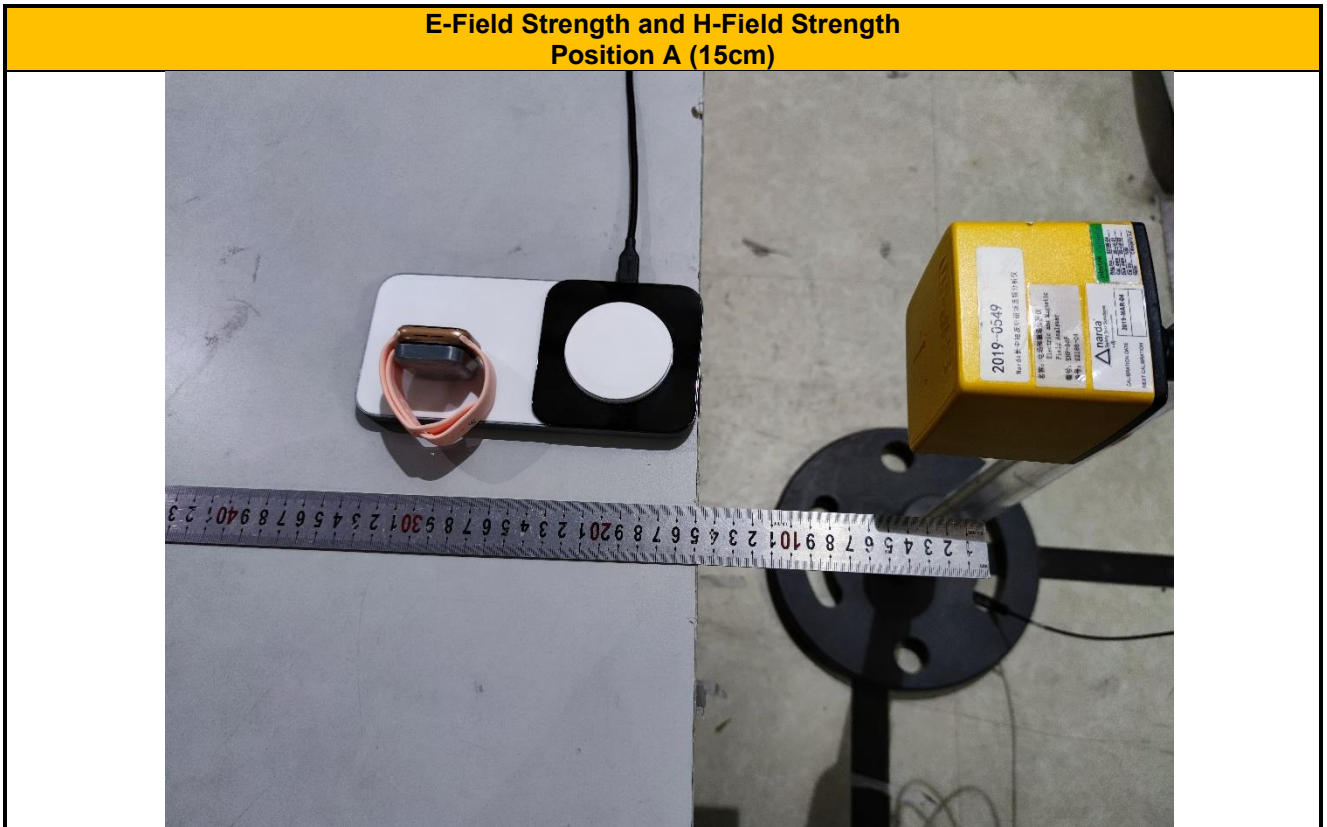


Intertek Testing Services Shanghai


Address: Building 86, No. 1198 Qinzhou Road(North), Shanghai 200233, P.R. China
Tel: +86 21 61278200 Fax: +86 21 54262353

**E-Field Strength and H-Field Strength
Position C (15cm)**

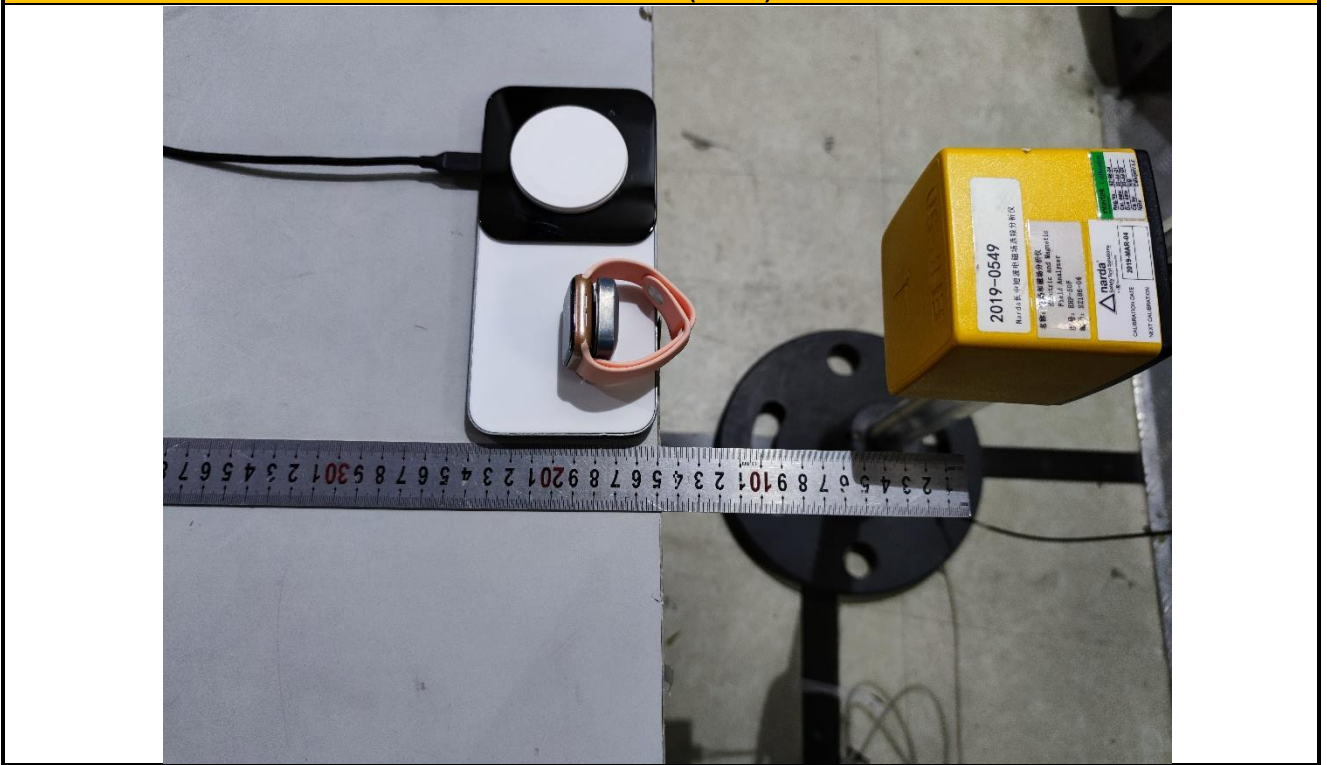

**E-Field Strength and H-Field Strength
Position D (15cm)**

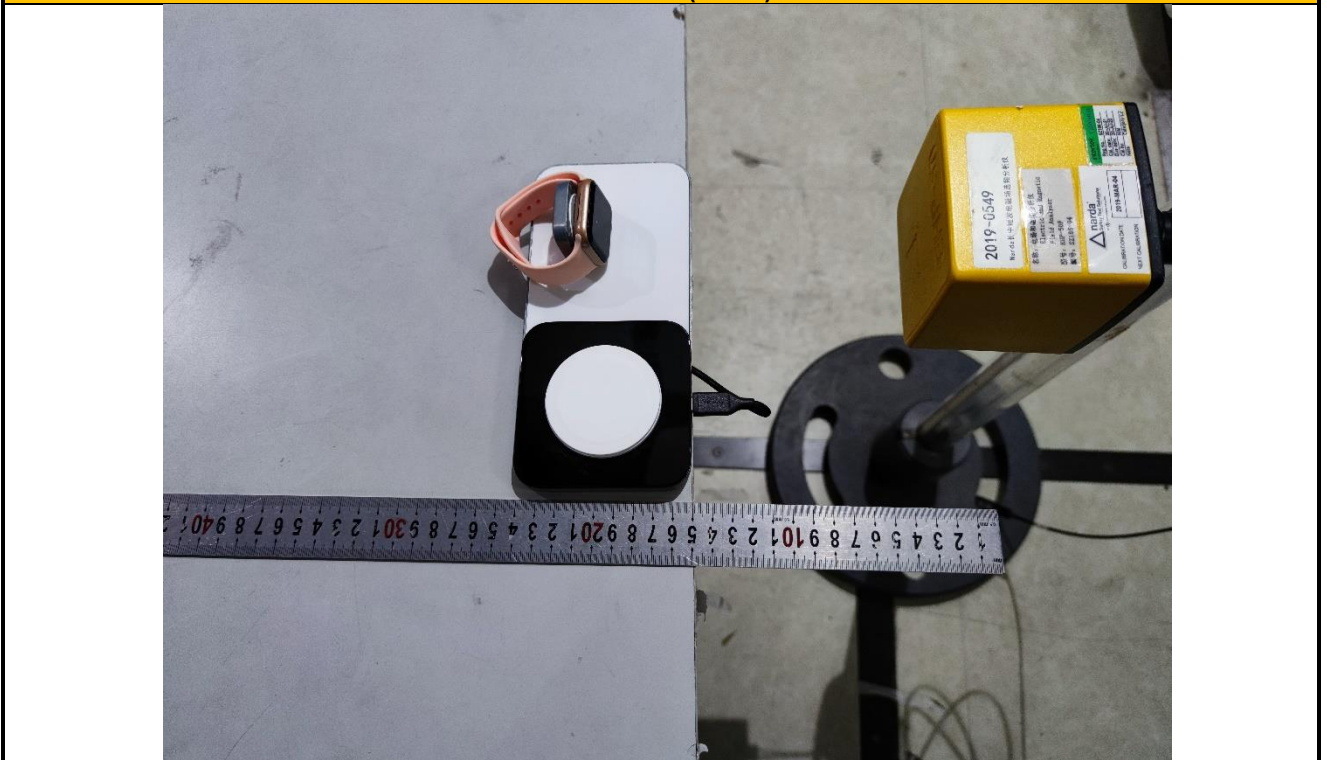

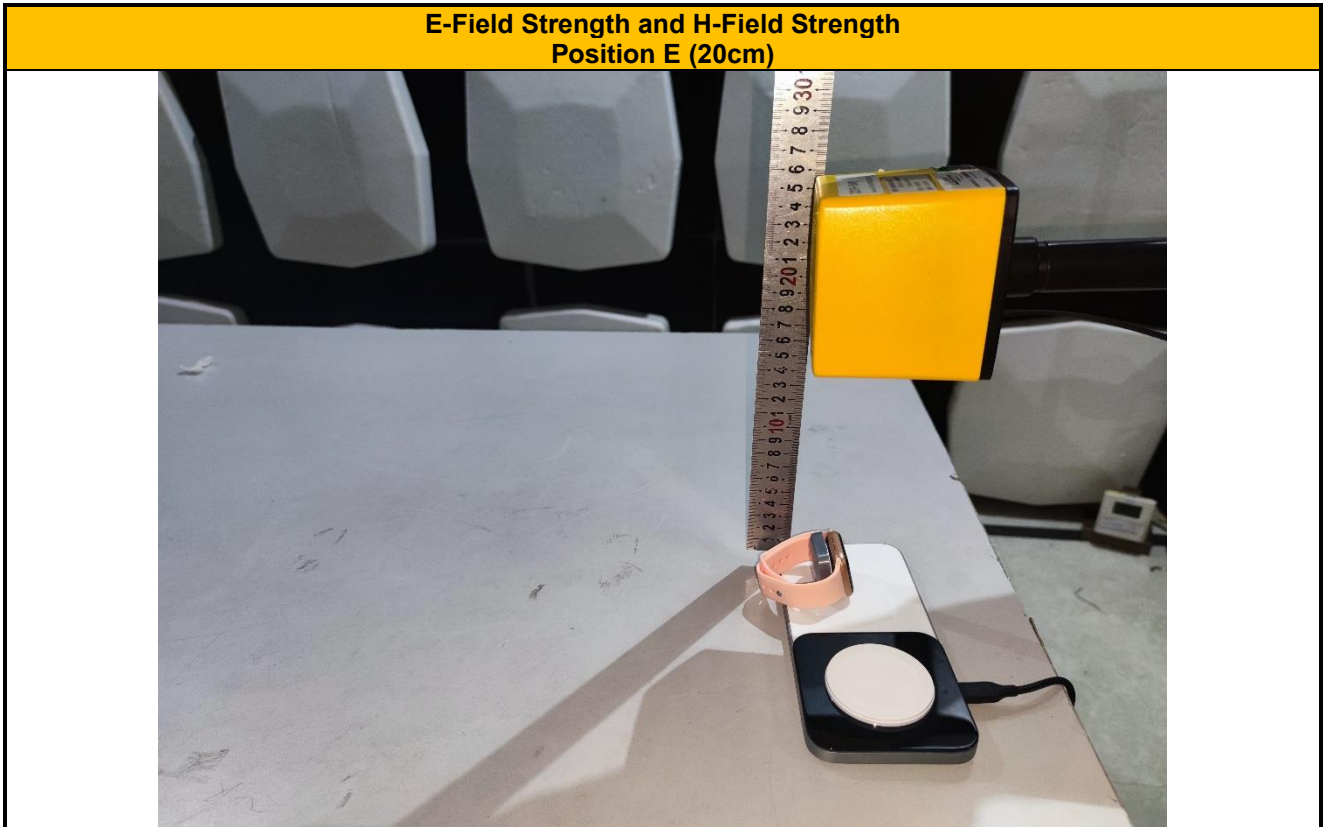

Test Mode 3

**E-Field Strength and H-Field Strength
Position A (15cm)**



**E-Field Strength and H-Field Strength
Position B (15cm)**



Intertek Testing Services Shanghai

Address: Building 86, No. 1198 Qinzhou Road(North), Shanghai 200233, P.R. China
Tel: +86 21 61278200 Fax: +86 21 54262353

**E-Field Strength and H-Field Strength
Position C (15cm)**



**E-Field Strength and H-Field Strength
Position D (15cm)**



