Previously Connected Devices

- The speaker can remember multiple Bluetooth devices and will always try to re-connect to the last device used.
- · To re-connect to a different device, turn off Bluetooth on unwanted devices, then access the Bluetooth settings menu on the device you wish to use and select ISBW108.
- If the speaker should become unpaired or will not connect normally, follow these steps in your device's Bluetooth Settings Menu.
 - » Delete the speaker ("Forget This Device").
- » Turn Bluetooth OFF then ON again, and repeat the Initial Bluetooth Connection.

Aux In (3.5mm Audio Input)

- 1. Connect a 3.5mm audio cable (not included) to the Aux In on the unit and the audio output/ headphone jack on a media player.
- 2. The unit will automatically detect the input and switch to **Aux In Mode**, indicated by a voice prompt and a slowly blinking indicator light. Use the controls on the connected device to select and play audio.

FCC WARNINGS

 Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part
15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio unications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user s encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different
- from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help.

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. The device has been evaluated to meet general RF exposure

The devicecan be used in portable exposure condition without

ADDITIONAL WARNINGS

- WARNING: To prevent fire or shock hazards, do not expose
- WARNING : Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- · Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- To avoid hearing damage, make sure that the volume on your music player is turned down before connecting your earbuds or headphones. After placing earbuds in/on your ears, gradually turn up the volume until you reach a comfortable istening level.



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www. P65Warnings.ca.gov. This product meets and complies with all Federal regulation

Contact Information

Website: www.iLiveElectronics.com Email Support: prodinfo@dpiinc.com Email Parts: partsinfo@dpiinc.com Phone Support: 1-888-999-4215

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to: www.iLiveElectronics.com



ons are subject to change without notice Copyright © 2018 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners





Waterproof Wireless Speaker User's Guide for Model ISBW108 v2043-01

Features

Bluetooth wireless

- range 60 ft. • Durable fabric &
- rubberized coating • DC battery power -
- built-in rechargeable battery: approx. 2.5 hrs playtime at 100%

Waterproof Rating - IPX5

• Protection from contact with enclosed equipment.

Includes


• USB charging cable

Carabiner

User's Guide

- · Protection from heavy splashing water.
- Protection from dust, oil, and other non-corrosive material.

IMPORTANT: To ensure your speaker is prepared for use in a wet environment, disconnect and remove any power cables, and tightly close the charging port water cap. If the water cap is not properly closed, water resistance will be compromised and could result in damage to the speaker or personal injury.

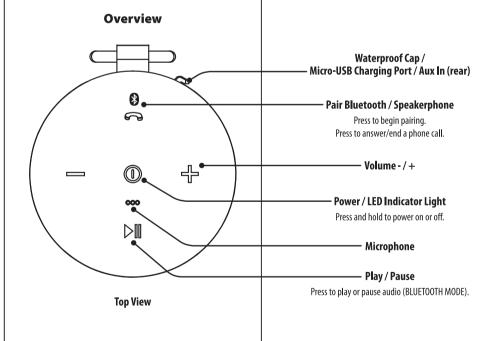


Charging the Battery

Warning: Do not charge the speaker while it is in or near water. If splashed or wet, allow ample time to dry before charging.

Initial charge time is approximately 2 hours. Charge fully before use.

• Pull back the water cap and use a Micro-USB to USB cable (included), to connect to the USB port of a powered on computer or USB power adapter (not included).

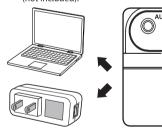

Power Status	Indicator Light
Low Battery	Flashing red light
Charging	Solid Red light
Finished Charging	No light

Initial Bluetooth Connection

- 1. Power on and press and hold the 🚯 button. A voice will announce "Bluetooth is connecting" and the indicator will begin quickly flashing blue. When pairing, remain within 3 feet of the unit.
- 2. Using the controls on your Bluetooth device, select ISBW108 in the Bluetooth Settings to pair. If need be, refer to the user's manual for your specific device for more information.
- 3. When successfully paired, a voice will announce "Bluetooth is connected" and the LED indicator will turn solid blue. Audio from the connected Bluetooth device will now play on the speaker.
- 4. Use the controls on the connected Bluetooth device to select and play audio. Use the speaker controls or the connected Bluetooth device to play, pause, and adjust the volume level.

Using the Speakerphone

- To accept a call, press the 🖚 button or use the controls on the connected phone.
- To end a call, press the
 button or use the controls on the connected phone.
- To re-dial the last dialed number, press the button twice.