
 <small>A Phoenix Mecano Company</small>	Issue Department: Bedding Division	Date:	2023-05-26
	System Instruction	Author:	
	Instruction of RF432A		
		Edition:	1.1
		Page 1 of 5	

2 Instruction of RF502A



Figure 1 button of remote

 <small>A Phoenix Mecano Company</small>	Issue Department: Bedding Division	Date:	2023-05-26
	System Instruction	Author:	
	Instruction of RF432A		
		Edition:	1.1
		Page 2 of 5	

Item

1.1 ZG button 15

Click the ZG button, the actuator moves to ZG position, stop when click any button during the movement.

1.2 AntiSnore button 12

Click AntiSnore button, actuators move to AntiSnore position, stop when click any button during movement.

1.3 Head up 13

Press and hold HEAD UP button of remote, head actuator moves out, stop when released;

1.4 Head down 14


Press and hold HEAD DOWN button of remote, head actuator moves in, stop when released;

1.5 Foot up 17

Pressa and hold FOOT UP button of remote, foot actuator moves out, stop when released;

1.6 foot down 18

Press and hold FOOT DOWN button of remote, foot actuator moves in , stop when released;
 When moving to flat position, lumbar actuator and tilt actuator move first, after 500ms, head and foot actuators start moving;

 <small>A Phoenix Mecano Company</small>	Issue Department: Bedding Division	Date:	2023-05-26
	System Instruction	Author:	
	Instruction of RF432A		
		Edition:	1.1
Page 3 of 5			

1.7 Flat 16

Click FLAT button, the bed goes flat, stop when click any button during the process of going flat;

1.8 Massage head 1

Click MASSAGE HEAD button, head massage motor switches message intensity, message intensity switches among 0-1-2-3;

1.9 Massage foot 3

Click MASSAGE Foot button, head massage motor switches message intensity, message intensity switches among 0-1-2-3;

1.10 Massage time 2

Click MASSAGE time button to set message time among 10-20-30mins.

1.11 Menu 4

Click Menu button to display the menu interface at screen.

1.12 back 5


Click Back button to operate the screen content as back.

1.13 up down left right 6 7 9 10

Click these buttons to operate the screen content as up,down,left,right.

1.14 ok 8

Click ok button to operate the screen content confirm.

 <small>A Phoenix Mecano Company</small>	Issue Department: Bedding Division	Date:	2023-05-26
	System Instruction	Author:	
Instruction of RF432A		Edition:	1.1
		Page 4 of 5	

1.15 white noise volume down 19

Click white noise volume down button to reduce the white noise volume.

1.16 white noise active/pause 20

Click white noise active/pause button to active or pause the white noise.

1.17 white noise volume up 21

Click white noise volume down button to plus the white noise volume.

1.18 Memory position 11

Click memory position to move the actuator to the memory position.

1.19 child lock 22

Double click child lock button to lock or unlock the remote.


1.20 pair 23

Click pair button for 3 seconds to pair.

FCC:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

	Issue Department: Bedding Division	Date:	2023-05-26
	System Instruction	Author:	
Instruction of RF432A		Edition:	1.1
		Page 5 of 5	

IC RSS warning

This device complies with Industry Canada licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radioexempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.