


| | | | |
|----------------|-------------------------------------|--------------------|------------|
| | Issue department: Bedding Division | Date: | 2017-05-03 |
| | Product Function instruction | Author: | Ben |
| MC232SC | | No: MC232SC | |
| | | Version: | 1.0 |
| | | Page 1 of 6 | |

MC232F Function instruction

1. Electrical configuration diagram:

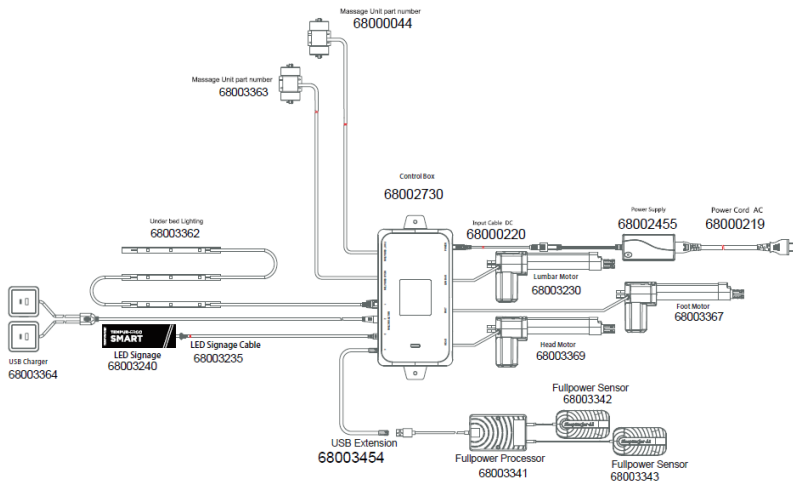

| | | | |
|----------------|---|--------------------|------------|
| | Issue department: Bedding Division | Date: | 2017-05-03 |
| | Product Function instruction | Author: | Ben |
| MC232SC | | No: MC232SC | |
| | Version: | 1.0 | |
| | Page 2 of 6 | | |

2. Remote Picture



1. Process of test

1.1. HEAD port

Connect to head actuator, control by remote single:

Click head up button on the remote, head actuator moves out, stop when released;

Click head down button, head actuator moves in, stop when released;

This function takes effect only by pressing the corresponding button on the remote.

| | | | |
|----------------|---|--------------------|------------|
| | Issue department: Bedding Division | Date: | 2017-05-03 |
| | Product Function instruction | Author: | Ben |
| MC232SC | | No: MC232SC | |
| | Version: | 1.0 | |
| | Page 3 of 6 | | |

1.2. FOOT port

Connect to foot actuator,control by remote single:

Click foot up button, foot actuator moves out, stop when released;

Click foot down button, foot actuator moves in, stop when released;

This function takes effect only by pressing the corresponding button on the remote.

1.3. LUMBAR port

Connect to lumbar actuator,control by remote single:

Click lumbar up button, lumbar actuator moves out, stop when released;

Click lumbar down button, lumbar actuator moves in, stop when released;

This function takes effect only by pressing the corresponding button on the remote.

1.4. FOOT VIBRATION

Connect to foot massage,control by remote:

Click foot massage + button,foot massage strengthens by one level;

Click foot massage - button,foot massage weakenby one level;

This function takes effect only by pressing the corresponding button on the remote.

1.5. HEAD VIBRATION

Connect to head massage,control by remote:

Click head massage + button,head massage strengthens by one level;

Click head massage - button,head massage weakenby one level;

This function takes effect only by pressing the corresponding button on the remote.

1.6. MULTIFUNCTION port

Connect with the same other Control box or Other accessories;

1.7. Power LED & PAIRING LED

Power supply for control box, LED of control box flashes for 10 seconds,and then turns on.

| | | | |
|----------------|---|--------------------|------------|
| | Issue department: Bedding Division | Date: | 2017-05-03 |
| | Product Function instruction | Author: | Ben |
| | | No: MC232SC | |
| MC232SC | | Version: | 1.0 |
| Page 4 of 6 | | | |

1.8. Power

Connect to the 29V DC;

1.9. Pair Function

Power on, the control box enters into mode of code paring;

Press and hold the paring LED of Remote, the backlight of paring LED flashes, the backlight of remote flashes, the remote enters into mode of code paring;

The backlight of paring LED of remote stops flashing, and the paring led of control box turns off, it indicates that the code paring is successful;

If fails, repeat all the processes above;

1.10. Test for underbed light

Click button of underbed light, turns on(or turns off) the underbed light, switch the status once when click once; This function takes effect only by pressing the corresponding button on the remote.

1.11. FLAT function

Press and release the FLAT button on remote, the head and foot actuators moves to lower position(when the actuator is free, can turn off the vibration motor and turn off the indicator light when press once), stop when press any buton;

This function takes effect only by pressing the corresponding button on the remote.

1.12. ZERO G position function

Press and release ZERO G button on remote, the head and foot actuator moves to preset memory position, stop when press any button;

This function takes effect only by pressing the corresponding button on the remote.

1.13. I position function

Press and release I on remote, the head and foot actuator moves to preset memory position, stop when press any button;

| | | | |
|----------------|---|--------------------|------------|
| | Issue department: Bedding Division | Date: | 2017-05-03 |
| | Product Function instruction | Author: | Ben |
| MC232SC | | No: MC232SC | |
| | Version: | 1.0 | |
| | Page 5 of 6 | | |

This function takes effect only by pressing the corresponding button on the remote.

1.14. II position function

Press and release II on remote, the head and foot actuator moves to preset memory position, stop when press any button;

This function takes effect only by pressing the corresponding button on the remote.

FCC warning

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IC RSS warning

This device complies with Industry Canada licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radioexemptés de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

| | | | |
|----------------|---|--------------------|------------|
| | Issue department: Bedding Division | Date: | 2017-05-03 |
| | Product Function instruction | Author: | Ben |
| | | No: MC232SC | |
| MC232SC | Version: | 1.0 | |
| | Page 6 of 6 | | |

This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

ce matériel est conforme aux limites de dose d'exposition aux rayonnements, FCC / CNR-102 énoncée dans un autre environnement. cette equipment devrait être installé et exploité avec distance minimale de 20 entre le radiateur et votre corps.