

正面

快速安装指南

Realtek 瑞昱驱动
M0304322 版本 2.0

1 硬件安装

有以下两种方法安装驱动：

1. 直接将光盘插入电脑光驱。
2. 通过USB接口将光盘或USB有线网卡插入USB接口。（USB有线网卡需另购）

2 驱动安装

注意：台式机使用USB时，建议将USB有线网卡插在机箱前置USB接口（台式机前置USB接口供电不足可能会导致USB有线网卡无法正常工作，建议使用后置USB接口，效果更佳！）

1. 将光盘插入光驱。

2. 双击运行，打开光盘内的安装文件，双击“Setup.exe”运行安装程序，默认安装下一步完成。（如需安装文件请自行解压并安装驱动）

3. 安装完成后，任务栏右下角，出现REALTEK客户端管理程序，显示安装成功。

3 网络连接设置

1. 双击桌面上的网络客户端管理程序，打开网络客户端管理程序。
2. 点击左上角菜单“可用网络”，选择需要连接的网络SSID，然后点击“可用网络设置”按钮。
3. 输入网络名称，确认网络名称，点击“确定”，如下图：

4. 连接成功后，显示信号强度和连接速率，如下图：

注意：如果连接不成功，请检查网络名称是否正确，并检查网络名称是否包含特殊字符。

WiFi 发射器设置（仅：WiFi功能不支持时适用）

1. 点击桌面上的“发射器设置”按钮，如下图：
2. 在弹出的窗口中，选择“启用”，如下图：

注意：发射器设置窗口中，默认选择“启用”，请根据实际需求进行选择。

2. 双击桌面上的网络客户端管理程序，如下图：

注意：默认选择“启用”，请根据实际需求进行选择。

4. 点击“确定”选择网络名称和连接速率，如下图：

（WiFi功能不支持时，选择“禁用”）

维修条例

尊敬的客户，您好！

感谢您购买了COMFAST产品，为保障您的售后服务权益，请仔细阅读以下维修条例。

以下情况不属于免费维修服务，我公司可提供有偿维修服务，收费标准：

- 未按使用说明书安装、使用、维护、保管导致产品故障或损坏；
- 超出保修、保修期限、擅自涂改、撕毁产品条形码；
- 未经授权，擅自改动本产品的设置文件或擅自拆卸；
- 意外因素或人为导致产品损坏，如输入不合适的电压、高温、进水、机械破坏、摔坏、产品严重氧化或生锈等等；
- 客户未按说明书中由于运输、装卸导致的损坏，但不包括不可抗力、火灾、雷击等导致的产品故障或损坏；其他非产品本身设计、技术、制造、质量等问题导致的故障或损坏。

客户资料

用户名	
用户地址	
品牌型号	
MAC号	
整机地址	
整机日期	
联系电话	
邮政编码	
发票号码	

合格证

质检员: [Signature]

生产日期: [Date]

执行标准: YS 1000-2008

版权信息

声明

深圳市四海众联网络科技有限公司

版权所有，保留所有权利

本公司保留所有权利，任何单位和个人不得擅自复制、修改、传播或销售本手册内容。未经许可，不得以任何形式进行复制或传播。如有任何侵权行为，本公司保留追究法律责任的权利。

COMFAST为深圳市四海众联网络科技有限公司注册商标。本公司保留所有权利，任何单位和个人不得擅自复制、修改、传播或销售本手册内容。未经许可，不得以任何形式进行复制或传播。如有任何侵权行为，本公司保留追究法律责任的权利。

制造商：深圳市四海众联网络科技有限公司
地址：深圳市宝安区西乡街道宝安大道607-610号
服务热线：0755-81790059/81790659
网址：www.comfast.com.cn

反面

Quick Installation Guide

Realtek Driver Installation
M0304322 Version 2.0

1 Hardware Installation

Here are two methods to install the user adapter:

1. Please insert the user adapter directly into the computer's USB port.
2. Connect the USB part of the computer through the USB extension cable base. (USB extension base is sold separately)

Note: When using the desktop, it is recommended to use the USB extension cable base to connect the rear interface of the computer chassis. Most of the desktop computer's front USB interface is underpowered or unavailable, extended to the desktop, the effect is better!

1. Put the CD driver into the computer drive.

2. Open the driver folder and double click the installation file "Setup.exe". Click "Next" to finish the installation. (Note: If the installation file is a compressed package, you need to extract to install it.)

3. After finishing the installation, in the lower right corner of the taskbar, (REALTEK Client Management Software) appears, indicating the installation success.

3 Network Connection Settings

1. Double click the wireless network card management client to open the network card client management software.
2. Click on the upper menu "Available Network", select the wireless network SSID you want to connect to, and then click "Add to Profile" as shown below:
3. Enter the network key. Confirm the network key, click "OK" as shown below:

4. After the connection is successful, the signal strength and link quality are displayed, as shown below:

Note: If you do not get the IP address or receive the data packet, it may be the password input error, please re-enter the correct password to get the IP for the network with fixed IP address, you need to set the IP address.

WiFi Transmitter Settings (Block WiFi system does not support the feature)

1. Click on the management software menu (Mode) to select Block WiFi, as shown below:

2. After switching to access point mode, the SSD displays the name of the computer, as shown below:

Note: The default of the computer name is WiFiSSD.

4. Click "OK" to select the network connected to your computer, click "OK" as shown below. (WiFi system does not support the setting method in the same)

5. Set in according to your network type and select the network you are using. If the network is bound to IP address and MAC address or restricted to use by a single computer, it can not share the network. If the setting is not successful, please share the network manually (see Setting up a network share manually).

Note:

- Connect to the computer through Modem card, use the computer broadband connection to dial, here must choose "Broadband connection".
- Connect the line from the router or switch to the Internet. Here, select the name of the interface card corresponding to the local connection (usually by default).
- If the wireless network card that comes with the notebook is connected to the wireless network, select the name of the interface card of the wireless network card.
- If you use the 4G network card to access the Internet, select the interface card name of the 4G network card.

Maintenance Regulations

Dear Valued Clients,

Thank you for purchasing COMFAST products. To protect your rights and interests in after-sale service, please read the following maintenance regulations.

The following does not belong to free maintenance, our company can provide paid service, please note:

- Failure to require the installation manual, use maintenance, storage lead to product failure or damage.
- Beyond the limited warranty, the warranty period. Unauthorized alteration, tearing up the product bar code.
- Without authorization to change the settings file or inherent disassemble.
- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, water/mechanical damage, break, cut or oxidation product of various etc.
- Other non-product itself design, technology, manufacturing quality and other quality problems caused by the failure damage.

Customer Data

Name	
Address	
Model	
MAC No.	
Machine unit sales address	
Date of sale	
Post Code	
Invoice No.	

Certificate Of Qualification

Quality Inspector: [Signature]

Production Date: [Date]

Executive Standard: YS 1000-2008

Copyright Information

Statement

Shenzhen Four Seas Global Link Network Technology Co., Ltd. Company all rights reserved.

Without our official written permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or in whole, in any form or by any means (electronic, mechanical, photocopying, recording or otherwise) without the prior written permission of the copyright owner.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co., Ltd. Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee.

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co., Ltd. Company
Address: Room 007-410 To Block B, Tao JINDE Electronic Business Incubation Area, Tenglong Road, Longhua District, Shenzhen, China
Hotline: +86 755 81790059
Website: www.comfast.com.cn

黑线为刀模，红虚线为折叠线，无需印刷

<p>深圳市四海众联网络科技有限公司 Shenzhen Four Seas Global Link Network Technology</p>				<p>图纸编号</p> <p>M0304322-COMFAST通用RTL中英文说明书 保修卡 合格证V2</p>	<p>印刷颜色</p> <p>黑白印刷(正反面)</p>	<p>制图</p> <p>段志飞</p>
<p>产品型号</p> <p>通用</p>	<p>物料名称</p> <p>说明书</p>	<p>物料材质</p> <p>80g双胶纸</p>	<p>物料尺寸</p> <p>700*105mm</p>	<p>版本</p> <p>V2</p>	<p>审核</p>	<p>核准</p>
<p>客户代码</p> <p>COMFAST</p>	<p>语言</p> <p>中文</p>	<p>成品尺寸</p> <p>700*105mm</p>	<p>折叠后尺寸</p> <p>70*105mm</p>	<p>发行日期</p> <p>2018-8-6</p>		

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter