FCC ID: 2AK3Z-AAAAAD Model name: DHTRC10217G

Product description: 2.4GHz R/C AMPHIBIOUS VEHICLE

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

□ Reorient or relocate the receiving antenna.
□ Increase the separation between the equipment and receiver.
□ Connect the equipment into an outlet on a circuit different from that to which
the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help

特微高强瓦楞+250g面纸 开窗: 25C RUOY RƏTZAM NIAHRƏT 瓦楞 75 x 70 AMPHIBIOUS TERRA AMPHIBIOUS TERRA **FULLY AMPHIBIOUS, IT DRIVES ON LAND AND IN WATER!** STOP STOP FULL FUNCTION NAVIGATE OVER WATER AMPHIBIOUS TERRA AMPHIBIOUS TERRA DRIVE OVER LAND NAVIGATE OVER WATER MASTER YOUR MASTER YOUR TERRAIN

> FULLY AMPHIBIOUS, IT DRIVES ON LAND AND IN WATERI NAVIGATE OVER WATER MASTER YOUR TERRAIN AMPHIBIOUS TERRA BATTERY INSTALLATION VEHICLE ( DHTRC10217G) BATTERY INSTALLATION TRANSMITTER AND HOW TO OPERATE compartment completely by properly closing the battery cover and fastening it with the screw. Always ensure a tight pressing and holding the control sticks in opposite تحذير إ مخاطر الاختناق أجزاء صغيرة غير مناسبا WARNING:
> CHOKING HAZARD - Small parts
> not suitable for children under
> 3 years Rechargeable batteries are to be removed from the toy before being charged Rechargeable batteries are only to be charged under adult supervision.
>  Non-rechargeable batteries are not to be recharged. . Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. تَحْيَرِ ! غِر مَنْاسِةَ للأَطْقَالَ تَحْتُ مِنْ 36 شهر بمبِ وجود القطع الصغيرة. Laptop or Computer قد تخلف الأوان والمحويات عن الأشياء الطَّاهِرة بْ يَعْلَقُ يَرِجَى أَرَانَةَ التَعْلِفَ كَلَّهُ قِبْلُ اعْطَاءُ هَا اللَّعِبَّ الْمُقَاكَ . 9. Do not touch wheels or tires when they are in motion. 10. Do not collide with humans or any animals to avoid accident from occurring. يجب الاحقاظ بالتغليف بما أنه يحتوي على معلومات هامة. Take the micro USB cable that is included with this CUSTOMER INFORMATION product. Connect the USB plug to the USB port of the device that is powered ON. (For example, a • Packaging has to be kept since it contains important information. laptop or a computer) Connect the micro USB WARNING! Not suitable for children under 36 months. CHOKING HAZARD cable plug to the side port of the battery pack as Recharge cable included (Micro USB cable) | cable plug to the old illustrated. The charging red when charging. • Where applicable, remove all packaging before giving this item to your child. USE 1 X 3.7V 500MAH LI-POLY BATTERY illustrated. The charge indicator light will light up  $\bullet$  Contents may vary in style, colour, shape and decoration from images shown on package or in advertising. FCC ID: 2AK3Z-AAAAAD The toy is to be operated in water only when fully assembled in This device complies with Part 15 of **TECHNICAL DATA** the FCC Rules. Operation is subject to Charge Time 120 minutes (approx. the following two conditions: (1) 35 minutes (approx.) this device may not cause The charge indicator light of the battery harmfulinterference, and (2) this pack would turn off after charging is Run Environment Indoor / Outdoor complete. Disconnect the micro USB cable from the battery pack and the device. Keep Replace the battery pack. Ensure that the received, including interference that the micro USB cable in a safe place until Battery is installed according to the correct direction as illustrated. Ensure a tight fit.