 


INSTRUCTION MANUAL

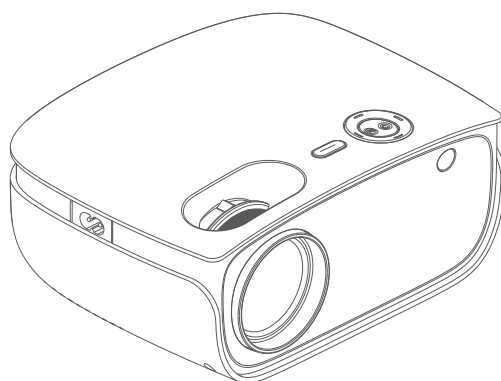

Note: As the product system is updated from time to time, the specific operation content is based on the actual situation.

Contents

Important Safeguards.....	1
Accessories List	1
Projector Overview.....	2
Specifications.....	4
Multimedia Supported Formats	4
Remote Control	5
Switching Machine Operation	6
Focus / Keystone Correction	7
Standard Setting	8
Use of the Projector	9
Multimedia.....	9
Source Settings.....	10
Menu Settings.....	11
Miracast	12
iOS Cast	13
WiFi Setting	14
System Setting	15
Projector Setting	15

Important Safeguards

1. Please read the manual carefully before operating projector. To ensure stable power supply, please use standard power cord.
2. Please use the power supply and cable indicated on the rating label. The projector should be kept away from cloths, sofas and anything that may block the ventilation scoop. Please keep the unit away from flammable and explosive materials.
3. Please do not disassemble the unit by yourself as this will invalidate the warranty service. To protect your eyes, do not stare directly at the lens when the projector is on. The projector must be kept away from water and any other liquids.
4. To prevent electric shock, please keep the projector out of the rain and away from moisture. It is recommended to switch off the projector after it has run for 6 hours non-stop. Please use the original foam and other cushioning materials when transporting the projector.
5. If the projector does not work, please contact the authorized service agent.

Accessories List

 
AV Signal Cable ×1

Remote Control ×1

Power Cable ×1


User Manual ×1

Projector Overview

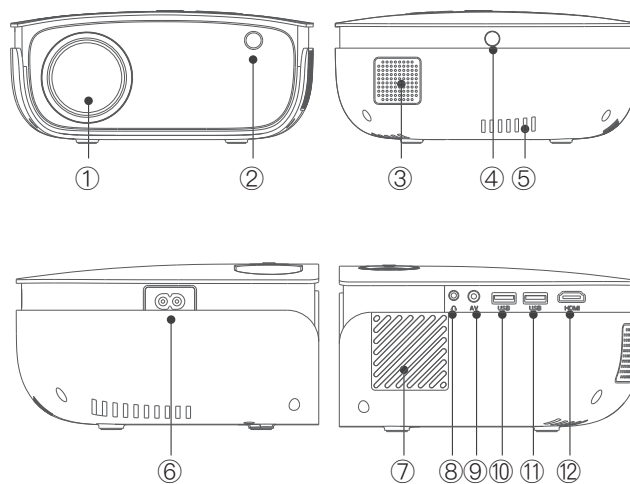

- | | |
|--------------------------|--------------------------------------|
| 1. Lens | 7. Cooling Window |
| 2. IR for Remote Control | 8. Headphone Jack |
| 3. Speaker | 9. AV Port |
| 4. IR for Remote Control | 10. USB Port |
| 5. Air Intake | 11. USB Port / Wired SyncScreen Port |
| 6. Power Input | 12. HDMI Port |

 Projector Overview

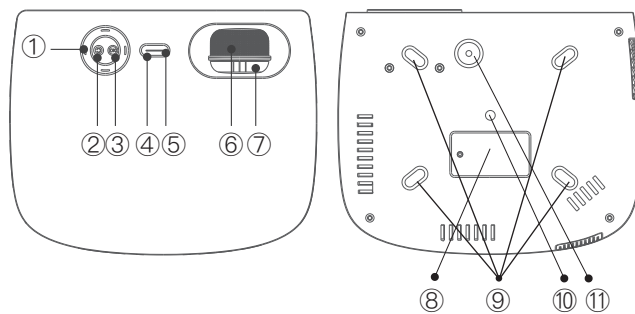

1. Arrow Keys

2. Return

3. Enter

4. Power Key

5. Power Indicator:

Standby: red

Power On: blue

6. Focusing

7. Keystone Correction

8. Bottom Label

(Tear off the bottom sticker, you can remove the bottom dust cover to clean up the dust)

9. Machine Foot Pad

10. Hole for Stand(1/4 inch)

11. Height Adjustment Machine Feet


Specifications

Model	Mini projector
Lamp	LED
Image System	LCD
Language	English, 23 languages
Resolution	1280×720, support 1080P
Input Voltage	AC100V-240V
Weight	1 KG
Working Temp	0-35°C
Input Port	HDMI / USB / AV
Output Port	Headphone
Aspect Ratio	16:9 / 4:3
Size	218×174×96mm
Operation Mode	Manual / Remote control

Multimedia Supported Formats

Image Format	BMP / JPG / PNG / JPEG
Video Format	MP4 / MKV / WMV / RMVB / RM / AVI / FLV / TRP / VOB / 3GP / DIVX / TP / TS / MPG / M2TS / F4V / DAT
Audio Format	MP3 / AAC / FLAC / MAV / WMA / M4A
File Format	TXT

 Remote Control

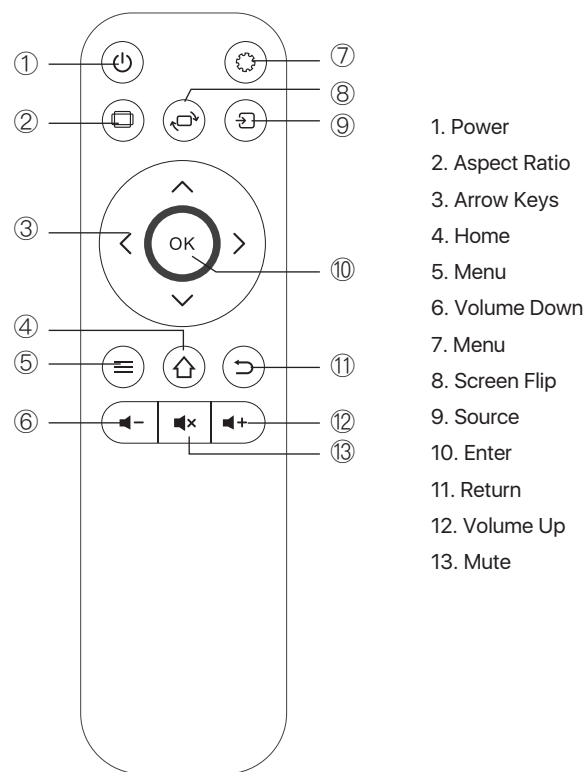

Switching Machine Operation

Power On:

Step 1: Press the power button on the body or the power button on the remote control, the indicator light will turn blue and steady.

Step 2: After 2 seconds, the projector starts to start, the image appears on the screen, and the unit enters the normal working state.

 
Step 3 : If the projector is newly installed, the image may be blurred or trapezoidal distortion when it is turned on for the first time. Please refer to the "Focus/Keystone Correction" section for calibration.

Step 4: After the image is adjusted clearly, it can be viewed normally.

Power Off:

Step 1: In the working state, press the power button of the body or the power button on the remote control to switch the projector to the standby state.

Step 2: After the projector enters the standby state, the machine is in the process of automatic heat dissipation, and the indicator light changes from blue to red.

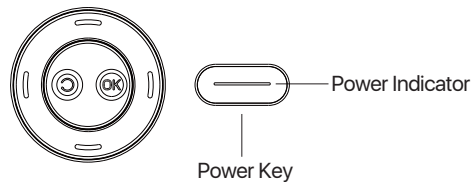

Connect the power cord to the projector before connecting the power cord to an electrical outlet.

Focus / Keystone Correction

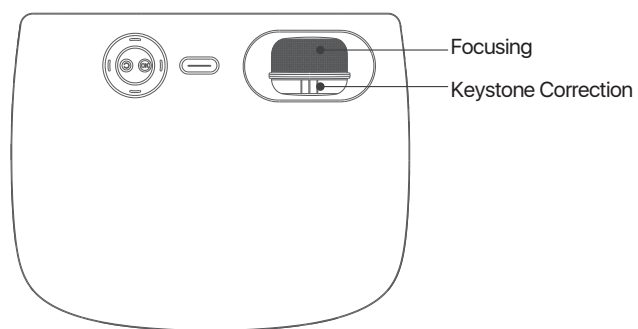 


Image Focusing

 
Place the projector lens perpendicularly to the projection screen or curtain wall, and adjust the focus dial until the image is clear, that means the image focusing is finished.

During the focusing process, you can play the programs or pick up the product menu images to match the focusing adjustment.

Keystone Correction

Please turn the trapezoidal adjustment dial until the image is displayed normally.


Note: The projector has only mechanical trapezoidal correction in the vertical direction and there is no horizontal correction. Make sure the projector is level with the projected image.



Standard Setting

Refer to the data in the table below to place the projector away from the projection screen according to the preset graphic size. When installing, place the projector on a solid, stable countertop. The airframe should be well ventilated. Do not cover or block the vents. There should be no obstructions within 30cm of the vents.

Aspect Ratio	16:9
Picture Size (inch)	Projection Distance (m)
50	1.55
70	2.17
100	3.10
120	3.72

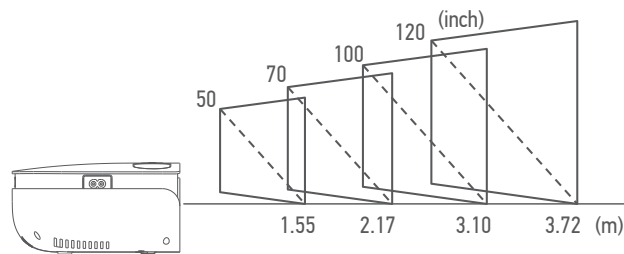 

Note: The above data is for reference only, please refer to the physical measurement.

 
 
Use of the Projector

Multimedia

Step 1: Insert the U disk into the USB port of the projector.

Step 2: Select Multimedia, and then press the OK key to enter.

Step 3: Select the file to be played.

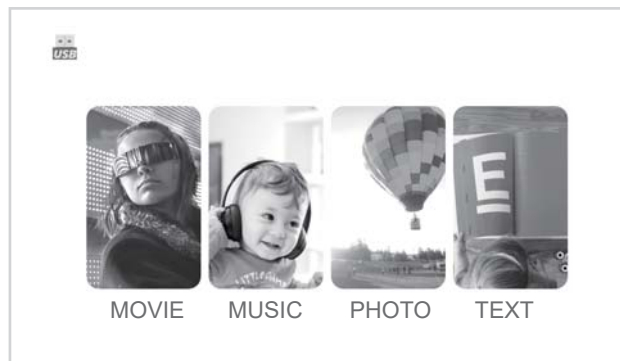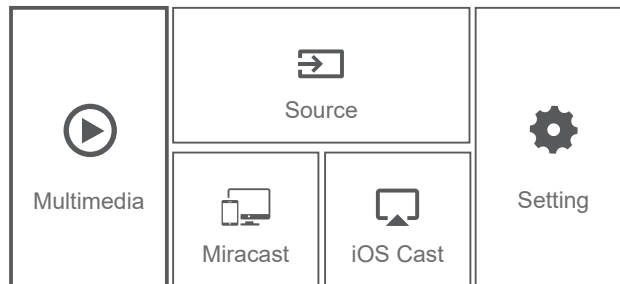



Use of the Projector

Source Settings

Step 1: Select the signal source in the main interface (or press the remote control source key);

Step 2: Press the OK key to enter the options.

  Signal Source: HDMI / AV.

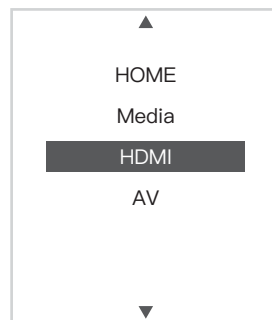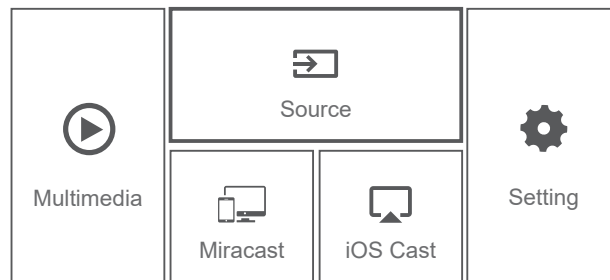


Pop-up source box

Use of the Projector

Menu Settings

Step 1: In the Multimedia interface, press the menu key of the remote control to enter the menu setting options.

 Step 2: After entering the interface, adjust the parameters as needed, and then press the "OK" key to verify.

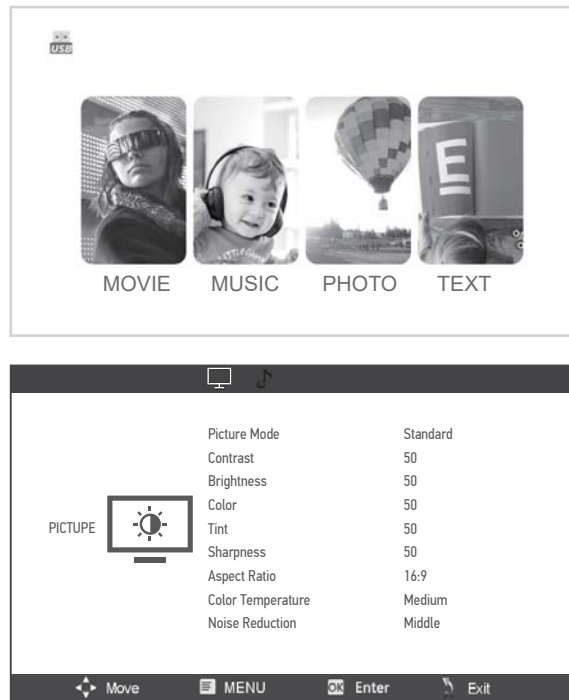

Use of the Projector

Miracast

 
Step 1: Select Miracast on the main interface.

Step 2: Turn on the Wireless Display function of the Android device.

Note: Different Android devices have different names and opening methods for the Wireless Display function. For details, please refer to the manual of the Android device you are using.

Step 3: Select the corresponding projector device name.

Note: The projector and the Android device cannot be connected to different WiFi, otherwise the corresponding projector device will not be found on the Android device.

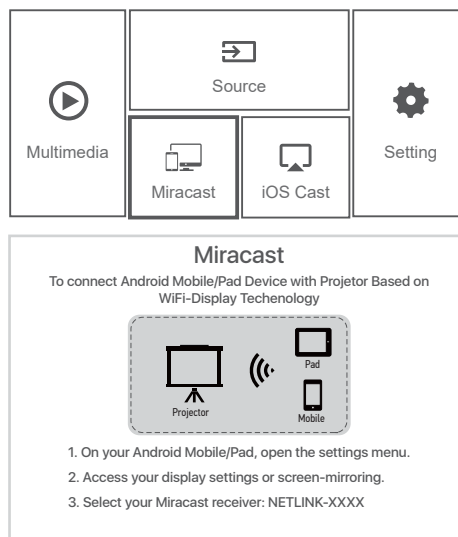

Note: The last 4 digits of the device name are randomly generated.

Use of the Projector

 
 
iOS Cast

Step 1: Select iOS Cast on the main interface.

Step 2: The iOS device and the projector must be connected to the same network, or the iOS device must be connected to the wireless access point (AP) from the projector.

Step 3: Select Screen Mirroring on the control center of the iOS device.

Step 4: Select the corresponding projector device name.

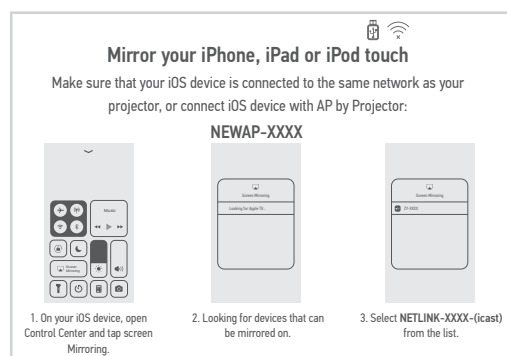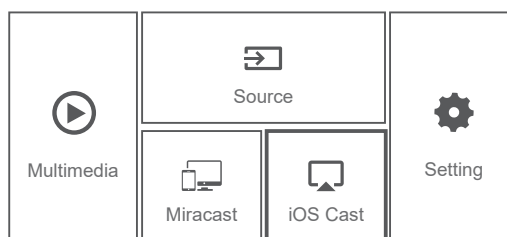

Note: The last 4 digits of the device name are randomly generated.

 
 
Use of the Projector

WiFi Setting

Step 1: Select Setting in the main interface and press OK key to enter setting interface.

Step 2: Select WiFi Setting.

Step 3: Turn on the WiFi, find the WiFi you need to connect to, enter the password through the virtual keyboard, and confirm the connection.

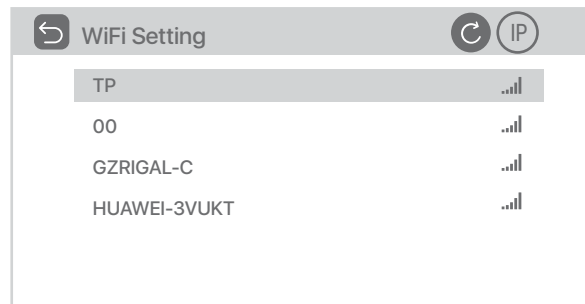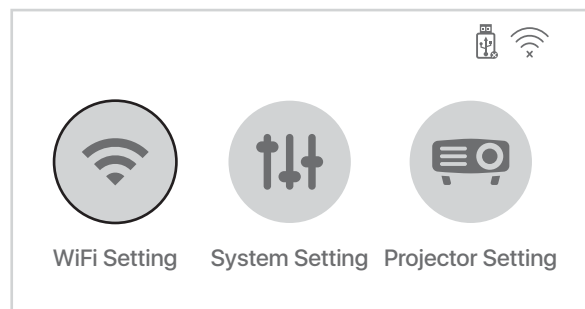

Use of the Projector

 
System Setting

Select the system setting, you can check the language and software version;

Version upgrade: local update and online update;


Local update: Insert the U Disk and follow the prompts to find the file upgrade version.

Online update: Connect to WiFi, upgrade the version according to the prompts (recommended to update from time to time) Restore factory default: Choose carefully.

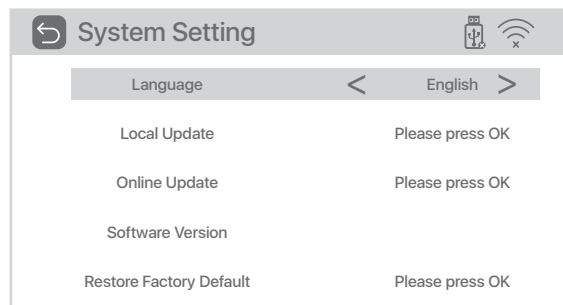

Projector Setting

 Select the projection setting and select the corresponding settings according to the installation method of the projector.

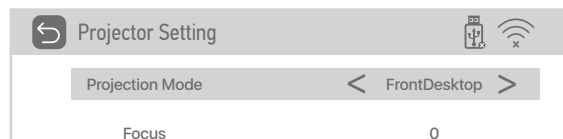

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.