soundbar

Model:SB2905



INSTRUCTION MANUAL

Please read this instruction manual carefully and keep it for future reference SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.

IMPORTANT SAFETY INSTRUCTIONS



The lightning flash with arrowhead within an equilateral triangle is intended to alter the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

CAUTION RISK OF ELECTRIC SHOCK

TO PREVENT
RISK OF ELECTRIC SHOCK

I O PREVENTI

RISK OF ELECTRIC SHOCK

DO NOT REMOVE COVER (OR BACK)

NO USER-SERVICEABLE PARTS INSIDE. REFER

SERVICING TO QUALIFIED SERVICE PROFESSIONAL



The exclamation point within an equilateral triangle is intended to alter the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Before using the unit, be sure to read all operating instruction carefully, please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

- Read these instructions All the safety and operating instructions should be read before the appliance is operated.
- 2. Keep these instructions –The safety and operating instructions should be kept for future reference.
- 3. Heed all warnings All warnings on the appliance and in operating instructions should be adhered to.
- 4. Follow all instructions All operation and use instructions should be followed.
- 5. Do not use this apparatus near water The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
- 6. Clean only with dry cloth The appliance should be cleaned only as recommended by the manufacturer.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades and a third grounding prong. The wide or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Product the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments / accessories specified by the manufacturer.
- 12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Power Sources The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
- 15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

IMPORTANT SAFETY INSTRUCTIONS

FCC Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

 
PLACEMENT AND MOUNTING

1. Placing the device on table


Ventilation

When placing the Sound Bar on an entertainment center, bookshelf or any type of enclosed space, be sure to allow space around the Sound Bar for ventilation.

If the Sound Bar is enclosed in a tight space, without ventilation, heat generated from the Sound Bar could produce a potential heat hazard.




 2.1 Mounting to a wooden wall



- A. Mark the position of the mounting screws on the wall using a pencil.
- B. Drill the supplied screws directly into the marks that you have made on the wall and leave approx. 0.3 inches in length to hook the sound bar.
- C. Put the sound bar onto the mounting screws. Make sure they are firm and stable.


2.2 Mounting to a brick wall

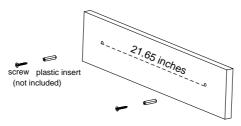


- A. Mark the position of the mounting screws on the wall using a pencil.
- B. Drill 2 holes on wall with a powerful electric drill.
- C. Insert the supplied fixing plug and hammer into the holes.
- D. Secure the supplied screws into the fixing plugs and leave approx. 0.3 inches in length to hook the sound bar.
- E. Put the sound bar onto the mounting screws. Make sure they are firm and stable.

PRODUCT OVERVIEW

 Front View



Side View

 

Top View



- 1. Speakers
- 2. LED Display
- 3. **ů**/MODE
- 4. **▶II**/EQ

- 5. Volume+ /- Button
- 6. U-DISK JACK
- 7. LINE IN JACK
- 8. DC IN Jack

GENERAL OPERATION

- 1. Connect the AC/DC adapter to the unit and wall outlet.
- 2. Long press the 0/1 button on the unit to power on the unit.
- Long press the ►II/EQ button on the unit repeatedly to switch to the desired mode.
- 4. During Playing:
- ~ Long press the VOL+/▶▶I or VOL-/ I◀◀ button on the unit repeatedly to adjust volume.
- ~ Short press ▶II/EQ button on the unit to pause.
- ~ Short press VOL+/▶▶ or VOL-/ ◄ button on the unit to skip yo next previous track.
- 5. Long press the 0/1 button on the unit to power off the unit.

USB OPERATION

Power on the unit as previously explained.

Insert USB flash drive, the unit will turn to USB mode automatically.

BLUETOOTH OPERATION


- 1. Power on the unit as previously explained.
- 2. Short press the ►II / EQ button on the unit repeatedly to switch to Bluetooth mode.
- 3. Power on the external Bluetooth enable device and enter Bluetooth mode and try searching the unit.
- 4. When " SYLVANIA SB2905 " appears, select it and make connection.
- 5. During playing:
 - ~ Short press the or ▶ button on to skip tracks.
 - ~ Short press the ► button on to pause, press it again to resume.
 - ~ Long press ►II / EQ button on the unit to switch the sound mode between Bass/ Rock/Classical/Jazz.

NOTE: The unit will be automatically connected with the last connected Bluetooth device if their Bluetooth function are activated and they are in working range.

LINE IN OPERATION

An external Audio player(such as mobile phone, MP3 player etc.) can be connected to this unit and listen through the unit's speakers.

- 1. Plug one end of the LINE IN Cable into the LINE IN jack on the unit.
- 2. Plug another end of the LINE IN Cable into the headphone jack or LINE Out jack on the external audio player.

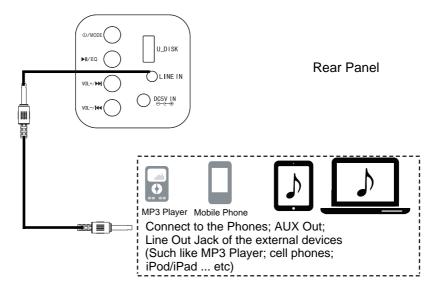

- 3. Power on the unit as previously explained.
- 4. Press the ►II / EQ button on the unit repeatedly to switch to LINE IN mode.
- 5. Power on the connected external player and start playing the music as usual.

Note: After 10 minutes of pause and no operation, the machine will automatically stand by.

TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION		
No power	The adapter is not connected	Connect the adapter to the unit and wall outlet		
	The unit is in power off mode	Long press the ひ/MODE button on the unit to power on the unit		
No sound or sound weak	Volume level in minimum position	Raise the volume level by pressing the + Button on the unit		
	The paired/connected device is not in playback mode	Play music/movie in the paired/ connected device as usual and make sure the volume level of it is in high level.		
	Input source incorrect	Long press the ►II /EQ button on the unit or on remote control to switch to desired mode		
Sound distortion/rattle	Volume level too high	Reduce the volume level by pressing the - Button on the top of the unit		
		Reduce the volume level of the paired/connected device.		
Bluetooth reception failure	The external device is too far from the unit	Put the external BT device close to the unit.		
	Have not paired	Pair the unit with the BT Device as the procedures stated in this manual.		

SPECIFICATIONS

Power input	AC100~240V, 50/60Hz
Power output	DC5V === 2A ⊝- ⑥ -⊕
Audio output	2x5W
Bluetooth effective working range in open area	up to 32 feet

PACKAGES

1x User Manual

1x Main Unit

1x Power Adapter

1x LINE IN Cable (1.2M)

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

For service assistance and product information, please call: 1-800-968-9853. Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

LIMITED PRODUCT WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

Should you have any problem with this product, please and it is highly recommended to visit our website at www.curtisint.com before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 90 days on parts and 90 days on labor. If you originally purchased your product more than 90 days ago, a repair fee may apply.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper.

EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or guarantees including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statue is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

- 1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
- 2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
- 3. The warranty does not cover cabinets and accessories.
- 4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
- 5. The defective product should be mailed to:

Canada C.I. Service Dept. 7045 Beckett Drive, Unit 15 Mississauga, ON L5S 2A3 U.S.A
Curtis International Ltd
c/o Lotus International Company
6880 Commerce Blvd.
Canton MI 48187

For service assistance and product information, please call: 1-800-968-9853.

If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts which have become defective.

To begin the **warranty repair process**, please note that you **MUST** obtain a **return authorization number prior** to returning your product for warranty based support. This can be placed under the 1-800-968-9853 contact line.

Model No.	 Date Purchased	 Serial No.	