


Clever Canvas Manual

Produce by Ugoos
Solution by Adcasting

Catalog

-
- 01 | About Clever Canvas
 - 02 | Accessories
 - 03 | Product
 - 04 | Operation
 - 05 | App Installation
 - 06 | Clever Canvas Registration
 - 10 | Clever Canvas Features
 - 26 | Q & A
 - 27 | Support
 - 28 | Warranty & Returns
-

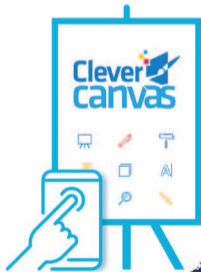

01 About Clever Canvas

Innovative Retail Advertising Solution

Because of the merit to deliver the message easily to inform customers on each occasion, AD Board substitutes banners and posters and establishes itself as a Necessity of retail shops. Now meet Smart Canvas “Smart Evolution of AD Board” .

Now you can draw eye-catching message for customers anytime, anywhere, super easily in no time using your smart phone with our incredible Drawing App. With just click of button, your message will be transferred and shown on Smart Canvas with the splendid effect.

02 Accessories

Your order has been carefully packaged and inspected. The following

accessories should be included in your package. Please inspect the contents of the package to ensure that you have received all items and that nothing has been damaged. If you discover a problem, please contact us immediately for assistance.

Name	Clever Canvas	Canvas Cube
Canvas Machine	1 pcs	1 pcs
Power Adapter	1 pcs	1 pcs
Frame	1 pcs	Null
HDMI Cable	Null	1 pcs

03 Product


Parameters:

Name	Clever Canvas	Canvas Cube
Screen Size	27" or 32" Full HD Display	Null
Processor(CPU)	RK3188 Quad Core A9 1.6GHz	Quad Core ARM Cortex-A53 up to 2.0GHZ
RAM	2GB DDR3	1GB DDR3
ROM	8GB NAND Flash	
OS	Andriod 4.4 and above	
Power Supply	DC 24V,12V,9V(Optional) ,2A or 3A	DC 5V/2.5A 3.5mm DC-In
Video Format	AVI/RM/RMVB/MKV/WMV/MOV/MP4/WEBM/DAT/VCD/VOB(DVD format)/MPEG/MPG/FLV/ASF/TS/TP/3GP etc.	
Audio Format	MP3/WMA/WMV/APE/OGG/FLAC/AAC etc.	
Network	2.4GHz WiFi 802.11 b/g/n,Support LAN 100M/1000M Base-T	

04 Operation

Start Device:

Connect **Clever Canvas/Canvas Cube** by Power Adapter

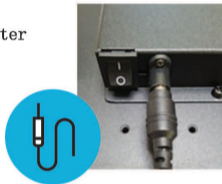

05 App Installation

Please download “CleverCanvas” APP on APPStore.

06 Clever Canvas Registration

For iOS



step 1
Start
"Clever Canvas"



step 2
Click "Menu"



step 3
Click "Canvas Registration"



step 4
Click on the "Settings"



step 5
Select EasyWriter
canvas that you
want to register.
Ex)ew-noreg-xxxxxxxx-xx



step 6
Connect by
entering a password.
Initial
password: 00000000



step 7
When the connection
is complete double-click
the Home button



step 8
Click on the Easy
Writer screen





step 9

Click on the "Menu"



step 10

Click on the
"Canvas Registration"



step 11

Swipe to the left to
access the canvas.



step 12

Click on the "Register"



step 13

Set a new password.
(Be at least 8 characters but no
more than 15 characters)

ex) 12345678



step 14

Click on the "Register" button.



step 15

If the registration is successful,
Easy Writer canvas will automatically
reboot.

For Android



step 1

Run the "Clever Canvas"



step 2

Click on the "Menu"



step 3

Click on the "Canvas Registration"



step 4

Select Clever Canvas that you want to register.



step 5

Click on the "Register"



step 6

Please enter the Canvas name and Password.



step 7

Please re-enter password.



step 8

If the registration is successful, Clever Canvas will automatically reboot.

■ Clever Canvas's SSID description:


SSID	c	c	-	n	o	r	e	g	-	A	B	C	D	E	F	G	H	I	-	1	4
CODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21

Code	Item	Type	Remark
1 2	Product abbreviations	Text	cc: Clever Canvas
4 ~ 8	Registration status	Text	noreg: generic norel: registered
10 ~ 18	Serial NO	Text NO	Clever Canvas only serial NO
20 21	Version	NO	Clever Canvas app version NO

07 Clever Canvas Features

01 | Main Menu


■ Menu Description

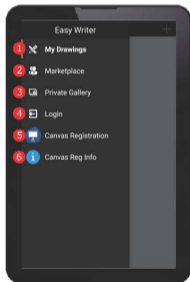


- 1 My Drawings**
: Saved slide list.
- 2 Marketplace**
: Download fonts, stickers, backgrounds, etc.
- 3 Private Gallery**
: Slides sharing
(user account required)
- 4 Login**
: Private Gallery User Login
- 5 Canvas Registration**
: Register a Clever Canvas set-top box or monitors.
- 6 Canvas Registration**
: Register a Clever Canvas set-top box or monitors.

02 | Main Screen

■ Main-screen Description

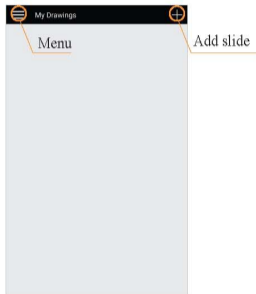

- Press and hold the slide to the transfer and delete menu appears at the bottom of the screen.


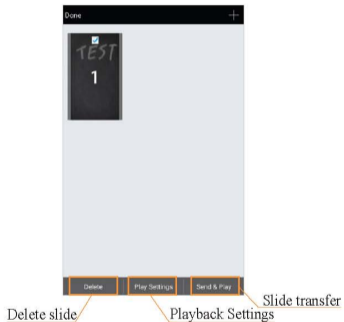


03 | Marketplace

Marketplace


Can be used to download a variety of content, Animation stickers, background.

- Category
 - Drawings
 - Fonts
 - Animated
 - Stickers
 - Shapas
 - BG

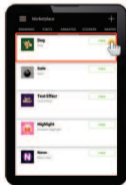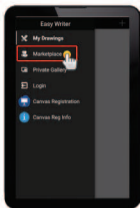


Step 1

Select the content you want to download.

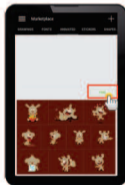

Step 2

Click the Download button.

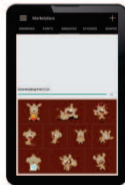


Step 3

When the download is complete, you can view and use in slide creation screen.

04 | Features


■ Background

- You can set the background color of the slide or image.

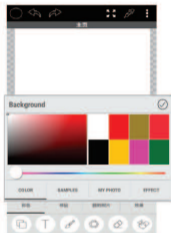

- **BG Color**

Set the background to the selected color.

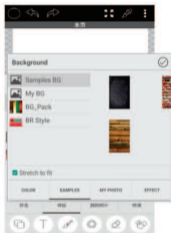


- **Samples**

Use an image as a background.



- **My Photo**

Set a photo as a background image stored in the album

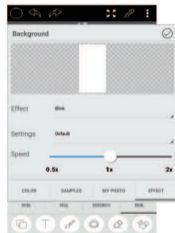

- **Effects**

Set the effect of the background

- **Effects types**

-None -Blink -Bounce
-Rotate -Rainbow

■ Text

- You can add text, apply different fonts and colors.



• Settings

Enter the text and set the font and size.



• Color

Setup text color



• Edge

Change the font size and border color.



• Effets

Set the effect to the text.

• Effects types

-None -Blink -Bounce
-Rotate -Rainbow

■ Brushes

- Select the brush you can draw freely.




• Settings (1)

Set the brush shape and thickness and transparency



• Settings (2)

Various types of brushes, such as a star can be used.

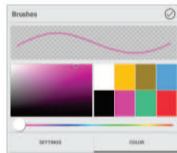


• Color

Set the color of the brush


■ Stickers

- A variety of stickers available.
- Available for photos stored in an album

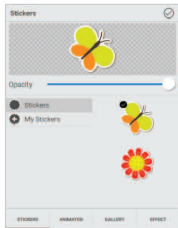

• Stickers

Can use the default stickers and stickers downloaded from Marketplace.

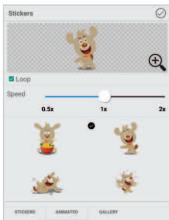


• Animated

Can use the animated stickers. Set the playback speed of the animated stickers and repeat.



• Gallery

Can use the images stored in the album.

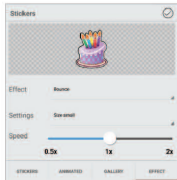

• Effects

 
Set the effect of the stickers

• Effects types

-None -Blink -Bounce
-Rotate -Rainbow

Eraser


- Erase the contents pictured with a brush.
- Backgrounds and stickers can not be erased with the eraser.




- Size
Set the size of the eraser.
(The circular shape of the eraser)

Shape

- Can be used to add shapes to your slides.
- Set the color and the borders of the shape

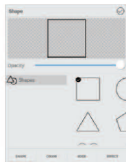

- Settings
Set the shape and transparency

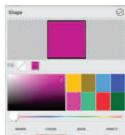

- Color
Set the color in the drawing.





- Edge
Set the border line color and thickness.



- Effect
Set the effect of the shape.
 - Effects types
 - None -Blink -Bounce
 - Rotate -Rainbow

05 | Make a Slide

■ Add slides

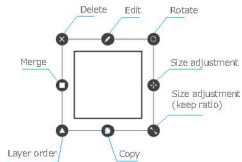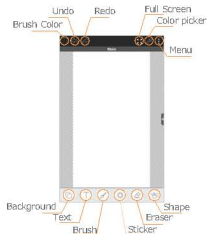


Step 1

Click the Add slide button [+]



Step 2


Select the display ratio and click the [OK] button.
• Normal Monitor = 16: 9
• 24 * Clever Canvas = 16: 1 0

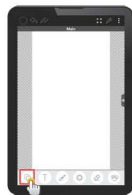

Step 3

Click the background icon.

■ Select background / Add text

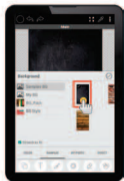

Step 4

Select a background image



Step 5

Click the Text menu.



Step 6

Enter the text and resize.

■ Add text



Step 7

Click the "Color" menu.



Step 8

Change the font color and click [✓].



Step 9

Drag the text to adjust the size to move.

■ Add animation sticker



Step 10

Click the sticker menu.



Step 11

Click the Animated



Step 12

Select the animated stickers,
and click [✓].

■ Save slide



Step 13

Stickers can resize or
move around using the menu.



Step 14

Click the Save button
in the menu.



Step 15

Enter a name for the slide
and click the Save button.

Preview



Step 16

On the menu, click the Play.



Step 17

Set the slide duration, effects and click [✓].



Step 18

 
Click the "Home" menu after confirming the preview

Send Slide



Step 19

Pressing back button(◀) should go to the Home screen



Step 20

Press and hold the slider appears at the bottom of the slide menu.



Step 21

Click the [Send & Play] menu and the slide is sent.

■ Playing Effect Description

1. Still

- Play slide is stopped as in the image



2. Redraw

- Played in create sequence



3. Blink

- Content is shown blinking.



4. Bounce

- The effect of the reduction, enlargement, etc.



5. Rotate

- Automatically rotating slide play



6. Rainbow

- Change and play with color slides of rainbow colors



08 Q & A



How to fix not registered on Clever Canvas

1. Terminate the Clever Canvas app.
Open the WI-FI settings on the device
- Settings → Wireless & networks → Wi-Fi
3. Connect to the Clever Canvas.
- Access Point of Clever Canvas : ex) ew-noreg-ABCDEFGH-15
- The default password is '00000000 '
4. Run the Clever Canvas app.
5. Please try again to register.

09 Support

If you need any help, please feel free to contact our tech support team to check the problem before sending the device back.

Email: support@clevercanvas.com

Web: www.clevercanvas.com or www.clevercanvas.cn

Tel: 0755-25472852 or 13480825850



10 Warranty & Returns

Clever Canvas warrants this product against defect in material or workmanship for 1 year from the date for purchase. This warranty becomes invalid if the factory-supplied serial number or “warranty void” sticker has been removed or altered on the product.

This warranty does not cover:

- A) Cosmetic damage or damage due to acts of God.
- B) Accident, misuse, abuse, negligence of modification of any part of the product.
- C) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than Clever Canvas.
- D) Products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL CLEVER CANVAS'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCTS, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION.

Clever Canvas makes no warranty or representation, expressed, implied, or statutory, with respect to it's products, contents or use of this documentation and all accompanying software and specifically disclaims it's quality, performance, merchantability, or fitness for any particular purpose. Clever Canvas reserves the right to revise or update it's product, software or documentation without obligation to notify any individual entity

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

***RF warning for Mobile device:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.