 


REMOTE CONTROL

WALLSWITCHBATCONT

Part	Description	Qty
A	Remote Control	1
B	Cover	1

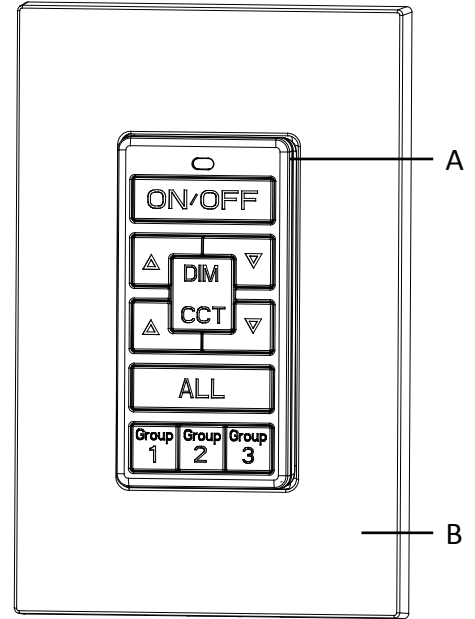


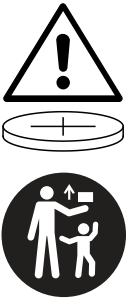 
For warranty coverage, please register at www.ledvanceUS.com

⚠ WARNING

Please Read All Instructions Before Attempting Installation

- Provided with one CR2032 battery (3V).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Ensure the batteries are installed with the correct polarity (+ and -).

-  **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN.**
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Non-rechargeable batteries are not to be recharged.
- Even used batteries may cause severe injury or death.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Call a local poison control center for treatment information.

 


KEEP OUT OF REACH OF CHILDREN! This remote contains a button cell battery which can result in severe injury, internal burns, hemorrhaging or death if ingested or placed in the body. In the event of ingestion or placement of the battery inside the body (ears, nose, mouth, etc.), seek immediate medical attention. For further guidance contact the National Battery Ingestion Hotline at 800-498-8666.

Preparation:

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts..

TOOLS REQUIRED (not supplied)



Screwdriver



Small Screwdriver



Safety Goggles



Hammer

 


Power Drill



Pencil

CONTENT



AA



BB



CC



DD



EE



FF

Part	Description	Qty
AA	Back plate	1
BB	Plastic anchors	2
CC	Wood screws	2
DD	CR2032	1
EE	Battery cover screw	1
FF	Mounting Screws	2

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

FCC Radiation Exposure Statement:

 
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

FCC Supplier's Declaration of Conformity:
47 CFR § 2.1077 Compliance Information
Responsible Party: LEDVANCE LLC
1100 Tyrone Pike Versailles, KY 40383,
USA 1-800-544-4828
Unique Identifier: 61157

Installation


1. Removing the installation back plate

Remove the back plate (AA) from the cover (B)

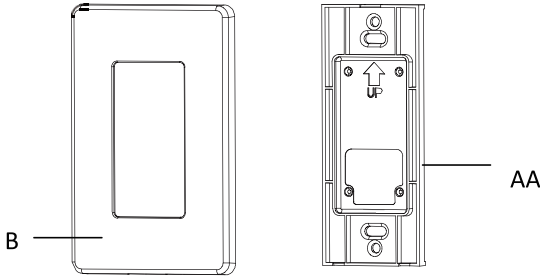


2. Installing the back plate

 Position the back plate (AA) in the desired location. Utilize the holes on the back plate (AA) to mark the location for the wall anchors (BB).

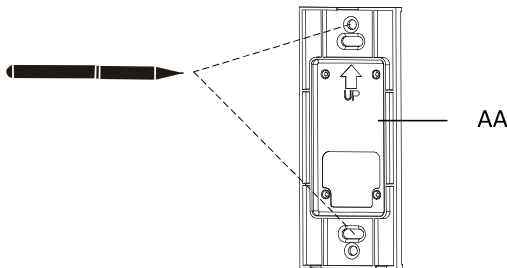


3. Drilling the holes

 Use a power drill to pierce two holes in the marked locations and insert the wall anchors (BB).

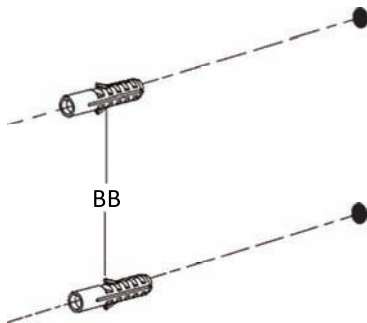

4. Attaching the backplate

 
Align the back plate (AA) holes with the wall anchors (BB) and insert the screws (CC) using a screwdriver.

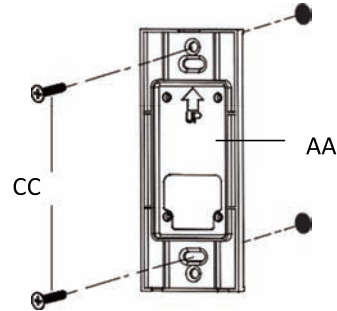

NOTE: The back plate (AA) must be installed with the direction of arrow.

5. Installing the cover

 
Install the cover (B) to the back plate (AA)

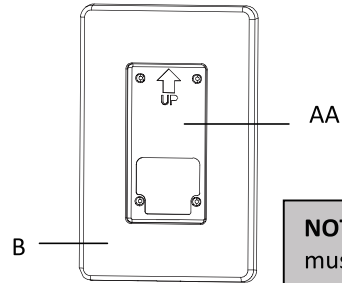

NOTE: The cover (B) must be installed in the correct direction.

6. Putting the remote control

 Put the remote control (A) on the back plate (AA) in the middle of the cover (B).

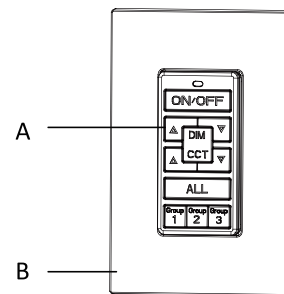

NOTE: Remove the battery pull tab.

Remote operation

 
TapSync remotes make managing individual retrofits or groups a breeze. With a 100ft control range, one remote commands all paired retrofits within its reach. Each retrofit acts as a signal repeater, creating a control network within 42ft. Positioning retrofits strategically ensures unlimited remote control range, as long as one operates as a relay.

1. Remote Control Button Configurations

On / Off: Press this button to turn all connected lights on & off.

DIM: Press the left and right sides of the dimming button to adjust the brightness. **CCT:** Press this button to rotate through 2700K , 3000K , 3500K , 4000K and 5000K. **ALL:** Press this button to control all groups.

Select Group: Press the group number before pressing function buttons to control the lights paired to the specific group.

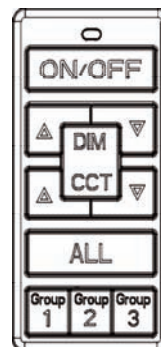

2. Operating Instructions

Pairing Fixtures with remote

- Make sure the fixtures are turned on.
- Turns on/off wall switch 3times at normal speed,all units connected to the wall switch will start blinking to show it's ready to pair or press and hold the button on one of the fixtures for about 3 seconds. The fixture will start blinking to show it's ready to pair.
- On the remote, press and hold the group button you want to pair the fixtures with.
- The fixtures and remote should now be paired. If the fixtures are already in the same group, just press the button on one unit to pair them all to the remote once one is paired

Selecting a Group or All Groups Together

Controlling Individual Groups:

- Press the number of the group you want to control. The fixtures in that group will blink once.
- Use the remote to turn them on/off, dim, or change the color temperature.

Controlling Multiple Groups:

- Press the "ALL" button on the remote to control all groups together. All fixtures connected to the remote group will blink once.
- Use the remote to turn them on/off, dim, or change the color temperature for all groups at once.

Adding Products to a Group

- To add a new fixture to a group, press and hold the button on the fixture for about 3 seconds.
- The fixture will pulse to indicate it's ready to pair.
- Press and hold the desired group on the remote for 3 seconds.
- The fixture will blink to show that the pairing was successful.

Unpairing Fixtures from Remote or Groups:

Using the Remote:

- Press and HOLD the group number you want to unpair for 4 seconds.
- Press the ON/OFF button.
- The fixtures will pulse three times to indicate they are ready for the next command. If they don't receive a new command, they will group together automatically

Using the Wall Switch:

- Turn the wall switch ON/OFF three times at a normal speed.
- All units connected to the wall switch will pulse three times to indicate they are unpaired.

For Individual Fixtures:

- Press and hold the fixture switch for 6 seconds.
- The fixtures will pulse three times to indicate they are ready for the next command.

3. Pairing Two Remote Control Together

Remote control and remote control pairing method:

- First long press and hold the switch button of remote control #1, then press and hold any group of keys of remote control #2 for 2 seconds, the remote control pairing is successful, the information of remote control #1 and remote control #2 is the same.
- After successful pairing, the time interval for switching the remote control in turn should be 6 seconds.

Unpairing remote control and remote control:

 
Long press the "ALL" button on the remote control for 6 seconds to unpair.

Battery Installation / Replacement

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts..

1. Accessing the Battery

Loosen the battery cover screw (EE) using a small screwdriver .
Slide the battery cover off of the back of the remote control (A)
to expose the battery compartment and install or replace the CR2032 battery (DD).

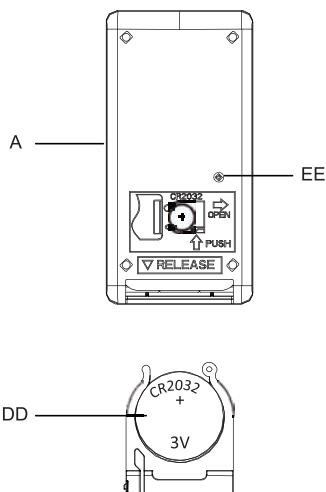

NOTE: Remove the battery cover to replace the battery. Follow the correct polarity.
Remote only use CR2032 battery.

LIMITED WARRANTY

5 YEAR LIMITED WARRANTY: LEDVANCE warrants the Product to be free from defects in material and workmanship from date of purchase for the specified warranty period when used as directed. Failure to comply with Product warnings and instructions shall void the warranty. This warranty does not cover Product subject to accident, neglect, abuse, misuse, or acts of God, If Product fails to operate according to the warranty, return Product to place of purchase with proof of purchase date and LEDVANCE will replace with the same or similar Product free. LABOR IS NOT INCLUDED. LEDVANCE reserves the sole right to examine and determine whether the Product is defective. For additional information, contact 1-800 LIGHT- BULB(1-800-544-4828);Email: lightbulb@ledvance.com.THIS IS THE EXCLUSIVE REMEDY AVAILABLE. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS EXPRESSLY EXCLUDED. SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR PROVINCE. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTY OF MERCHANTABILITY OR FITNESS OF USE, WHICH ARE HEREBY EXCLUDED. IF UNDER APPLICABLE STATE LAW IMPLIED WARRANTIES MAY NOT VALIDLY BE DISCLAIMED OR EXCLUDED, THE DURATION IS LIMITED TO THE SPECIFIED WARRANTY PERIOD.