尺寸:105 * 148 mm 材质:100g书纸 工艺:折页 双面黑白印刷


公差: ±1.5mm


Mobifice

2.4G Wireless Keyboard & **Mouse Combo**

User Manual

K303B

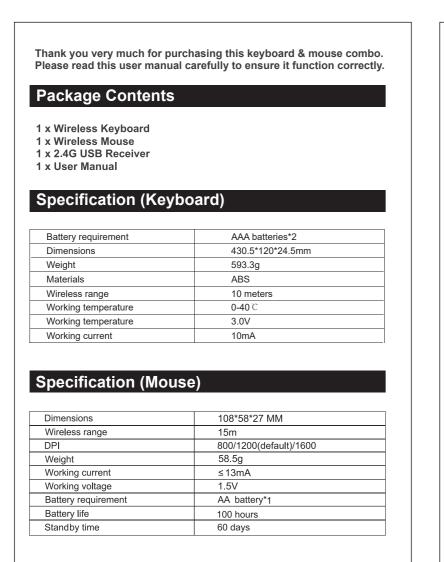

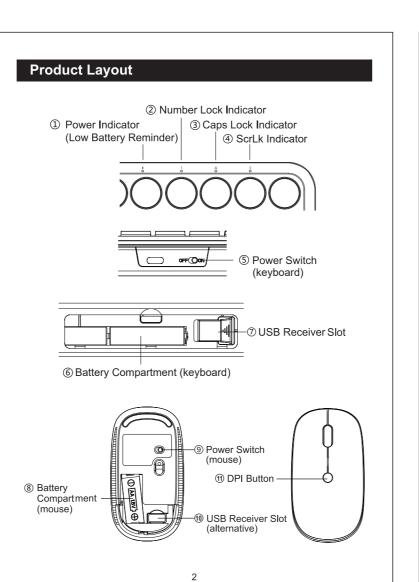

1.	Power Indicator (keyboard): Stay red for 3 seconds and go off after
	power on. Flash red when the battery goes out.
2.	Num Lock Indicator: Stay green when the num pad is unlocked.
3.	Caps Lock Indicator: Stay green when the caps lock is activated.
4.	Scroll Lock Indicator: Stay green when the scroll lock is activated.
5.	Power Switch (keyboard): To turn on the keyboard, please pull the
	power switch to the 'ON' side.
6.	Battery Compartment (keyboard): Align 2 AAA batteries properly into
	the compartment according to their positive and negative terminals.
7.	USB Receiver Slot (keyboard): A built-in USB nano receiver can be
	found here when you use your keyboard for the first time.
8.	Power Switch (mouse): To turn on the mouse, please pull the power
	switch to the 'ON' side.
9.	Battery Compartment (mouse): Open the lid of the battery compart-
	ment. Install an AA battery properly into the compartment according to
	their positive and negative terminals.
0.	USB Receiver Slot (mouse): The USB receiver can also be stored in
	this alternative slot.
1.	DPI Button: This middle click is for DPI adjustment (800/1200/1600).

Keys and Functions

Key	Functions	Key	Functions
Fn	Fn Lock	÷	Brightness Decrease
⊹	Brightness Increase	밂	Mission Control
N	Last Track	DII	Play/Pause
DI	Next Track	Ц×	Mute
(۲)	Volume Decrease	√ ")	Volume Increase

	Key	Functions	Key	Functions
	٩	Search		Switch between Apps
	#	Change the Language	8	Print
		Calculator (Windows only)	Q.	Copy (Windows only)
	짙	Paste (Windows only)		Screen Lock
			Search Change the Language Calculator (Windows only)	Q Search □

System Requirements

Windows / Mac OS

Operating Steps

- 1. Take your keyboard & mouse combo out of the case.
- 2. Open the lid of the battery compartment. Align batteries properly into the battery case according to their positive and negative terminals.
- 3. Take the USB receiver out from the receiver slot on your keyboard.
- 4. Plug the USB receiver into the USB port on your device. Press any key to start using the keyboard & mouse.

Troubleshooting Steps

When your keyboard & mouse combo cannot function properly, please check the following steps:

- 1. Check if batteries are out of power.
- 2. Check if batteries align correctly according to their negative and positive terminals in the battery compartment.
- 3. Check if the USB receiver is plugged into the USB port and the USB port
- 4. Try to reset the USB receiver by following these instructions. The USB receiver needs to pair with the keyboard and mouse separately. You can either pair your keyboard or mouse first.

To Pair the Keyboard

- 1. Turn on the keyboard, and long-press ESC and Q together to enter the Pairing Mode. The battery indicator on the keyboard will flash
- 2. Insert the 2.4G USB receiver into your device. Place your keyboard close to the USB receiver.
- 3. Once paired, the battery indicator will go out.
- 4. If the pairing fails, please unplug the receiver, turn off your keyboard, and try to pair again starting from step 1.

To Pair the Mouse

- 1. Turn on the mouse. Press and hold the left button and right button together for 3 seconds to enter the Pairing Mode. The indicator light on the top of the mouse will flash red.
- 2. Insert the 2.4G USB receiver into your device. Place your mouse close to the USB receiver. The receiver will pair with your mouse
- 3. If the pairing fails, please unplug the receiver, turn off your mouse, and try to pair again starting from step 1.

Features

- 1. The keyboard & mouse are both activated with one plug-and-play USB receiver. It is stored in the receiver slot on the back of the keyboard. Keeping this USB receiver inserted into your device will not cause any damage to it. You can also store the USB receiver inside the mouse.
- 2. The keyboard & mouse will enter into the sleep mode after not being used for 30 minutes to save energy. Click any key to reactivate them. It is suggested that you take batteries out of your keyboard & mouse if they are not in use for a long time.

Safety Instructions

- △ Warning: Fire, electric shock, damage to keyboard device could occur if the following instructions are not obeyed
- Danger x Warning △Note
- X1. Away from edge tool
- 2. Away from microwave radiation source
- **x** 3. Do not place heavy objects on this product
- **x** 4. No shocking and bending
- △5. Away from oil, chemical, or organic solvents



eVatmaster Consuling Gmbh 60325 Frankfurt am Main, Germany

EVATOST CONSULTING LTD UK REP Suite 11, First Floor, Moy Road Business

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by the party responsible for compliance may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.