

Rugged Speaker

Model: 21YX48BK
21YX48BLU
21YX48RD


PRODUCT GUIDE

FCC ID: 2AKI8-BLTSP


Ver.01

What's in box

 
Rugged speaker x1

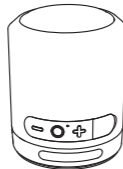

30cm Type C charging cable x1

 

Manual x1




Specification

Bluetooth version: V5.1
Product size: 93.5mm(H) X 75.5mm(W)
Pairing name: WIRELESS SPEAKER
Speaker diameter: 52mm
Microphone_Sensitivity: -42 ± 3dB at 1mw 1kHz
Operating range: 10m
Battery capacity of earbuds: 1200mAh
Working hour: upper than 10 hours
Charging time: about 3 hrs
Bluetooth profile:HFP A2DP HSP AVRCP


Warning: Risk of fire, burns and explosion, Do not open, crush, heat above 45°C or incinerate.

Produced for Walmart inc.
Bentoville. AR72716
1-888-516-2630
Website: <https://www.walmart.com/>




Power on/off

Power on: press and hold for 2s until you hear the 'power on' prompt voice.



 
Power off: press and hold for 2s until you hear the 'power off' prompt voice and LED light off.

In pairing mode but not connected beyond 5 mins, the Rugged speaker will power off automatically.



Bluetooth pairing


First press and hold for 2s until you hear the 'power on' prompt voice, the Blue LED will come on and blink. This means Rugged speaker is in pairing mode, make sure Bluetooth is enabled on your audio source and in a few moments, pairing name 'WIRELESS SPEAKER' will appear on your list, then press it to connect, the LED will flash blue every 5 seconds which means you are paired.

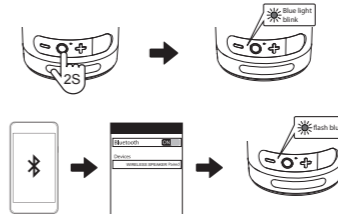

(Conveniently, From now on, when you turn on Rugged speaker it will automatically search for the last Bluetooth device it was paired with and reconnected)


WIRELESS STEREO PAIRING

 Let the two speakers into pairing mode, short press one speaker's MFB button, wait a moment, they will paired together, there is 'tone' voice remind.

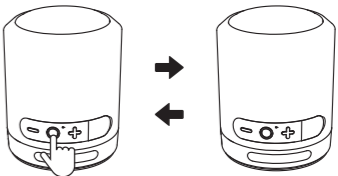


Play music

Press and hold to adjust previous/ next song.




Previous song Next song

Play/pause music :Single click




Volume+ &-: Single click



Volume - Volume +


Phone call

Answer & hang up :




Single click

Reject a call



Press & hold for 1s

 
Volume+ &-: Single click



Volume - Volume +

Charging

Rugged speaker comes with a lithium-ion battery. For best result, fully charge Rugged speaker before use. (recommended output of charging device is 1A) To charge, plug the TYPE C charging cable into Rugged speaker and plug the standard USB connector into your power source (If power source is Laptop, Desktop, much more charging time (5-6 hours) will be needed) While charging the LED solid Red, fully charged, light off.

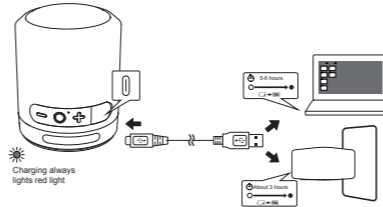

Charging always lights red light

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules, these limits are designed to provide reasonable protection against harmful interference in a residential installation, this equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. May cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Trouble Shooting and Common Situations

Rugged Speaker cannot power on
Battery drain, please charge the device for 30 minutes, and then powering on.

Smart phone cannot search Bluetooth Rugged Speaker

1. Make sure the Rugged Speaker is in pairing mode (Blue light blink)
2. Delete pairing list in smart phone and searching WIRELESS SPEAKER again.
3. If it still cannot be found, please restart smart phone and Rugged Speaker again.

Rugged Speaker will be disconnected from time to time

1. The battery drain.
2. The Rugged Speaker is beyond the communication range(10m).

No sound on talking mode

1. Confirmed the Rugged Speaker connected to earpiece mode on talking.
2. Try to volume up Rugged Speaker or smart phone.

No sound with music playing

1. Try to volume up Speaker or smart phone.
2. Rugged Speaker disconnected with smart phone, please reconnected again.

Cannot charger for Rugged Speaker

1. The charger cable connected not well.
2. Charger line was damaged.