

材质: 105g 双铜 双面印刷 /白底黑字
 展开尺寸: 501.2*50 折后: 71.6*50

<h3>Phone Controls</h3> <ul style="list-style-type: none"> X1 Click Answer X1 Click Hangup Press & Hold Incoming call, Decline X1 Click Volume down X1 Click Volume up 	<h3>Charging</h3>	<h3>Charging</h3> <ul style="list-style-type: none"> Low battery alert red light flashing charging red light on Full charge light off 	<h3>Package Contents</h3>	<h3>Product Information</h3> <ol style="list-style-type: none"> 1) Product Name: ONN Bluetooth Headset With Built-in MIC 2) Pairing Name: Onn Headset 3) Speaker Rated Power Input: 3mW 4) Speaker Maximum Input Power: 10mW 5) Loudspeaker Diameter: Ø10mm 6) Speaker Impedance: 16Ω ± 15% 7) Sensitivity: 115 ± 3dB 8) Charging Cable: 0.3M 	<h3>Troubleshooting</h3> <ul style="list-style-type: none"> I cannot turn on my ear buds <ul style="list-style-type: none"> Ensure earbuds are fully charged before turning it on. My mobile device is unable to find the Bluetooth earbuds <ul style="list-style-type: none"> Make sure that the earbuds are in pairing mode (blue/red indicator light flashing). Remove "Onn Headset" from Bluetooth setting list and set up again. If still no search found, please restart the headset and phone, and try again. After successfully pairing, earbuds disconnect <ul style="list-style-type: none"> Check the battery level and recharge if low. Ensure earbuds are within 30ft of mobile device and free of disruptions. The connection may be affected by obstructions such as walls or other electronic devices. Try to move closer to the device you are connected to. When answering a call, I cannot hear anything <ul style="list-style-type: none"> Ensure the mobile device is connected to earbuds and not on speakerphone mode. Increase the volume on your mobile device. There is no sound when listening to music <ul style="list-style-type: none"> Increase the volume on your mobile device. Reconnect the earbuds to your mobile device. Check if the app has paused or stopped playback. Earbuds will not charge <ul style="list-style-type: none"> Check whether the charging cable is functional. Ensure the micro-USB charging cable is properly inserted in the earbuds and wall charger ports. Ensure the charging cable and wall charger are functional. 	<p>Bluetooth® Headset With Built-in MIC Model: ONB18W1001</p> <p>PRODUCT GUIDE</p> <p>Ver.01 Rev.08/30/18</p>
<p>-- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in public exposure condition without restriction. produced for Walmart Inc. Bentonville, AR 72716 TEL: 1-800-925-6378</p>	<h3>FCC Statement</h3> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</p>	<h3>Power On/Off</h3> <ul style="list-style-type: none"> Press and hold for 3 seconds power on with voice prompt Press and hold for 3 seconds power off with tone 	<h3>Bluetooth Pairing</h3> <ul style="list-style-type: none"> Press and hold for 3 seconds when power off LED will flash red and blue when ready to pair You will hear "DIDI" tone when the connection is successful 	<h3>Wearing two sides</h3> <p>Detachable</p>	<h3>Working Range</h3> <p>30ft</p>	<h3>Music Controls</h3> <ul style="list-style-type: none"> X1 Click Volume up X1 Click Volume down X1 Click Play/Pause Press & Hold Previous Track Press & Hold Next Track