

INSTRUCTION MANUAL

PORTABLE WIRELESS DJ SPEAKER



In order to achieve the best performance of your product, Please read this Instruction manual prior to using this unit.

Attention

The product has been installed with battery, making it applicable to the outdoor singing, advertisement, recreation and other activities. Please charge the battery before using it outdoors, so as to guarantee that the machine can be used for a longer time outdoors. The machine has been set with power switch circuit. When you connect the adaptor to the power and insert the plug to the charging interface, the machine will switch to the power supplied by the adaptor automatically and charge the built-in battery. When the adaptor interrupts the power, the machine will intelligently switch to the built-in battery for work continuously. When adaptor is used to charge the battery, the integrated intelligent charging circuit within the machine will give hints about charging and the charging indicator lamp will light. After charging is finished, the intelligent charging circuit will give hint to that that the charge has been fully charged and light the charging indicator lamp. At this moment you can close the AC power of the adapter. If you still use adaptor in the machine to work, the charging circuit will automatically cut off the charging circuit and it is unnecessary for you to worry about the charging breaking. You shall notice that the battery has certain service life and it is beyond the warranty scope of the company. Under general circumstances, the built-in battery needs charging 8-10 hours. With more charging times, the battery volume will change and full charging time will reduce accordingly. When the battery is out of charge after being used for a short time, please change the built-in battery. The user shall also notice that if the electricity quantity of the battery is reduced when using the machine outdoors, please close the power switch on the rear plate and charge the built-in battery within 24hours. If the electricity quantity of battery is totally consumed, the situation that the battery can not be charged and the service life is expired will happen. When you don't use the machine for a long time and leave it alone, please charge the battery every six months, so as to avoid the invalidity of battery.

FEATURES:

- Digital karaoke, volume independent adjustment
- Built-in MP3 encoding supporting U disk
- Unique acoustic appearance design
- Built-in battery for indoor activities
- Built-in professional wired microphone system
- Professional high-effective loud-speaking unit
- Compatible to DVD/VCD/PC and other sound sources
- Suitable for USB charging
- Intelligent power switch charging circuit

POWER SUPPLY FOR UNIT

- Connect the supplied cable to 220V jack (2pin adapter included) to charge the built in battery.
- Please make sure battery is fully charged prior to initial use. For best results (or to charge faster) do not use the unit while charging.
- Use On/Off button to switch power ON/OFF on unit.

Bluetooth MODE

- Short press “ ⇄ ” (Mode) button to switch between BT / USB/ TF /FM / AUX
- On your smart phone, scan and select “SF-808/SF-815/SF825 ” to pair.
- Sound will depend on quality of your media file or distance of smart phone from speaker (Distance should NOT be more than 30Feet) or There should be no object blocking the Wireless Signal
- To change tracks Short Press (Previous Track) or (Next Track).
- To Pause or Release Pause Short Press “PL / PA”

USB / TF

- Plug in your USB Disk or TF Card in the slots provided. Please make sure you use the correct file format in your media devices – MP3 FILES ONLY and correct mode has been selected.
- Short press “ ⇄ ” (Mode) button to switch between BT / USB/ SD /FM / AUX. Please ensure that your speaker is fully charged& that your files are MP3 format, and the correct source has been selected.
- To change tracks Short Press (Previous Track) or (Next Track).
- To Pause or Release Pause Short Press “PL / PA”
- Please remember to turn off the power of the Speaker before removing the USB Disk or TF Card.

FM RADIO

- Short press “ ⇄ ” (Mode) button to switch between Bluetooth / USB/ TF /FM / AUX. Please ensure that your speaker is fully charged & correct source has been selected.

AUX (LINE IN)

1. Plug in external device to Aux jack using supplied cable to listen audio through unit.
2. Short press “ ⇌ ” (Mode) button to switch between BT / USB/ TF /FM / AUX. Please ensure that your speaker is fully charged & correct source has been selected
3. Short Press “ ||” to mute
4. Tracks can only be changed from your connected external device.

Microphone recording function (Operation step)

1. insert wired microphone and USB/TF.
2. Long press function button “●” for three seconds.
3. Start talking to record.
4. End and save the recording with short press the button “●” .
5. Play recording sound: insert USB/TF and short press the PLAY button

U disk with MP3 songs to the interface.

TF CARD (interface of TF card): insert TF card with copied MP3 songs to the interface.



 
 
Short press Mode to choose different mode under USB/TF/FM/Bluetooth




Short press play recording, Long press start recording (must Insert a disk, use the microphone for recording)



press the key for repeating of single song or total songs.



 Under FM Mode, short press automatic FM channel search



If there is still fault after the inspection above, please contact the nearest local maintenance department!
The product technology of our company is upgraded continuously and we will not inform of the change of product specification and function additionally!

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.