



## onn. DISCO LAMP SPEAKER WITH COLOR/WHITE LED LIGHTING

Model: 100025111

### PRODUCT GUIDE

Need help?  
We're here for you every day from  
7 a.m. – 9 p.m. CST.  
Give us a call at 1-888-516-2630  
We'd love to hear from you. Scan with your  
Walmart app and let us know what you think.



### PLEASE READ THIS MANUAL CAREFULLY BEFORE USE.

#### PRODUCT DIAGRAM

**1. Power Button**  
Long press it for 3-5 seconds to turn on; Short press remote control to turn on disco lamp speaker when it is in sleeping status;

**2. 3.5mm Audio Input Jack**

**3. Volume-/Brightness- Button**  
Long press to volume down; Short press to dim night lamp;

 
**4. Volume+/Brightness+ Button**  
Long press to volume up; Short press to make light brighter;

**5. Mode Button**  
1: Short press to switch 5 preset modes which set in a sequential order: Music +Disco lamp → Music + Night Lamp → Music → Disco lamp → Night Lamp.  
2: Short press to answer the phone calls, long press to reject it when a call is ringing.

**6. LED Light Button**  
Short press to switch the color of disco lamp and night lamp.

**7. Light Indicator**

**8. USB charging Port(5VDC/1A)**

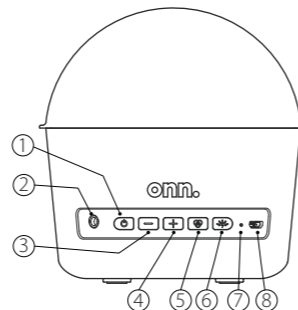

Note: The light brightness can not be adjusted under disco lamp mode.

1

#### REMOTE CONTROL



**WARNING:**  
Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Icon	Function Name	Function Description
ON/OFF	ON/OFF	Power On and Off
Speaker + Disco Lamp	Speaker + Disco Lamp	Short press for Music+Disco ball mode
Speaker + Night Lamp	Speaker + Night Lamp	Short press for Music+Night light mode
Speaker	Speaker	Short press for Music mode
Disco Lamp	Disco Lamp	Short press for Disco ball mode
Night Lamp	Night Lamp	Short press for Night light mode
Motion Mode	Motion Mode	Disco ball mode switch key
Music Motion	Music Motion	Acoustic stroboscopic mode
Make Light Dimmer	Make Light Dimmer	Reduce night light brightness

4

Icon	Function Name	Function Description
☀	Make Light Brighter	Increase night light brightness
☀	Brightest	Highest night light brightness
📞	Answer/Hang Up	Pick up/hang up the phone call
White	Warm White Light	The white night light
Color<	Previous Color	Night light mode switch back key
Color>	Next Color	Night light mode switch forward key
Vol+	Volume Up	Increase volume key
1H	1 Hour Timer	One hour timer power off
3H	3 Hours Timer	Three hours timer power off
5H	5 Hours Timer	Five hours timer power off
Vol-	Volume Down	Decrease volume key
<<	Last Song/Backward	Back music key
>>	Next Song/Forward	Forward music key
Mute	Mute	Mute mode

Note:  
1. **Color/Color** Night lamp mode only  
2. Please press the remote control with fingertips for higher sensitivity.  
3. The remote control On/ Off keys will work only when Disco lamp speaker turned on.  
4. **1H/3H/5H** You can set the timer 1 hour, 3 hours or 5 hours when you hear "Di" tone 1 time, 3 times or 5 times respectively. Press again to cancel the timer

5

#### STANDARD ACCESSORIES

- 1. Disco Lamp Speaker 1 pc
- 2. Lamp shade/ dimming cover 1pc
- 3. Remote Control 1pc
- 4. USB Charging Cable 1pc
- 5. Audio Cable 1pc
- 6. User Manual 1 pc
- 7. 1 Bag hanging hardware 1set

#### PRODUCT FEATURES

- Rechargeable Disco Lamp with Color/White LED lighting
- 5 Watt speaker with microphone for hands-free calling
- Bluetooth®
- Lamp shade/dimming cover
- Built-in 1000 mAh rechargeable battery with up to 1.5 hours of playtime per charge
- Aux-in port

#### PLAY TIME

- 1: Battery Playback Time ( 50% volume on cell Phone. ) : 2 hours
- 2: Battery playback (Under disco lamp) (default setting): 2.5 hours
- 3: Battery playback (Under Speaker + disco lamp) (default setting): 1.5 hours

#### BLUETOOTH PAIRING:

- 1) Make sure that Bluetooth is enabled on your phone;
- 2) Go to search and select Bluetooth name " ONN DISCO BALL" to pair your disco lamp speaker;
- 3) Voice prompt " Bluetooth connected "will be heard once paired. Have fun with your disco lamp speaker with 3 Bluetooth modes !  
1: Music +Disco Lamp 2: Music + Night lamp 3: Music

2

#### AUX INTERFACE:

Aux port can connect with an external audio source for music playing, however, the voice-controlled light mode is not workable while it connects with an external audio source for music playing.

 
#### Indicator:

- Red light is ON when charging
- Blue light is flashing when pairing
- Blue light fixed when paired
- Lights off when disco ball lamp is off

#### CHARGING:

Tips: It is strongly suggested that charging the battery up to 5 hours with DC5V 1A power supply in the first use of the product. Battery is fully charged when red light is off.

#### INSTALLATION DIAGRAM:

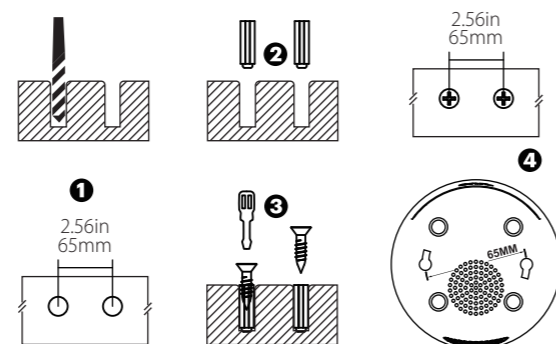

3

#### REMARK

**Low battery warning:**  
Disco lamp speaker will have a voice warning with "Battery Low" when battery is running low and will shut down after twice warning, please recharge it immediately. It should be recharged each month during storage to protect battery and extend battery life.  
Note: Disco lamp speaker will shut down automatically if no music is playing or no operation.

#### TROUBLE SHOOTING

1. **Battery low:** Please charge for 2 hours before use.
2. **Charging failure:** Please use original cable and please make sure adaptor is 5V±0.2V, 1A.
3. **No sound from speaker:** Sound is played only under music, music + disco, Music + night lamp modes. Please check mode setting. Please ensure bluetooth 3.5mm audio input is connected.
4. **No sound under Bluetooth mode:** Make sure to power on the speaker first, and connect your cell phone with the speaker successfully under Bluetooth.
5. **Bluetooth not connected:** Ensure no other bluetooth devices are connected to the Disco Light. Unpair and re-pair your bluetooth device to confirm bluetooth connection. Check sound level on your bluetooth device.

Thanks for choosing the onn. Disco Lamp Speaker.  
Play onn.

6

#### FCC information

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Wal-Mart Stores, Inc.,  
Bentonville, AR 72716  
Hotline: 1-888-516-2630

7

size: 180x216mm