

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

CAUTION: To reduce the risk of fire, electric shock, or injury to persons:

- a) Use only insulated staples or plastic ties to secure cords;
- b) Route and secure cords so that they will not be pinched or damaged when the cabinet is pushed to the wall;
- c) Position the portable cabinet light with respect to the cabinet so the lamp replacement markings are able to be read during relamping;
- d) Not intended for recessed installation in ceilings, or soffits; and
- e) The National Electrical Code (NEC) does not permit cords to be concealed

where damage to insulation may go unnoticed. To prevent fire danger, do not run cord behind walls, ceilings, soffits, or cabinets where it may be inaccessible for examination. Cords should be visually examined periodically and immediately replaced when any damage is noted."

CAUTION: To reduce the risk of fire, do not install closer than 0.5 inches to cabinet wall or in a compartment smaller than 20 inches by 40 inches by 12 inches.

SAVE THESE INSTRUCTIONS

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.


The Responsible (located within the United States) party information:
Company Name: Monster, Inc.
Address: 280 Old County Rd # 435
Brisbane, CA 94005-1301, USA
Telephone Number: 415-840-2000
Email: ProductCompliance@monstercable.com

The name and model number of the product:


Model Number	Model Name
190720-03	LIGHT BAR RGB
190715-00	RF 2.4GHz Remote

GET INSPIRED

Subscribe to our Pinterest boards to learn all the cool things you can do with Monster IlluminEssence.


 For Ideas and Inspiration:
www.pinterest.com/monsterilluminescence

GET HELP

 For Instructional Videos:
www.youtube.com/monsterilluminescence

FOR TECHNICAL SUPPORT GO TO:
www.monsterstore.com/pages/contact-us
OR CALL: 1 (877) 800-8989

rm 880187-00

 **MONSTER**
ILLUMINESSENCE

ESSENTIALS
COLLECTION

LIVE
IN
COLOR

 
INSTALL LED LIGHT BARS

 
TWO OPTIONS TO INSTALL

1. Install with Velcro

Peel off backing from adhesive


Plug the USB cable into (TV or PC) USB port or a 5V USB power supply (not included).

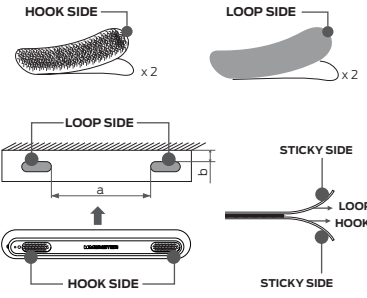

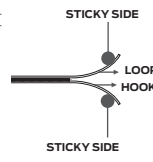

a: 6.15 inch between 2 velcro
b: ≥0.7 inch from velcro to the wall

 2. Install with base support

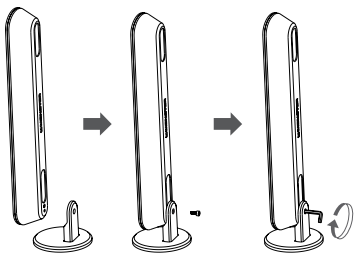

USING YOUR REMOTE

POWER OFF —

POWER ON (PRESS FOR WHITE LIGHT) —

 
COLOR RING —
• SELECT THE COLOR OF YOUR MOOD

BRIGHTNESS —
• MAKES LIGHTS BRIGHTER OR DIMMER

SPEED —
• MAKE LIGHTS CHANGE COLORS FASTER OR SLOWER

PRESET LIGHT PROGRAMS —
• CHOOSE FROM EIGHT PRESET AUTO PROGRAM MODES

Battery Warning Statement
Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.
AAA BATTERIES REQUIRED (NOT INCLUDED)

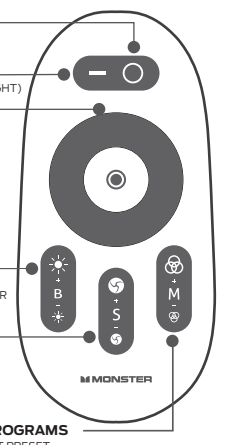

COLOR RING

Choose the color of your lights.

BRIGHTNESS

Dim from 10% - 100%.

PRESET LIGHT PROGRAMS

Eight different auto programs for parties, lounging, and special occasions.

CLUB 1
Magenta Purple Blue Red

CLUB 2
Cyan Turquoise Green Red Magenta Purple Blue Orange

LOUNGE
Magenta Purple Blue Red

BEACH
Cyan Turquoise Green

SUNSET
Yellow Sunset Orange

CHRISTMAS
Green Red

INDEPENDENCE
Red Blue

HALLOWEEN
Orange Purple

SPEED

 
Adjust program speeds faster for parties and slower for an elegant change of atmosphere.

PAIRING

By default, all Monster IlluminEssence LED light bars will be paired out of the box with the included remote control.

TO PAIR

To pair LED light bars to another remote, simply unplug and replug back in the LED light bars to power and WITHIN FIVE SECONDS of plugging back into power, press and hold the "Speed+" until the lights blink three times.

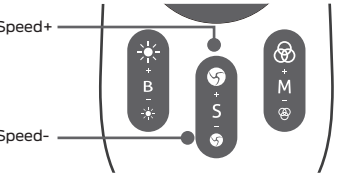

Speed+
Speed-

TO UNPAIR

 
Repeat above but instead of "Speed+" press "Speed-".

EXPAND

EXPAND LIGHTS AND ROOMS

You can pair up to four remotes with up to 30 Monster IlluminEssence LED strips, LED light bulbs or LED light bars.

You can have multiple remotes control the same set of lights.

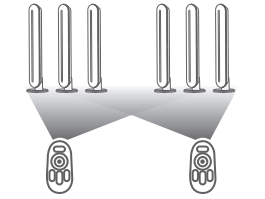

You can also have different sets of lights paired to different remotes to control rooms independently.

