



INFORMACIÓN DE SEGURIDAD

Uso en hospitales

Por favor siga todas las leyes y regulaciones en hospitales y clínicas. Por favor, apague su tablet PC cuando se encuentre cerca de instrumentos médicos.

Uso en aeropuertos

Recuerde seguir todas las normas de seguridad del aeropuerto y el vuelo.

Prueba de agua

Su dispositivo no es a prueba de agua. Mantenga su dispositivo alejado del agua o líquidos para evitar daños.

Llamadas de emergencia

Asegúrese de que su dispositivo esté encendido y en un área con cobertura. En la pantalla de inicio, toque la tecla de la tableta y marque el número de emergencia.

Uso de la batería

Para mejorar el rendimiento y la vida útil de la batería, se recomienda que cargue la batería completamente antes de utilizar la tableta móvil por primera vez. El rendimiento óptimo de una batería nueva se obtiene generalmente después de dos o tres ciclos de carga completos.

FUNCIONES CLAVE



Encendido / Apagado

- Mantenga pulsado el botón de encendido para encender. Mientras la tableta está encendida, mantenga pulsado para acceder al menú de apagado o pulse una vez para bloquear la pantalla.

Volumen

Ajusta el volumen del sonido y el volumen durante una llamada o el volumen multimedia.

Inicio

El botón de inicio devuelve cualquier acción parcial y vuelve a la pantalla de inicio.

Aplicaciones Recientes

Abre una lista de aplicaciones recientemente utilizadas y le permite cambiar comodamente entre ellas. Con esta opción también puede cerrar todas las aplicaciones abiertas de un solo clic.

Retroceder

Regresa a la pantalla anterior. Cierra e intermite cualquier programa abierto, opción de menú o el panel de notificaciones.

Puerto de USB

Puerto de extracción de carga del dispositivo y también sirve para transferir documentos, música o video, entre el dispositivo y un PC.

Puerto Auriculares

Conecta los auriculares a este puerto para usar sus audífonos manos libres. También se puede escuchar música o video FM.

Cámara frontal

Una cámara de alta resolución para tomar fotos y videos. Esta opción es ideal para autorretratos.

Cámara trasera

Una cámara de alta resolución para tomar fotos o video.

Flash

 
Proporciona luz para imágenes en condiciones de baja visibilidad, también cumple con la función de cámara.

Instalación de la tarjeta SIM

Advertencia: Mantenga la tarjeta SIM fuera de la cámara de los ojos. Evite que la tarjeta SIM se dañe al limpiarla por roce o flexión. Tenga cuidado al insertar o retirar la tarjeta SIM.

Para insertar la tarjeta SIM:

- A) Retire la cubierta posterior.
- B) Inserte la tarjeta SIM en la ranura.
- C) Coloque la cubierta posterior, asegúrese de que quedó firme y encienda la tableta nuevamente.

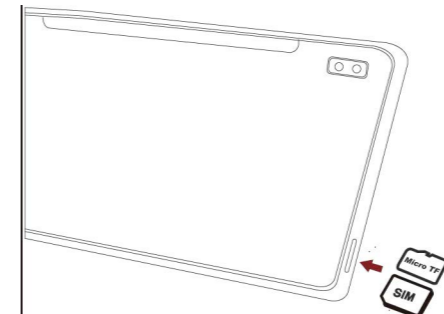

Cuando encienda por primera vez la tableta, configure las funciones básicas de su equipo.

INSERTAR SIM

Inserte la tarjeta SIM para que la tableta pueda registrarse a la red de su operador.

SELECCIONAR IDIOMA

En la pantalla de bienvenida, por favor deslice y haga clic para elegir el idioma de su preferencia.

SELECCIONAR WI-FI

Este paso permite que el dispositivo se conecte a una red Wi-Fi. Haga clic en la red Wi-Fi que desea introducir la contraseña y el dispositivo se conectará a la red. Por favor tenga en cuenta que puede conectarse directamente y sin contraseña a las redes abiertas, mientras que las redes aseguradas, si necesitan de la misma. Se recomienda conectar a telefónicamente a una red Wi-Fi antes de comenzar a usar o por primera vez para actualizar el software del equipo en caso de ser necesario.

AGREGAR / CREAR UNA CUENTA

 
Registre a su cuenta de Google para sincronizar sus equipos a los servicios de Google. Tu cuenta de Gmail se utilizará para algunas aplicaciones de Google. Si no tiene una cuenta de Google, haga clic para crear una nueva.

SERVICIOS DE GOOGLE

Haga clic para agregar o eliminar los servicios de Google. Estos incluyen copias de seguridad de servicios de ubicación, etc.

RESTABLECER APLICACIONES Y DATOS

Puede restaurar sus aplicaciones y datos, o hacer un backup a la nube desde otros dispositivos o también puede configurar la tableta como un dispositivo nuevo. Google Play y otras marcas son marcas registradas de Google.

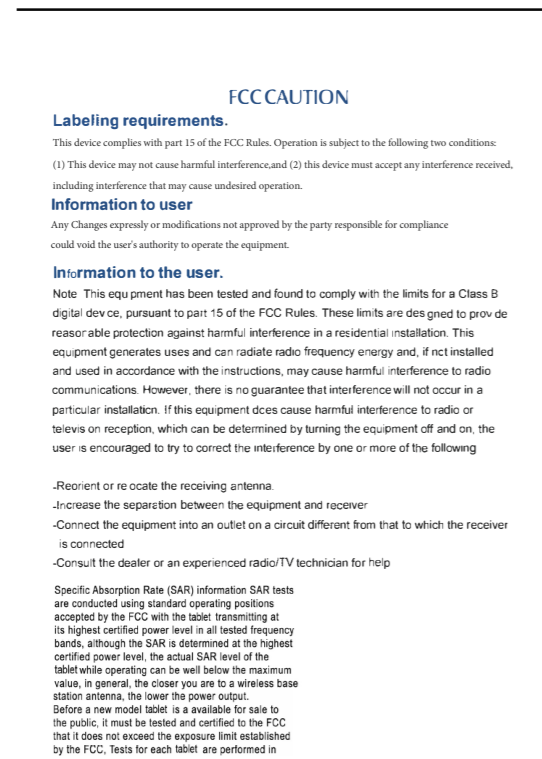

FCC CAUTION

Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to user

Any Changes expressly or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or televisions reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information: SAR tests are conducted using standard operating positions accepted by the FCC with the tablet transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the tablet while operating can be well below the maximum value. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model tablet is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each tablet are performed in

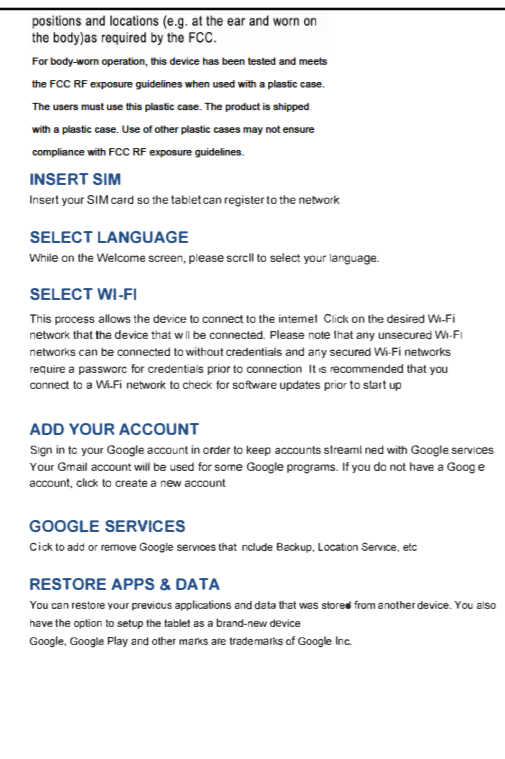

positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body-worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with a plastic case. The users must use this plastic case. The product is shipped with a plastic case. Use of other plastic cases may not ensure compliance with FCC RF exposure guidelines.

INSERT SIM

Insert your SIM card so the tablet can register to the network.

SELECT LANGUAGE

While on the Welcome screen, please scroll to select your language.

SELECT WI-FI

This process allows the device to connect to the internet. Click on the desired Wi-Fi network that the device that will be connected. Please note that any unsecured Wi-Fi networks can be connected to without credentials and any secured Wi-Fi networks require a password for credentials prior to connection. It is recommended that you connect to a Wi-Fi network to check for software updates prior to start up.

ADD YOUR ACCOUNT

Sign in to your Google account in order to keep accounts synchronized with Google services. Your Gmail account will be used for some Google programs. If you do not have a Google account, click to create a new account.

GOOGLE SERVICES

Click to add or remove Google services that include Backup, Location Service, etc.

RESTORE APPS & DATA

 
You can restore your previous applications and data that was stored from another device. You also have the option to setup the tablet as a brand-new device. Google, Google Play and other marks are trademarks of Google Inc.

Installation of the SIM Card

Warning: Please keep the SIM Card out of the reach of children. The SIM card and its contact are easily damaged due to scratching or bending. Please use caution when carrying, installing, or taking out the SIM card.

To insert SIM card

- A) Remove the rear cover.
- B) Insert the SIM card.
- C) Replace the rear cover, and power on the tablet.

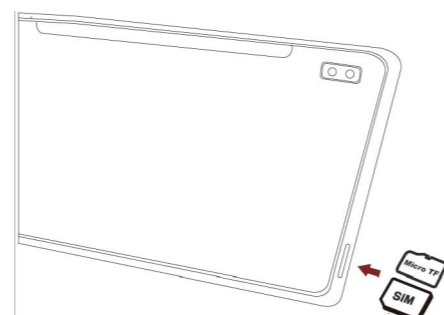

Power On / Off

- Long press power button to power on.
- While the device is powered on, long press to access the power off menu or click to lock the screen.

Volume

Adjusts the ring volume, call volume, and multi-media volume.

Home

The home button pauses any current action and returns to the home screen.

Recent Apps

Opens a list of recently opened applications that allows you to switch conveniently between them. This option can also close any open applications by swiping to the side.

Back

Returns to the previous screen, closes the keyboard, any open program, or any menu option.

USB Port

Charges the device and transfers data such as documents, music, and video between your device and a PC.

Headset Port

Connects earphones to the port for hands-free capabilities. You may also listen to music or FM radio.

Front Camera

A high-resolution front camera to take pictures and video. This option is ideal for self-portraits.

Rear Camera

A high-resolution rear camera to take pictures and video.

Flash

Provides light for pictures in low-light conditions. It also may be used as a flashlight.

For FCC ID: Step 1: Click "Setting" Step 2: Click "About tablet"

KEY FUNCTIONS



SAFETY INFORMATION

Hospital Safety

Please follow hospital rules and instructions. Please turn off your tablet PC when near medical instruments.

Airport Safety

Remember to follow all airport and flight safety regulations.

Water Hazard

Your device is not waterproof. Keep your device away from water or liquid to avoid damage.

Emergency Calls

Make sure your device is switched on and in a service area. On home screen, tap the table key and dial the emergency number.

Battery usage

For better performance and longer battery life, it is recommended that you charge the battery fully before using the tablet for the first time and that you regularly completely two to three charge cycles.

