

Mobile screen manual

140mm

210mm

User Manual

FIT-32

Fileye <https://fileye.net/>

Customer Service

service@offitaye.net

Customer Service

Dear customer,
If you are having any issues while using the product, please feel free to contact us before you return the product to us. We will serve you until you are satisfied.
Defective or damaged item?
Inaccurate description?
Missing parts or accessories?
Performance or quality not adequate?
Wrong item sent?

CONTACT US HERE
OUR EMAIL ADDRESS: service@offitaye.net

You can email us directly.
Typically we will reply to you in 24 hours on business days!

Warning

Preface

Thanks for using the Fileye smart screen. Before starting the device, please read the product features and notes in the user manual carefully.

Warning

- You can't use other power adapter to power this device.
- Do not block or cover the ventilation hole at the back of the device.
- Do not use or store this machine in dusty, humid and high temperature environment.
- When the machine breaks down, please do not disassemble and repair it by yourself. Please contact the original factory or dealer to solve the problem.
- To prevent electric shock, do not step on the power cord or power adapter, do not continue to use damaged power cord.
- During transportation of this machine, it is not to use for a long time, please unplug the power cord.
- Do not touch the display screen during transportation or use, do not squeeze the display screen hard, and do not damage the display screen with sharp weapons or hard objects, so as to avoid damage to the display screen.
- To avoid damage to the display screen, do not use sharp objects or hard objects to hit the display screen.
- Please clean the machine with a dry soft cloth or a soft cloth slightly dipped in a flexible cleaner. Do not use any kind of solvent, such as alcohol or gasoline, or it may damage the surface treatment layer.
- Children must be made aware of the dangers of climbing this product, which can cause serious life injury if it is dropped or dumped.
- Do not place the product in an unstable or inclined position.
- To avoid tripping, be sure to arrange the cables connected to this equipment in time.

Packing List

After opening the package, please confirm the contents of the package below.

Installation Instructions for Fileye Mobile Smart Screen

Please keep the package 1-2 weeks in case of return or exchange.

- Please check the appearance of the product, whether there are scratches, cracks, and whether the accessories are complete. When you receive the product, if there are any such problems, please return the product.
- If you need to return or exchange the product, please make sure to not let the product or accessories be damaged inside and outside, and the product and accessories are not damaged.

Notice:

If you do not use the product for a long time, please remove the power cord on the back of the display.

If the product crashes, unplug the power cord on the back of the monitor and plug it back in.

Using Remote Control

The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the display correctly. This remote uses infrared light. When in use, it should be pointed in the direction of the display's remote sensor.

To install batteries, open the battery cover, replace batteries (1.5V AAA) matching positive and negative electrodes inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse.

Air Mouse has 3 levels of cursor speed.

From slow to fast:
Press and hold "OK" and "Volume+" buttons.
The speed adjusts one level when LED light on.

From fast to slow:
Press and hold "OK" and "Volume-" buttons.
The speed adjusts one level when LED light on.

Function Keys :

- Home: Press and hold 3 seconds Go back to the home;
- Return: Go back to previous screen;
- OK: Confirm action or insert cursor;
- Cursor Locking: Press to lock the air mouse, press again to unlock;
- Play / Pause: Multimedia play/pause.

Voice switch:

Press and hold "Voice Switch" to turn on voice channel. Release the key to turn off voice channel.

Low battery reminder:

The red light flashes slowly when the AAA battery power of the product is lower than 10% means that the battery need to be replaced at this time.

Sensor Calibration

Automatic calibration:

The changes of voltage and temperature may make the cursor drifts. In this case, put the mouse flat on the desk and remain still.
You can complete calibration by pressing any key to wake it up when it is in hibernation mode.

How to Use

For initial use, plug a USB receiver into the USB port of device and wait for 0-10 seconds to install driver of USB receiver. Move the mouse, the mouse cursor can move on the screen means that pairing is successful. Press and hold "OK" and "Home" buttons, LED light begin to flash. Pairing is successful when LED light stop flashing.

Product specifications

Transmission method: 2.4GRF wireless
Sensors: 6 axis Gyroscope
Number of Keys: 17
Range: >10m
Battery Type: AAA*2
Material: ABS Plastic and silicone
Size: 143*45*29MM
Weight: 50g

(Some features and services may not be provided depending upon models or regions).

Notice:

- Use the button, press and hold for more than 1 second.
- The screen can be used without the remote control by touching the screen.

Internal Battery

This circular base contains a built-in rechargeable battery, which can be used for a period of time without connecting other power sources, when the battery is exhausted, the charger can connect to charge the battery. It will display 100% when fully charged, and the number will change as you use it. When using 3%, the "3%" on the display will keep flashing.

Note:

The battery recharge from 0% to 100% for about 8 hours when using about 6 hours when shutdown.
The battery life of the equipment is about 7-8 hours after being fully charged.
The service life of the product increases, and the battery life and battery life decrease proportionally.
In order to prolong the life of the battery, it is recommended to charge the battery after using it for a period of time. After the battery full, unplug the charger.
Do not keep the battery fully charged all the time, and the battery cannot be charged in the extreme environment.
The standard service time in the manual is based on the laboratory test data of our company, and the actual time will vary according to the different conditions of use.
Note: Users are strictly prohibited from replacing or disassembling the battery pack to avoid the risk of explosion of the whole machine due to improper installation or the use of the wrong type of battery. If necessary, please contact the official customer service to deal with the relevant problems.

Description of Interfaces and Buttons

HDMI IN:

Used to connect external HD video input.

TYPE-C:

Multi-functional interface. Can connect USB disk, mouse, etc., can connect computer, upgrade, read the contents of the machine.

USB:

Can use USB storage device, or for mouse and keyboard receiver.

Headphone Jack:

3.5mm headphone output stereo sound for connecting external power amplifier headphones.

POWER:

Press once the power button for standby and hold down to shut down or restart the machine.

Product Specification

| System | RAM | 3GB |
|---------------------------|--|-----|
| Internal memory | 16GB | |
| OS | Android 10.0 | |
| Panel Size | 32" LCD | |
| Resolution | 1920*1080 | |
| Input Type | IR remote control | |
| Number of ports | 10 Ports | |
| Audio Rate | 16K | |
| WiFi | Support | |
| Bluetooth | 3.5mm headphone output | |
| USB-A | External microphone input | |
| USB-C | Full Function (except for charging function) | |
| OSD Menu | 100% Adjustable | |
| Buttons | Power | |
| Channel | Support 16 channels | |
| Speaker | 80 W*2 | |
| Input Voltage | 12V/6A | |
| Built-in battery capacity | 14.4V/1200mAh | |
| Storage Temperature | 0°C~40°C | |
| Working Temperature | 0°C~40°C | |

Product Specification

Check the product before use:
- Check if there are any scratches or damage to the machine.
- Check if there is any visible damage to the product and the remote control.
- Check if there is any missing part.

Usage safety:
- Check if the product is turned on.
- Check if the power cord is plugged in correctly.
- Check if the power cord is plugged in the wall outlet.
- Check if the power cord is plugged in the wall outlet.
- Check if the power cord is plugged in the wall outlet.
- Check if the power cord is plugged in the wall outlet.

Product safety:
- Check if the power cord is plugged in the wall outlet.
- Check if the power cord is plugged in the wall outlet.
- Check if the power cord is plugged in the wall outlet.
- Check if the power cord is plugged in the wall outlet.

Accidental damage:
- If the product is damaged, please contact the manufacturer.
- If the product is damaged, please contact the manufacturer.
- If the product is damaged, please contact the manufacturer.

General note:
- In handling the product, please avoid touching or pulling the product.
- Do not use the product in a humid or wet environment.
- Do not use the product in a humid or wet environment.
- Do not use the product in a humid or wet environment.

Electrical safety:
- Do not use the product in a humid or wet environment.
- Do not use the product in a humid or wet environment.
- Do not use the product in a humid or wet environment.

When cleaning the product, be careful not to:
- Use water or any liquid to clean the product.
- Use a wet cloth to clean the product.
- Use a wet cloth to clean the product.

Make sure to use any excess water or cleaner only a dry cloth to wipe the screen.
Make sure to keep the screen dry and clean.

Regulatory

FCC NOTICE

(For USA)
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an authorized radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radio Frequency Interference Requirements (For USF devices)

(For USA)
High power radars are allocated as primary users of the 5.25 to 5.35 GHz and 5.65 to 5.85 GHz bands. These radar stations can cause interference with and/or damage this device. This device cannot be co-located with any other transmitter.

FCC RF Radiation Exposure Statement

(For USA)
(For having wireless function (WLAN, Bluetooth, ...))
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20 cm (7.8 inches) between the antenna and your body. Users must follow the specific operating instructions for satisfying RF exposure compliance.

Warning! Safety Instructions

- TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.
- Do not place the product and/or remote control in the following environments:
 - Keep the product away from direct sunlight.
 - Do not place the product in high humidity such as a bathroom.
 - Near any heat source such as stoves and other devices that produce heat.
 - Near kitchen counters or humidifiers where they can easily be exposed to steam or oil.
 - An area exposed to rain or wind.
 - Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g., on shelves above the unit).
 - Near flammable objects such as gasoline or candles, or expose the product to direct air conditioning.
 - Do not install in excessively dusty places.
 - On unsecured or high furniture, such as shelves or bookshelves.Otherwise, this may result in fire, electric shock, combustion/explosion, malfunction or product deformation.

Ventilation

- Install your product where there is proper ventilation. Do not install in a confined space such as a bookcase.
- Do not install the product on a carpet or cushion.
- Do not block or cover the product with cloth or other materials until it is plugged in.
- Take care not to touch the ventilation openings. When watching the unit for a long period, the ventilation openings may become hot.
- Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the points where the cord exits the product.
- Do not move the product while the power cord is plugged in.
- Do not touch the end of the power cord while it is plugged in.
- Be sure to grasp the plug when unplugging the power cord.
- Do not pull on the power cord and remove the power cable.
- Do not connect too many devices to the same AC power outlet as this could result in fire or electric shock.

Safety Note:

- Please read all instructions carefully before using this product.
- When cleaning the mobile screen, please unplug the power cord, turn off the power switch, do not use liquid cleaning solution or spray cleaner, wipe the screen with a soft damp cloth. If it is still not clean, please use LCD screen cleaner.
- Do not use accessories not recommended by the manufacturer, otherwise it may cause danger.
- When unplugging the power cable of the basic power interface or power adapter, press and hold the power plug. Do not pull the power cable directly and remove the power cable.
- This mobile display can only be operated with the type of power supply described on its nameplate. If you have questions about the type of power supply you are using, consult your mobile display distributor or your local power supply office.

Disconnecting the Device from the Main Power

- The power plug in the disconnecting device. In case of an emergency, the power plug must remain readily accessible.
- Do not let your children climb or cling onto the product. Otherwise, the product may fall over, which may cause serious injury.
- Grounding (Except for devices which are not grounded.)
 - The product with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet.
 - Never touch this apparatus or antenna during a lightning storm. You may be electrocuted.
 - Make sure the power cord is connected securely to the product and wall socket. If not secured damage to the Plug and socket may occur and in extreme cases a fire may break out.
 - Do not insert metallic or inflammable objects into the product.
 - If a foreign object is dropped into the product, unplug the power cord and contact the customer service.
 - Do not touch the end of the power cord while it is plugged in. You may be electrocuted.

Safety tips! (Stability hazard)

The monitor could fall, causing serious injury. Many injuries, especially among children, can be avoided by taking simple precautions, such as:
- Use the cabinet, frame, or mounting method recommended by the manufacturer.
- Please use furniture that can safely support the monitor.
- Please use child-resistant fasteners to secure the monitor to furniture to access the display or its controls. Be sure to organize the wires and cables connected to the display so that they cannot be tripped, pulled or locked.
- Never place the monitor in an unstable or tilted position.

If any of the following occur, unplug the product immediately and contact your customer service.

- The product has been damaged.
- If water or another substance enters the product (like an AC adapter, power cord, or product).
- If you smell smoke or other odors coming from the product.
- When lightning storms or other long periods of rain.

Even the product is turned off by remote control or battery, AC power source is connected to the unit if not unplugged in.

- Do not use high voltage electrical equipment near the product (e.g., a big zipper). This may result in product malfunction.
- Do not attempt to modify the product in any way without written authorization from Fileye Electronics. Accidental fire or electric shock can occur. Contact your local customer service for service or repair. Unauthorized modifications could void the user's authority to operate this product.
- Use only an authorized Fileye Electronics accessories approved by Fileye. Otherwise, this may result in fire, electric shock, malfunction, or product damage.
- Never disassemble the AC adapter in power. This may result in fire or electric shock.
- Handle the adapter carefully to avoid dropping or striking it.
- To reduce the risk of fire or electrical shock, do not touch the product with wet hands. If the power cord prongs are wet or covered with dust, dry the power plug completely or wipe dust off.
- Please make sure the device is installed near the wall outlet to which it is connected and that the outlet is easily accessible.

Internal Battery

6 Due to high pressure or other dangers when opening or moving the chassis, do not repair it by yourself, please contact qualified maintenance personnel for comprehensive repair.

7 When the following situations occur, first unplug the power plug or power plug of the bottom battery assembly from the socket, and contact qualified maintenance personnel for repair:
a. The power cable or power plug is damaged or worn.
b. The monitor has fallen off or the housing is damaged.
c. An obvious exception is displayed. The fault needs to be repaired.

8 Please place the monitor in a well-ventilated environment, away from strong light, high temperature or high humidity.

9 Please place the display at a temperature ranging from 0°C to 40°C. Otherwise, normal use may be affected.

Disconnecting the Device from the Main Power

- The power plug in the disconnecting device. In case of an emergency, the power plug must remain readily accessible.
- Do not let your children climb or cling onto the product. Otherwise, the product may fall over, which may cause serious injury.
- Grounding (Except for devices which are not grounded.)
 - The product with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet.
 - Never touch this apparatus or antenna during a lightning storm. You may be electrocuted.
 - Make sure the power cord is connected securely to the product and wall socket. If not secured damage to the Plug and socket may occur and in extreme cases a fire may break out.
 - Do not insert metallic or inflammable objects into the product.
 - If a foreign object is dropped into the product, unplug the power cord and contact the customer service.
 - Do not touch the end of the power cord while it is plugged in. You may be electrocuted.

Safety tips! (Stability hazard)

The monitor could fall, causing serious injury. Many injuries, especially among children, can be avoided by taking simple precautions, such as:
- Use the cabinet, frame, or mounting method recommended by the manufacturer.
- Please use furniture that can safely support the monitor.
- Please use child-resistant fasteners to secure the monitor to furniture to access the display or its controls. Be sure to organize the wires and cables connected to the display so that they cannot be tripped, pulled or locked.
- Never place the monitor in an unstable or tilted position.

Internal Battery

6 Due to high pressure or other dangers when opening or moving the chassis, do not repair it by yourself, please contact qualified maintenance personnel for comprehensive repair.

7 When the following situations occur, first unplug the power plug or power plug of the bottom battery assembly from the socket, and contact qualified maintenance personnel for repair:
a. The power cable or power plug is damaged or worn.
b. The monitor has fallen off or the housing is damaged.
c. An obvious exception is displayed. The fault needs to be repaired.

8 Please place the monitor in a well-ventilated environment, away from strong light, high temperature or high humidity.

9 Please place the display at a temperature ranging from 0°C to 40°C. Otherwise, normal use may be affected.

Disconnecting the Device from the Main Power

- The power plug in the disconnecting device. In case of an emergency, the power plug must remain readily accessible.
- Do not let your children climb or cling onto the product. Otherwise, the product may fall over, which may cause serious injury.
- Grounding (Except for devices which are not grounded.)
 - The product with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet.
 - Never touch this apparatus or antenna during a lightning storm. You may be electrocuted.
 - Make sure the power cord is connected securely to the product and wall socket. If not secured damage to the Plug and socket may occur and in extreme cases a fire may break out.
 - Do not insert metallic or inflammable objects into the product.
 - If a foreign object is dropped into the product, unplug the power cord and contact the customer service.
 - Do not touch the end of the power cord while it is plugged in. You may be electrocuted.

Safety tips! (Stability hazard)

The monitor could fall, causing serious injury. Many injuries, especially among children, can be avoided by taking simple precautions, such as:
- Use the cabinet, frame, or mounting method recommended by the manufacturer.
- Please use furniture that can safely support the monitor.
- Please use child-resistant fasteners to secure the monitor to furniture to access the display or its controls. Be sure to organize the wires and cables connected to the display so that they cannot be tripped, pulled or locked.
- Never place the monitor in an unstable or tilted position.

Internal Battery

6 Due to high pressure or other dangers when opening or moving the chassis, do not repair it by yourself, please contact qualified maintenance personnel for comprehensive repair.

7 When the following situations occur, first unplug the power plug or power plug of the bottom battery assembly from the socket, and contact qualified maintenance personnel for repair:
a. The power cable or power plug is damaged or worn.
b. The monitor has fallen off or the housing is damaged.
c. An obvious exception is displayed. The fault needs to be repaired.

8 Please place the monitor in a well-ventilated environment, away from strong light, high temperature or high humidity.

9 Please place the display at a temperature ranging from 0°C to 40°C. Otherwise, normal use may be affected.

If any of the following occur, unplug the product immediately and contact your customer service.

- The product has been damaged.
- If water or another substance enters the product (like an AC adapter, power cord, or product).
- If you smell smoke or other odors coming from the product.
- When lightning storms or other long periods of rain.

Even the product is turned off by remote control or battery, AC power source is connected to the unit if not unplugged in.

- Do not use high voltage electrical equipment near the product (e.g., a big zipper). This may result in product malfunction.
- Do not attempt to modify the product in any way without written authorization from Fileye Electronics. Accidental fire or electric shock can occur. Contact your local customer service for service or repair. Unauthorized modifications could void the user's authority to operate this product.
- Use only an authorized Fileye Electronics accessories approved by Fileye. Otherwise, this may result in fire, electric shock, malfunction, or product damage.
- Never disassemble the AC adapter in power. This may result in fire or electric shock.
- Handle the adapter carefully to avoid dropping or striking it.
- To reduce the risk of fire or electrical shock, do not touch the product with wet hands. If the power cord prongs are wet or covered with dust, dry the power plug completely or wipe dust off.
- Please make sure the device is installed near the wall outlet to which it is connected and that the outlet is easily accessible.

Internal Battery

6 Due to high pressure or other dangers when opening or moving the chassis, do not repair it by yourself, please contact qualified maintenance personnel for comprehensive repair.

7 When the following situations occur, first unplug the power plug or power plug of the bottom battery assembly from the socket, and contact qualified maintenance personnel for repair:
a. The power cable or power plug is damaged or worn.
b. The monitor has fallen off or the housing is damaged.
c. An obvious exception is displayed. The fault needs to be repaired.

8 Please place the monitor in a well-ventilated environment, away from strong light, high temperature or high humidity.

9 Please place the display at a temperature ranging from 0°C to 40°C. Otherwise, normal use may be affected.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.