SODLK



SODLK T18 Portable Speaker







Read Before Use future reference. If you have any additional questions or comments, please contact us by service hotline at : Package Contents 1s SCIDLK portable speaker 1s 3.5mm Audio cable 1s 7spe-C charging cable

1x Remote Control (Luxury Microphone Version)

Aux-in Mode Simply connect the speaker with your non-III device via the 3.5mm audio lack cable. Speaker will switch to Aux-in mode

TF Card Slot Mode The Speaker will play the music from your TF/SD card automatically when plugging the card into the slot.

USB Flash Drive Mode

Auto Power Off The speaker will power off automatically after 20 minutes if it does not pair with any device through BT. When the battery

Charging Indicator

The indicator will stay on red when charging, the red indicator goes off after fully charged. Care & Maintenance

device unusable

Do not drop or jump on it and treat it with care for the best performance

Specification	
Model	SCOK TH
Galar	itax
ill Weston	5.0
Audio Decoding	SK:
9E Compatibility	AZEPY13, ACKEPY14, HPY14
Transmission Distance	1907/98
Playtime	up to 12 Hours (on a 20% Volume)
Subsey Capacity	2-6/ (coopyah
Power	NOW.
waterproof	90

How to Use





Mode Switch mode from BT to U disk, TF/SD card, AUX : Press for 1s

Reset : Press for 8s

EQ WIX 1

EQ Buttor Switch EQ Effects Press once to switch a

Mode(Default), Deep Bass Mode& 3D Mi



True Wireless Stereo Pairing



 Press "True Wireless Stereo Pairing Button" once to enter stereo pa with the yellow indicator flashes.

with the yellow indicator flashes.

If paired successfully, the stereo pairing indicator of both speakers will stay...

n yellow.

. The BT indicator of host speaker will flash. Search and click "SODLK T18"

<u>Disconnect from True Wireless</u> <u>Stereo Pairing</u>



Press "True Wireless Stereo Pairing Button" once with yellow indicator off.

This coagriment has been lested and found to comply with the limits for all costs digital develor. Described Their 18 of the Collect. These limits are designed to provide measurable Part 18 of the Collect. The lest middle make indicated and indicated the control of the contro

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
---- Recrient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to

which the receiver is connected.
--- Consult the dealer or an experienced radio/TV technician for help.

Consult the dealer or an experienced radio/1V technician for h

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

FCC ID: 2AKRC-T18



50DLK _{声莱}家

SODLK-Enjoy the Music in Your Daily Life



