




T200PLUS Outdoor Wireless Speaker User Manual

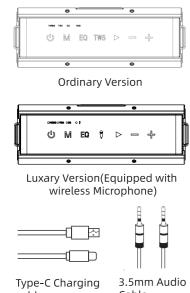

Accessories

illustartion


2.Mode Switching

3.RGB/EO Button

7. Volume up/Next track

8. Microphone connection

4.TWS Mode

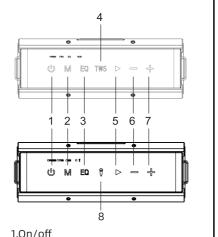



## Parameters

BT Version:5.0 DSP technology: Deep bass strengthen

 
Rated output power:100W Maximum output power: 120W Input:DC 5V/2.1A

Charging time:≥6hours TWS working distance : ≤6m BT working distance : ≤18m AUX Mode: 3.5mm audio port TF card Mode: Maximum 128GB

USB Mode: Maximum 128GB Driver unit size:78mm\*2+52mm\*2 Battery capacity:16800mah

(automobile dynamics) Product size:292\*112\*101mm Product weigh: 2685g

Charging: Type-c 5V/3A Impedance:4 ± 15%



# Operation

Button	function	operation	LED indicator
L U POWEX	Tum on	Long press the "POWER" button for 1.5s, speaker will turn on and go into pairing mode automatically	BT indicator flashing waiting for connection BT indicator stays in solid blue: connection completed
	Turn on leff RGB light	When speaker is on, short press the "POWER" button one time to turn on/off the RGB light	RGB light on off
	Turn off	Long press "POWER"Button for 2s	Indicator light goes off
	Forced shudown	When the speaker enashed, long press the "POWER" button for 8s to forced shutdown the speaker	Indicator light goes off
M	BT indicator off	Short press/MODE button to switch BT /TE/USB/AUX Modes	
	BT Disconnection	In BT paired mode, long press the button for 3s to disconnect the BT	
	Reset speaker	Long press the button for 5s to reset the speaker	
EQ	EQ MODES	Short press the button for switching EQ from doup box to vocal sound and short press spain change into serumed sound Long press the button for 2s to control the LED light	
TWS	TWS Connection	Short press"TWS"button to enter TWS paring Under TWS connection, short press "TWS"button again to exit TWS MODE	
		TWS Committion:  17-ms on the two question and make sure they are not contensed with they devices  2-blast prime the "TWS Thinton of one speaker, you will have a visit prompt and the indiameters," they will have a visit primer and the indiameters.  3-blast the two speaker contents with could order exceedingly the indiameter of the greatery exceedingly the indiameter of the greatery expectate "indiameters" and profit in the primery expectate "indiameters" and "in indicates" and profit contents.  3-blast the contents of the indiameters with the indiam	Indicator is flushing yellow.TWS waiting for contextual and contextual policy.TWS contex
	Karaoke mode	Long press TWS button for 2s to enter Karaoke mode. Turn on the wireless microphone,the mic will automatically connect to the speaker	Indicator of the Mic is on
- 2	Pause/play	Short press play/purse button	Under BT mode indicator stays on
		Under AUX mode_short press "paly 'pause" button to mute the speaker	When playing indicator flashes slowly When speaker's muted indicator stays in solid blue
	Answer a call	Short press play/pause button to answer a call, when a call is coming	
PLAY/PNISE	End a call	Short press play/pause button to end a call,when having a call	
	Decline a call	Long press play/pause button for 2s to decline a call,when a call is coming	

tor	]	l [		Redial a call	Double press play/pause button to redial
for	1		PLAS/PROSE	Activate voice assistant	Long press play/pause button for 2s to Activate voice assistant
e: connection			6	Volume down	Short press "-"button to decrease the volume for 1 sale (total 16 scales)
				Previous track	When playing music Jong press "-"button for 1.5s to skip to previous track
		li	ī.	Volume up	Short press "+"button to increase the volume for 1 sale (total 16 scales)
			Ť	Next track	When playing music Jong press "+"button for 1.5s to skip to next track
			£Q°+	Mic Volume up	Keep Pressing the EQ button and press "+" button to increase Microphone's volume
			EQ —	Mic Volume down	Keep Pressing the EQ button and press "-" button to decrease Microphone's volume
			30	charging	5V/3A intelligent charging
ie			11	Intelligent power saving	Speaker will go off if no BT connection in 10 minutes.
			12	Low battery warming	When speaker in low battery,the speaker will automatically go off
			13	AUX MODE	Insert 3.5mm audio cable, the music will automatically read and play
			14	USB MODE	Insert U disk, the music will automatically read and play
			15	TF MODE	Insert TF card, the music will automatically read and play
WS waiting 5 connection			16	USB power bank	To charge your devices when needed
iting for BT					
ys on					
es slowly for stays					
	1	I			

Charging indicator in red Charging completed indicator off

Indicator in flashing red

Indicator flashes slowly when playing Indicator in solid blue when pousing

Indicator flashes slowly when playing Indicator in solid blue when pousing

### **FCC Statement**

- This device complies with Part 15oftheFCC rules.
- Operation is subject to the following two conditions: 1)
- This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the installation, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a praticular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:
- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver. . Connect the equipment into and outlet on a circuit different from
- that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.
- The distance between user and products should be no less than 20cm.
- The EUT is Indoor use only

## PRODUCT INSPECTION CERTIFICATE



Warranty Card (please keep this card for warranty ervices)

User profiles	Date
Name:	
Address	
Contact number:	
Product name and Specification	
Signure of the agency:	

### Warranty clause

- If the product is not specially marked, users can choose to return the product due to its own quality problems (not product software faults) from the date of purchase. The return period is 7 days: the replacement period is 15 days; and the warranty period is 12 months.
- If the product is not specially marked, users can choose to return the product due to its own quality problems (not product software faults) from the date of purchase. The return period is 7 days; the replacement period is 15 days; and the warranty period is 12 months.
  - When the user requests the warranty service, he/she shall actively provide the valid warranty service certificate or invoice: Additional services beyond the warranty shall be charged in accordance with relevant regulations, and the warranty period of the products shall be 3 months from the date of picking up or delivery.
  - The warranty services provided by our company is limited to products with quality problems, and does not include compensation for buyers' loss of interests. loss caused by accidents and any other indirect or direct loss:
  - The user should take the initiative to buy in the seller place according to the requirements to fill in necessary information in the warranty card.





Manufacturer: Shenzhen Hutianmei Technology CO., LTD Website: WWW. hutmtech. com Service Hotline: 13798197588

Address: 32 Building, the third Industrial Park, Houting, Shajing, Baoan District, Shenzhen, China

Executive Stander: GBT 7313-1987:GB17625.1-2012:GB8898-2011