

V7 PRO

60W 大功率重低音炮



规格及参数

型号	V7 PRO	频率响应	80Hz~18KHz
蓝牙版本	5.0	失真度	≤1%
传输范围	≥18M (空旷空间)	喇叭尺寸	φ66MM
输出功率	60W	播放时间	≥8H
电池电源	7.4V/6600mAh	充电时间	≤3.5H
输入电源	Type-C 5V/2.1A	产品尺寸	220*95*72MM

配件

 


3.5mm 音频线

 


Type-C 充电线

按键及功能

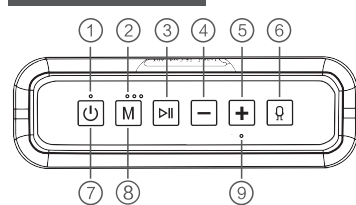

- ① 状态指示灯
- ② 音效指示灯
- ③ 播放/暂停/接听/挂断
- ④ 音量减/上一曲
- ⑤ 音量加/下一曲
- ⑥ 手机语音唤醒
- ⑦ 电源开/关机
- ⑧ 音效/模式切换
- ⑨ 麦克风
- ⑩ Type-C充电/音频接口
- ⑪ TF卡插口
- ⑫ AUX音频接口

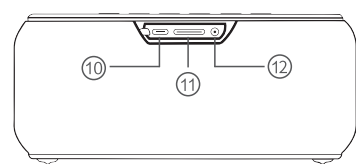

按键	操作	功能说明
	短按	1.在关机状态下，短按开机； 2.在开机状态下，短按关机。
	双击	在蓝牙待连接状态下，双击两下进入TWS配对模式；
	短按	播放模式切换：蓝牙、AUX/Type-C、TF卡；
	长按	音效切换：流行、人声、重低音；
	短按	1.音乐播放状态下：播放，暂停功能； 2.在来电的状态时，短按接通电话； 3.在已接听电话时，短按挂断电话； 4.在手机蓝牙已连接的状态下：快速双击，回拨手机最后拨出的电话。

	长按	1.在连接状态下：长按2s断开连接； 2.在来电的状态下：长按2s拒绝来电。
	短按	音量减，总共16级；
	长按	上一曲；
	短按	音量加，总共16级；
	长按	下一曲；
	短按	在连接状态下：短按唤醒手机语音助手；
	长按	1.连接状态下：长按2s断开连接并忘记蓝牙设备； 2.长按5s复位设备。

LED灯指示说明

① 状态指示灯 (“”) 键上方)

- 蓝牙待配对时蓝灯快闪；蓝牙已连接时蓝灯长亮。
- AUX/TF卡播放时，蓝灯慢闪；Type-C线连接播放时，红、紫灯交替闪烁。

② 音效指示灯 (“”) 键上方)

- 长按2s切换一次音效；
- 一颗白灯亮：流行
两颗白灯亮：人声
三颗白灯亮：重低音

TF卡/音频线模式

- 蓝牙音箱支持读取TF卡最大64GB，可支持音乐格式：APE/FLAC/WAV/MP3。
- 将TF卡插入卡槽，识别音频文件后自动播放。
- AUX、Type-C线插入设备后即可进行播放；如在已连接蓝牙状态，请按“M”键切换到音频线播放模式。（注意：使用Type-C线连接播放时，请使用原装或支持音频传输的线材）

TWS配对说明

- 将两台音箱开机（如果有蓝牙设备连接，必须先断开音箱与蓝牙设备的连接）；
- 双击其中一台“”键，即可进入TWS配对模式；
- TWS配对成功时会有提示音，此时两台音箱黄色指示灯长亮；
- 打开手机或其他蓝牙设备的蓝牙功能，找到并连接名称为“V7 PRO”的蓝牙；
- TWS配对成功的机器，以后每次开机机器会自动进行TWS配对，无需再重复连接操作；
- 如果机器曾经进行过TWS配对，请长按5s“”键进行复位，复位成功后重启机器，再参照以上1-4操作即可TWS配对成功；
- TWS模式下，通话时只有主音箱有免提功能，副音箱无声；
- TWS模式下，依然可以进行音效切换。

产品保修卡

尊敬的客户，感谢您购买本公司的产品。
为了能更好的为您服务，在购买产品后，请您妥善保管此保修卡。

维修记录	日期	故障原因及处理情况
产品名称		
产品型号		
客户名称		
客户电话		
购买日期		
客户地址		

V7 PRO

60W High Power Subwoofer



Parameter

Model	V7 PRO	F.R	80Hz~18KHz
BT version	5.0	Distortion	≤1%
BT range	≥18M (Open field)	Speaker unit	φ66MM
Speaker power	60W	Play time	≥8H
Battery	7.4V/6600mAh	Charging time	≤3.5H
Input power	Type-C 5V/2.1A	Product Size	220*95*72MM

Accessories

 


AUX cable

 


Type-C cable

Key Function

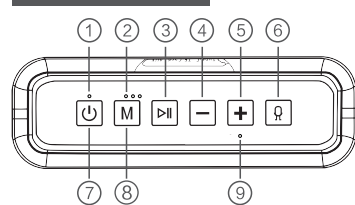

- ① Status Indicator
- ② Sound effect indicator
- ③ Play / Pause / Answer / Hang up
- ④ Volume down / Previous track
- ⑤ Volume up / Next track
- ⑥ Phone assistant wake up
- ⑦ Power on / off
- ⑧ Sound effect/mode switching
- ⑨ Microphone
- ⑩ Type-C charging / Audio port
- ⑪ TF card
- ⑫ AUX in

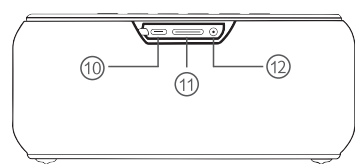

BUTTON	OPERATING	FUNCTION DESCRIPTION
	Short press	1. In the off state, short press to turn on 2. In the on state, short press to turn off
	Double click	In the state of Bluetooth to be connected, double-click to enter TWS pairing mode
	Short press	Play mode switching: Bluetooth, AUX / Type-C cable, TF card
	Long press	Sound switching: pop, vocal, heavy bass
	Short press	1. Music playback status: play, pause function 2. Call status: short press to connect 3. When the call is answered, short press to hang up 4. When the phone's Bluetooth is connected: Double-click quickly to call back the last call made by the phone

	Long press	1. Bluetooth connection status: long press for 2s to disconnect 2. When there is an incoming call: long press for 2s to reject
	Short press	Volume down, total 16 levels
	Long press	Previous track
	Short press	Volume up, total 16 levels
	Long press	Next track
	Short press	Bluetooth connection status: short press to wake up phone voice assistant
	Long press	1. Bluetooth connection status: long press for 2s to disconnect and forget the Bluetooth device 2. Press and hold for 5s to reset the device

LED indicator

① Status indicator (Above the "" key)

- The blue light flashes quickly when Bluetooth is ready to pair; The blue light is always on when Bluetooth is connected
- When the AUX / TF card is playing, the blue light flashes slowly; When the Type-C cable is playing, the red and purple lights flash alternately

② Sound effect indicator (Above the "" key)

- Press and hold for 2s to switch sound effects;
- A white light is on: Pop
Two white lights: Vocal
Three white lights on: Heavy bass

TF /Cable playback

- Bluetooth speaker supports reading up to 64GB TF card
Supports music format: APE / FLAC / WAV / MP3
- Insert the TF card into the card slot and automatically play the audio file after recognition
- AUX、Type-C cable can be inserted into the device to play; if it is connected with Bluetooth, please press the "M" key to switch to the audio cable playback mode

TWS pairing

- Power on the two speakers (if a Bluetooth device is connected, you must first disconnect the Bluetooth connection)
- Double-click one of the "" keys to enter TWS pairing mode
- After the TWS is successfully paired, there will be a beep. At this time, the yellow indicators of the two speakers are on
- Turn on the Bluetooth function of the mobile phone or other Bluetooth device, find and connect the Bluetooth named "V7 PRO"
- TWS paired successfully, the machine will automatically perform TWS pairing each time after turning on the machine, no need to repeat the operation
- If the machine has been paired with TWS, please press and hold the 5s "" key to reset; After the reset is successful, restart the machine, and then refer to 1 - 4 above to complete the TWS pairing
- In TWS mode, only the main speaker has hands-free function, and the sub speaker is silent during a call
- In TWS mode, you can still switch sound effects

Warranty card

Dear customer, thank you for purchasing our products
In order to serve you better, please keep this warranty card in a safe place

Maintenance records	Date	Malfunctions and causes
Product Model		
Your name		
Your phone		
Purchase date		
Your address		

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.