

Advanced Function

1. SMS Function

The walkie talkie can receive SMS. There will display a message icons when it receives a message. The following part is about how to read the message:

- Press MENU key into the list.
- Short press ▲ and ▼, choose the Message list.
- Press OK key then you can read the message list.
- Short press ▲ and ▼, choose the message you want to read then press OK key to check it.

E. Press MENU key in the list can display the submenu and you can delete the message you do not need alone or all of them.

NOTE: Only some models support this function.

2. Phone Call Function

The walkie talkie can make and receive phone calls but only the phone numbers in your Contacts.

You can control the walkie talkie make/receive the phone call or not and edit the Contacts by configuration software.

The following part is about how to make a phone call.

- Press MENU key into the list.
- Short press ▲ and ▼, choose the Contacts list.
- Press OK key then you can check the Contacts list.
- Short press ▲ and ▼, choose the name or phone number you want to call then press OK key to call it. Press BACK key to end the call.
- When there comes the call, you can press MENU key to take it and press BACK key to end the call.
- During the call, press PTT key to talk and release PTT key to receive the voice.

NOTE: only some models support this function.

3. User rights Setting

Different user rights will be assigned to all: high level, medium level and low level.

4. Interrupt Priority

High level user's can interrupt lower user's talk.

5. GPS and Tracking view

Open the SMART-PTT software and login the account whose the GPS information you want check. (Please inquire your dealer for the account and password.)

- Choose the group where the one you want to check.
- Choose the user you want to check.
- Double click the account and choose track view.
- The page switches to the map displays. If the account has been power on and successfully localized, it will display a portrait and account on the map.
- Move the mouse to an anchor point on the map then you can check the date and time which was localized.
- You can use this function to view an account's movement and time.

6. The Native GPS Information checking

The native walkie talkie is built-in the GPS information checking functions. You can directly check the native walkie talkie's current location information by using the one has GPS function.

- Open the GPS function of the native walkie talkie at the platform of Corget.
- Set the GPS function to effectiveness and programme the walkie talkie by the configuration software.
- When the walkie talkie has GPS function and the function is open, the GPS logo will be displayed at the status bar of LCD screen. It will

display the gray background before location, while the green background means locating successfully. Besides, it will voice prompt GPS locates successfully after the first successful location.

D. Press MENU key into the list.

E. Short press ▲ and ▼, choose the GPS Information list.

F. Press OK key to check the Latitude and longitude data of current GPS location.

NOTE: Only some models support this function.

7. SMART-PTT Information

You can send other users send the English or Chinese message less than 20 letters. (The walkie talkie can save 5 messages.) Open the SMART-PTT software, login the account which you want send out the messages. (Please inquire your dealer for the account and password.)

- Choose the group where the one you want to check.
- Choose the user you want to check. You can also press Ctrl button and use the mouse to MultiSelect the users.
- Right click the user name and choose the send message option. You can only send the messages to the online users.
- Input the words in the message edit box at the the lower right corner then send it out.

The way to check the SMART-PTT Information of the native walkie talkie:

- When the native walkie talkie receive the message from SMART-PTT platform, it will voice prompt the content of current message. Besides, the platform message logo will be displayed at the status bar of LCD screen.
- Press MENU key into the list.
- Short press ▲ and ▼ to choose the platform message then press OK key into the list.

D. Short press ▲ and ▼ to choose the message you want check and press OK key enter and check the message. alone in the group

8. LED Flashlight Function

Short press the Orange key to turn on LED flashlight at the top of the walkie talkie as the emergency flashlight.

9. Locking key function

You can set automatic lock or manual lock in the Setting list.

- Press MENU key into the list.
- Short press ▲ and ▼, choose the Setting list and press OK key into the list.
- Short press ▲ and ▼, choose the Automatic Lock list and press OK key into the list.
- Short press ▲ and ▼ to change the option number and press MENU key to save the data.
- Press MENU key to save the data or press BACK to cancel the operation.

F. When the Automatic Lock is on, there are no operation for 10 seconds. Only the PTT button and orange key can be used.

G. Long press Orange Key for 1 second can unlock it.

H. This function can be also set by the configuration software.

10. Backlight Mode

The backlight can be set in Setting list or the configuration software.

- It can be set to:
- AUTO: it will turn on automatically when there have keys operation or transmitting/receiving. If there are no operation for 10 seconds, it will turn off automatically.
 - Keep Turning on: the backlight will keep turning on.
 - Keys: it will not turn on when press PTT buttons or in receiving.

But it will turn on automatically when other operation on other keys, however, if there are no operation for 10 seconds, it will turn off automatically.

11. Keypad Beeper Setting

This function can be set in Setting list or the configuration software. It can be set to:

- On: it will have a beep when there has key operation which means the operation is successful.
- Off: there will have not keys beep.

12. Walkie Talkie Beep

This function can be set in Setting list or the configuration software. It can be set to:

- On: it will have a beep when press or release the PTT button, which means the transmitting mode starts or ends.
- Off: there will have no beep.

13. Language Selection

This function can be set in Setting list or the configuration software. It can be set to:

- Chinese: LCD menu will display in simplified Chinese and voice prompt is Chinese speech.
- Chinese Traditional: LCD menu will display in Chinese Traditional and voice prompt is Chinese speech.
- English: LCD menu will display in English and voice prompt is English speech.

14. Busy Channel Frequency

When this function is on, the walkie talkie can only receive but can not transmit after pressing the PTT button. At the same time, there will have a beep warning.

NOTE: This function should be set in the configuration software.

15. Time-out Timer(TOT function)

The transmitting time limitation can be defined in the configuration software. When this function is on, the transmitting time is within the defined time. It will not stop the warning tone after the defined time is over until releasing PTT switch. Besides, the transmitting mode will switch to receiving mode automatically.

The purpose of the Time-out timer is to prevent any single person from using for an extended period time.

16. Internet Time

When the walkie talkie has logged, it can synchronize the precise time automatically through the network.

NOTE: Only some models support this function.

17. Programming guide for TA388 software (via USB programming cable)

- Download, unzip and install the USB driver according to different operating system.
- Download, unzip and install the TA388 programming software.
- Connect USB programming cable to PC and open the software. The com port will be selected automatically when you open the software.
- Press and hold PTT key to power on the radio, the LED lights purple.
- Connect USB programming cable to the radio.
- Set the parameter and functions accordingly.
- Write to the radio.

Troubleshooting Guide

Voice prompt please check if UIM card is installed well.	1.No UIM card installed or insert UIM carderror. 2.The card is set with PIN code.
Voice prompt "not network".	Quick antenna connection check or finetune it. Check the network signal strength, restart the walkie talkie if necessary.
Voice prompt account or password is wrong or account information is not set.	Please contact your authorized dealer to reset the account password.
GPS can not locate.	GPS needs 1-3 minutes to locate for the first time. And it can not locate because the signal is weak indoors. Please move the walkie talkie outdoors and try again.
Voice prompt not group information.	Please contact your authorized dealer to reset the group.
Voice prompt not group to select.	Abnormal group information acquisition, please restart the walkie talkie.
LCD displays abnormal information.	Some kind of information is wrong and leads to walkie talkie abnormal, please restart the walkie talkie.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the radio transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each radio are performed in positions and locations (e.g. at the hand held & body-worn) as required by the FCC. For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an belt clip designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 3.5 cm from the body, or keep the radio at least 2.5 cm away from the face. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.