

User Manual

Mobile phone

T4001

Safety precautions

Before using your device, please thoroughly read the following safety precautions.

- User manual is for reference only. Descriptions here are based on the default setting.
- The actual product, depending on different regions, service providers, or model specifications, may vary.
- Large files or games that require high CPU and RAM usage will affect the overall performance of the device.
- Software, sound sources, wallpapers and other media provided with this device shall not be used for any commercial purpose. Users who illegally use the media would be completely responsible for infringing the copyright laws.
- Data services, such as uploading, downloading and auto-syncing, incur additional charges. Therefore, it is recommended to use Wi-Fi network when coming to large data transfers.
- If you have questions about the pre-installed apps on the device, contact a Service Centre. As for user-installed apps, please contact service providers.
- Modification of device's operating system or installation of unauthorized third-party software may damage your devices, cause data loss and even put your personal information in danger. These actions violate the device license agreement and will void your warranty.

Touchscreen

Tapping

To open an app, to select a menu item, to press an on-screen button, or to enter a character using the keyboard on the screen, tap it with your finger.

Dragging

To move an item, tap and hold it and drag it to the target position.

Tapping and holding

Tap and hold an item or the screen for more than 2 seconds to access available options.

Double-tapping

Double-tap on a message conversation to zoom in. Double-tap again to return.

Swiping

Swipe to the left or right on the Home screen or the Apps screen to view other panels. Swipe upwards or downwards to scroll through a webpage or a list of items, such as contacts.

Spreading and pinching

Spread two fingers apart on a webpage, map, or image to zoom in a part. Pinch to zoom out.

Home screen

Home screen

The Home screen is the starting point for accessing all of the device's features. It displays widgets, shortcuts to apps, and more.

To view other panels, swipe to the left or right, or tap one of the screen indicators at the bottom of the screen.

Adding items

Tap and hold an app or a folder from the Apps screen, and then drag it to the Home screen.

To add widgets, tap and hold an empty area on the Home screen, tap Plug in, tap and hold a widget, and then drag it to the Home screen.

Moving and removing an item

Moving

1. Tap and hold an item on the Home screen, and then drag it to a new location.
2. To move the item to another panel, drag it to the side of the screen.
3. You can also move frequently used apps to the shortcuts area at the bottom of the Home screen.

Removing

To remove an item, tap and hold the item. Then, click the delete icon on the upper left corner of app icon .

Creating folders

1. On the Home screen, tap and hold an app, and then drag it over another app.
Drop the app when a folder frame appears around the apps.
2. A new folder containing the selected apps will be created.
3. Tap Enter folder name and enter a folder name.

To add more apps to the folder, tap and hold another app, and then drag it to the folder.

Lock screen

Pressing the Power key turns off the screen and locks it. Also, the screen turns off and automatically locks if the device is not used for a specified period.

To unlock the screen, press the Power key and swipe in any direction.

You can change the way that you lock the screen to prevent others from accessing your personal information.

On the Apps screen, tap Settings → Security → Screen lock , and then select a screen lock method. The device requires an unlock code whenever unlocking it.

Notification panel

Using the notification panel

When you receive new notifications, such as messages or missed calls, indicator icons appear on the status bar. To see more information about the icons, open the notification panel and view the details.

To open the notification panel, drag the status bar downwards. To close the notification panel, swipe upwards on the screen.

Using quick setting buttons

Tap quick setting buttons to activate some features. Swipe to the left or right on the buttons area to view more buttons. To view more detailed settings, tap and hold a button.

Applications

Phone

Introduction

Make or answer voice calls.

Messages

Introduction

Send and view messages by conversation.

Chrome

Introduction

Search for information and browse webpages.

Camera

Introduction

Take photos and record videos using various modes and settings.

Uber

Introduction

Reserve a vehicle with your mobile app, and a limousine will pick you up to your destination in a few minutes.

infohub

Introduction

Infohub is a tool for watching news

Calculator

Introduction

Mobile phones directly perform mathematical calculations, switch to a scientific calculator landscape.

Optimization master

Introduction

Optimization of the master is to optimize the mobile phone system software, it provides mobile phone examination, boot speed, bulk unloading, file management functions of the four modules fully ef

fective and simple security and a number of additional tools. In addition, it can effectively help users understand their mobile phone software and hardware information, improve the phone boot speed, scan the dangerous software, maintain the normal operation of mobile phones.

Gallery

Introduction

View and manage photos and videos stored in the device.

Settings

Introduction

Customise settings for functions and apps. You can make your device more personalised by configuring various setting options.

Calendar

Introduction

There are four kinds of display mode:

- 1) Day Display a day's schedule. Or so can flip slide.
- 2) Week Show a week's schedule. Or so can flip slide.
- 3) Month The screen displays a monthly schedule (most recently clicked on the date) slide up and down on a monthly basis flip.
- 4) Agenda Displays a time space schedule.

Clock

Introduction

Set alarms, check the current time in many cities around the world, time an event, or set a specific duration.

Contacts

Introduction

Create new contacts or manage contacts on the device.

Downloads

Introduction

List download information.

File management

Introduction

Learn fast and fun to open your all stored in the cell phone store pictures, movies, music, documents, and other types of files.

FM Radio

Introduction

Before entering the FM radio, make sure the headset has been inserted, otherwise the application will not be able to enter the FM

Search Channel: Click on the menu button to automatically search button, it will automatically perform a channel search, when the search to a channel automatically stops after searching.

Favorite Channel: Click the + icon button, you can add the current FM channel to collection area, convenient next use.

Record Radio: Click on the menu button in the Record button, the recording broadcast content currently listening

Speakers: radio play when clicking the top right button on the headset, the radio broadcast sound from speaker

SIM Toolkit

Introduction

After insert SIM card, we can .

Google apps

Google provides entertainment, social network, and business apps. You may require a Google account to access some apps. Refer to Accounts for more information.

To view more app information, access each apps in the help menu.

Tips:Some apps may not be available or may be labelled differently depending on the region or service provider.

Google

Search quickly for items on the Internet or your device.

Gmail

Send or receive emails via the Google gmail service.

Maps

Find your location on the map, search for locations, and view location information for various Places.

Play Music

Listen to music sorted by category and customise playback settings.

Photos

Photos and videos appear here. Also, you can share photos or videos to your friends.

Play Store

Play store can provide a variety of rich application software, based on the recommendation, function, ranking and classification. WIFI network, convenient data read from the server software. Touch "Play store" icon to enter the application function of the market. The "recommended" "classification" "list" "search" and "download list", click into the view related software, click on the software to download and view details.

Google+

Search quickly for items by saying a keyword or phrase.

Voice Search

Search quickly for items by saying a keyword or phrase.

YouTube

Watch or create videos and share them with others.

Troubleshooting

Before contacting the Service Centre, please attempt the following solutions. Some situations may not apply to your device.

The touchscreen responds slowly or improperly

If you attach a protective cover or optional accessories to the touchscreen, the touchscreen may not function properly.

- If you are wearing gloves, if your hands are not clean while touching the touchscreen, or if you tap the screen with sharp objects or your fingertips, the touchscreen may malfunction.
- The touchscreen may malfunction in humid conditions or when exposed to water.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is updated to the latest version.
- If the touchscreen is scratched or damaged, visit a Service Centre.

Your device does not turn on

When the battery is completely discharged, your device will not turn on. Fully charge the battery before turning on the device.

Calls are not connected

- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number you are dialling.
- Ensure that you have not set call barring for the incoming phone number.

Others cannot hear you speaking on a call

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

Your device displays network or service error messages

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again. While moving, error messages may appear repeatedly.
- You cannot access some options without a subscription. For more information, contact your service provider.

A cellular network or the Internet is often disconnected or audio quality is poor

- Ensure that you are not blocking the device's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. You may have connectivity problems due to issues with the service provider's base station.
- Move to another area and try again.
- When using the device while moving, wireless network services may be disabled due to issues with the service provider's network.

When you turn on your device or while you are using the device, it prompts you to enter one of the following codes:

- Password: When the device lock feature is enabled, you must enter the password you set for the device.
- PIN: When using the device for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using the Lock SIM card menu.
- PUK: Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
- PIN2: When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For more information, contact your service provider.

The battery icon is empty

Your battery is low. Charge the battery.

The battery does not charge properly (For Service-approved chargers)

- Ensure that the charger is connected properly.
- Visit a Service Centre and have the battery replaced.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Your Mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power

output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.22 W/Kg and when worn on the body, as described in this user guide, is 0.64 W/Kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is 0.68 W/Kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: 2AKSAMOVIC-T Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.