Smart Bulb User Manual Safety

FCC ID: 2AKSESB_User Manual

Please read all of the safety and operating instructions before using your device:

- 1. The Products are only for indoor use.
- 2. Do not disassembly the device or attempt to repair.
- 3. Plug the power cables into properly grounded electrical outlets in order to help prevent against electrical shock.
- 4. Disconnect the power before you clean the device.
- 5. When abnormalities of the device occur, turn off the main power supply from circuit breaker. Wait a moment before turn on the power supply again.
- 6. The devices are not suitable for use in situations or environments where failure, delay or errors or inaccuracies in the data or information provided by the devices could lead to death, personal injury or severe physical or environmental damage, including without limitation in connection with the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, or life support systems.
- 7. Do not subject the product to wet, moist or excessively dusty environments as this may cause damage.



8. The bulb allows wireless dimming. The bulb is not suitable to use with wired dimmers.



Light Bulb Specification

Model No: SBR-600/ SBW-1000

Input: AC 120V~, 50-60Hz

Rated Wattage: 7W(SBR-600)/12W(SBW-1000) Environment: Indoor use -20°C to 40°C (Operating)

Installation and Setup of SmartiBlue Devices

To install SmartiBlue app

Step 1:

Download the SmartiBlue app from App Store[®] or Google Play[™].



Once SmartiBlue app is installed, launch the app. Make sure your mobile device are connected with Wi-Fi and Bluetooth.


Step 2:

Log into your Smart iBlue account, or sign up a new account by following the instruction in the app.



Step 4:

After you have logged in your account, tag '+' icon in the home page of your Smart iBlue app

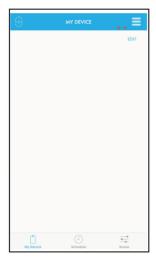

Instruction For Smart Bulb


Step 1: Install the Light Bulb and turn on the main power switch.

Step 2: The light bulb will blink steadily, waiting to be associated with your mobile device. In 'My Device' page, tap -'Search Device' to search the device

Step 3: The light bulb will blink rapidly when associating. The light becomes solid when the device associated successfully. The notice would be popped out to indicate that the association process is finished.



Here is the control panel. You have successfully set up your SmartiBlue Light Bulb now.

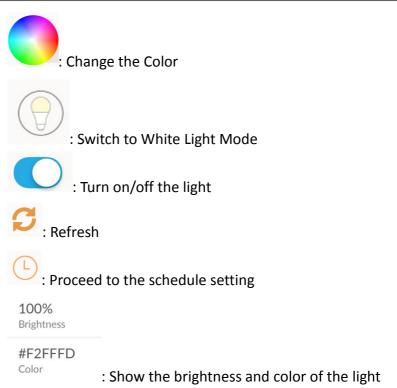

Disconnection of Smart Bulb

- 1. Power cycle the bulb 6 times, enter the disassociate mode.
- 2. The light bulb will blink steadily, waiting to be associated with your mobile device. It means you successfully disassociate the smart bulb.

Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).