<b>XM</b> 雄迈		版本修改说明		一 模切线
材质要求	105铜版纸	V1.0(20210519)	初版发行	 
压线尺寸	100x70mm			
印刷颜色	CMYK4色印刷			
表面处理	/			
成型公差	±1mm 风琴折			

# **Smart Robot Camera**

Quick Manual for Android and iOS

## Packing list

After open packing list box, please check product body and accessories as helow:







Power adapter x1

Camera x1 Pov

Power cable x1





Accessories ki

Accessories kit x1 Positioning paper x1 Fixed accseeories x1

#### Interface

Before use, please pay attention to the interface and button of

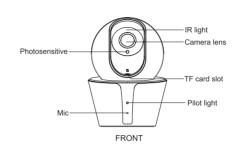

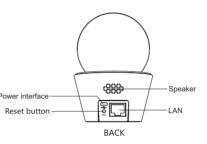

## Operation

#### 1.Download APP

Tips one: Scan QR code.



iCSee

Tips two: Search "iCSee" in the App store and download

#### 2.Power on

If you need local storage, please install the memory card firstly, then power on the device (the memory card does not support hot swapping, please plug and unplug the memory card when the device is powered off). Cloud storage is recommended, which is safe and convenient. Details See "Step 4" for operation.

#### 3. Camera configuration

- 01.Connect your phone to WiFi.
- 02. Open the iCSee app, register an account and login.
- 03. Click the "+" button to add device(Figure 1), choose "Add WiFi camera" (Figure 2), according to the device voice prompt, according app interface guide to complete the network configuration (if the voice prompt doesn't appear for a long time, you can press the reset button to restore the device factory settings, and then do the network configuration).
- 04. After adding successfully you can open the live view, do the relevant operate and settings.



Figure 2

Due to the app regular optimization and upgrade, the content of the interface base on the actual app

#### Note:

- ① Add WiFi camera: It is suitable for adding equipment after initial use and restoring factory settings.
- $\textbf{② Add 4G/5G camera:} \ \text{Suitable for adding 4G / 5G devices}.$
- ③ Scan the QR code to add the camera: Scan the QR code of the device shared by others or add the device by entering the device serial number (the device can only be shared to others after it has been connected to the network and successfully added).
- Add camera(AP mode): Allocate the network to the router and add the device through the AP mode of the device (press the device reset key three times to enter the direct connection mode, and the wireless hotspot password is 1234567890).
- AP mode connection: In the absence of an external network environment, the mobile phone can add devices by connecting to the AP hotspot provided by the device (press the device reset key three times to enter the direct connection mode, and the wireless hotspot password is 1234567890).
- Add the camera on same router: When the device has been connected to the router but deleted from the app, it is necessary to add the device again or connect the device to the router through cable, which can be added in this way.

### 4.Open cloud storage

Click "cloud storage" icon under device list(Figure 3), follow guide on APP page, understand and finish steps of cloud storage. There are several options for you to choose.

Figure 3



# FAQ

### Q: How does the camera store recordings?

- A: 1. Local TF card storage, maximum support 128G, automatically delete earlier videos after the TF card is full, and loop recording.
- 2. cloud storage.
- Q: How to deal with the issue when forgot the device access password?
- A: Reconnect the device after restoring the device to factory settings and set a new password.
- **Note:** The access password involves privacy and security, please treat it with caution.
- Q: How to deal with the issue if the camera cannot be connected or abnormally offline during use?
- A: 1. Check whether the camera power supply and router network are normal.
- Unplug and plug the power of the camera to restart the camera.
- 3. Restore the camera to the factory settings, and then re-add the device according to the instructions.

Note: The camera currently only supports 2.4G band WiFi, cannot support 5G band WiFi, and does not support WiFi with hidden SSID signals, WPA/WPA2 enterprise WiFi and bridged networks.

#### **⚠** Notice

- Please change the user password while using this product to avoid being misappropriated by criminals.
- 2. Do not install the device in a place that is damp, dusty, or accessible to children.
- Please use and store within the allowable temperature and humidity range, and do not disassemble the equipment at will.

## ⚠ Directions

- Please refer to the actual product, the manual is for reference only.
- The APP and product firmware will be updated from time to time. You can upgrade to the latest firmware online by yourself without notice. The manual is for reference only.
- The manual may contain technically inaccurate parts or parts that are inconsistent with product functions or printed errors. Please refer to our company's final interpretation..

# **Warranty Card**

Product Name	Model	
Purchase Date	Purchase Store	
Cause		
Process		
Customer Name	Customer Gender	
Customer Phone	ZIP	
Address		

Warranty period: one year. This warranty card is only for our company's products.

## **FCC Warning**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interferenceto radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# **Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.