


# SwitchBot Indoor Cam

## User Manual

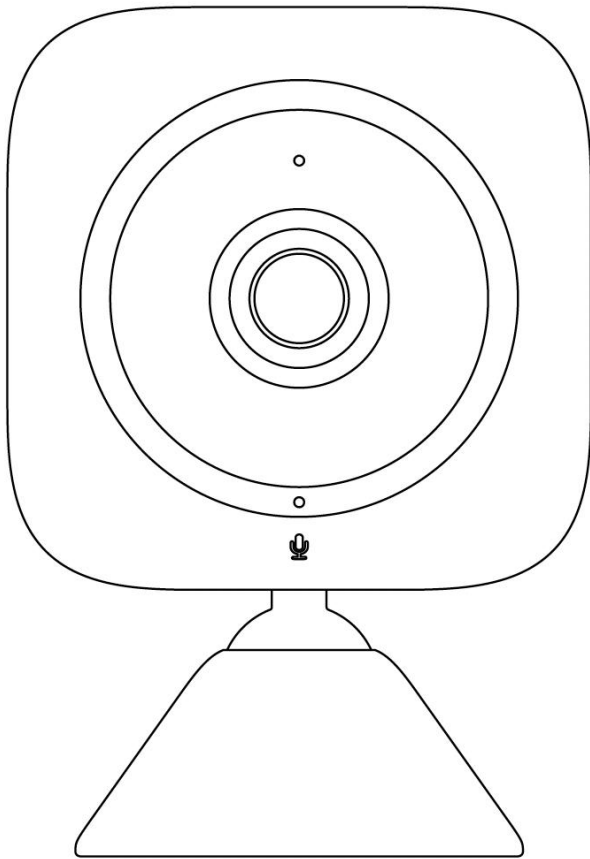

### In the Box

Indoor Cam x 1

Base x 1

User Manual x 1


3M Sticker x 1

Screw Pack (2\*M2.6 screws) x 1

Micro USB Cable (2m) x 1

USB Adaptor x 1

# Device Instruction

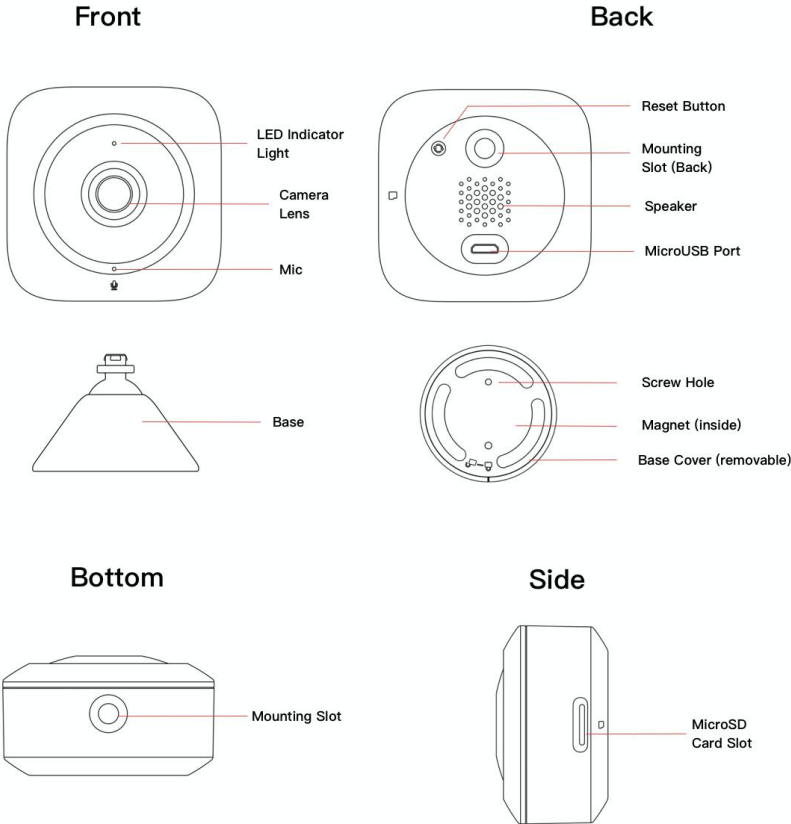

## Front

LED Indicator Light

Camera Lens

Mic

Base

### **Back**

Reset Button

Mounting Slot

Speaker

MicroUSB Port

### **Bottom**

Mounting Slot

### **Side**

MicroSD Card Slot

## **Preparation**

- A smartphone or tablet device running iOS 9.0+ or Android 5.0+
- Make sure there is an accessible 2.4GHz Wi-Fi network

## **Getting Started**

Step 1 Download the SwitchBot app on App Store or Google Play Store.



Step 2 Create a SwitchBot account and sign in into the app.

Step 3 Place Indoor Cam close to the router. Connect the USB cable to the back of Indoor Cam and to a 5V 1A USB adaptor. Then plug it into a power outlet.

Step 4 On the app, tap the "+" icon on the top right of the Home page. Tap the "Indoor Cam" icon and follow the instructions to complete the setup.

## Light Indication

LED Status	Description
Solid green	Online
Flashing green	Connecting to Wi-Fi/Pairing
Solid red	Booting up
Blinking red slow	Updating firmware
Flashing red	Ready for setup

# Installation

## Choose a spot

Choose a spot where it can provide the desired view of your home, within reach of a power outlet.

## Place Indoor Cam on a table or shelf

Place Indoor Cam directly on a table or shelf with or without the Base.

## Stick Indoor Cam to a flat surface

Mount the Base to the back or the bottom of Indoor Cam. Then stick it to a flat surface using the 3M sticker.

## Stick Indoor Cam to an iron surface

Mount the Base to the back or the bottom of Indoor Cam and attach it to an iron surface or a magnet.

## Mount Indoor Cam to a wall

Mount the Base to the back or the bottom of Indoor Cam. Then remove the bottom cover of the Base and use the provided screws to mount Indoor Cam to a wall. Refer to our support page for detailed steps.

## How to Reset

Press the Reset Button on the back of Indoor Cam for 3 seconds or until a ring tone is heard.

## Return and Refund Policy

SwitchBot Indoor Cam has one year warranty (start from the purchasing day). The situation below do not fit the Return and Refund Policy

- Intended damage or abuse.
- Inappropriate storage (drop down or soaking in water).
- User modify or repair.
- Using loss.
- Force majeure damage (natural disasters).

If you have any concern or problem when using our products, please kindly send feedback from the Profile > Feedback page in the SwitchBot app.

## Contact and Support

Setup and Troubleshooting: [support.switch-bot.com](https://support.switch-bot.com)

Support Email: [support@wondertechlabs.com](mailto:support@wondertechlabs.com)

Feedback: If you have any concern or problem when using our products, please kindly send feedback from the Profile > Feedback page in the SwitchBot app.

# FCC Warning

Manufacturer's Name: Woan Technology (Shenzhen) Co., Ltd.

Sample Description: SwitchBot Indoor Cam

Trade Mark: SwitchBot

Model number: W1301200

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC RF exposure statement:

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.



## **Safety Information**

- This camera is for indoor use only.
- Keep the device away from water, fire, humidity or hot environments.
- Unplug this device during lightening storms or when unused for long periods of time.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Do not use the device where wireless devices are not allowed.
- Adapter shall be installed near the equipment and shall be easily accessible.