

LHB15, SBTH4.1 A1

US-EN	2
--------------------	----------

Table of Contents

Important Safety Instructions	4
Safety.....	6
Trademarks	12
Intended use.....	12
Items included	13
Technical data.....	14
Operating environment	15
Copyright	15
Overview of the controls and button functions	15
Before using	16
Charging the battery	16
Acoustic signals.....	16
First use	17
Powering the headphones on/off	17
Connecting the headphones.....	17
Connecting the headphones to two Bluetooth® devices.....	18
Wired headphone use	18
Wearing the headphones	19
Playing music.....	19
Making calls.....	20
Deleting the connection list	21
Transport or storage when not being used.....	21
Troubleshooting	22
Environmental information and disposal specifications	22
FCC hints	23
Warranty	24

Congratulations!

By purchasing the SilverCrest SBTH 4.1 A1 Bluetooth® headphones, referred to as the headphones in the following text, you have chosen a high-quality product.

The headphones make it possible for you to listen to music from your smartphone or music player without wires. Their light construction provides you with great wearing comfort and crystal-clear sound while interfering noise is greatly eliminated. Before you start using the headphones, get familiar with them and read this user manual carefully. Primarily pay attention to the safety instructions and utilize the headphones only as described in this user manual and for the specified purposes.

Keep this user manual for later reference. If you give the headphones to someone else, also give them all the documents.

Important Safety Instructions

- **Read the instruction manual in its entirety before starting the device.**
- **Keep the device away from children.**
- Do not use the device if damaged.
- Only use the device according the instructions contained in this manual.
- Do not use in tropical regions.
- **Keep the instruction manual in a safe place.**

Safety Alert Symbol

This is the safety alert symbol. It is used to alert you to risk of personal injury. Observe all safety notices that follow this symbol to avoid possible injury or death.



Safety alert symbol

Meaning of signal words

WARNING

WARNING indicates a risk or hazard that, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a risk or hazard that, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE indicates a situation which could lead to damage to property.



Take care when using headphones.

Listening for a long time at high volume could damage your hearing. Before you use the headphones, set the volume to minimum.



This symbol indicates other important information on the topic.

Terminology

As used in this instruction manual in general and with regard to safety information, safety notices, and warnings in particular, the following words have the following means:

- May: This word is understood to be permissive.
- Shall: This word is understood to be mandatory.
- Should: This word is understood to be advisory.

Safety

IMPORTANT SAFETY PRECAUTIONS

Always observe the following safety precautions:



Risk of explosion!

- Do not throw the device into fire.

**WARNING****Children and people with disabilities**

- Keep the device away from children under the age of eight and people with restricted physical, mental, or sensory abilities.
- Keep children away from the device. Risk of small parts being swallowed, resulting in the risk of serious injury or death.
- Keep the plastic bags away from children. Risk of suffocation!
- The device and packaging material are not toys and should be kept away from children.

**WARNING****Wireless interface**

- Switch the device off if you are on a plane, in a hospital, operating room, or in the vicinity of a medical electronic system.
- The radio waves transmitted can damage the functioning of sensitive devices.

- Keep the device at least 8 in. away from a pacemaker or an implanted defibrillator.
- When wireless components are switched on, do not place the device in the vicinity of flammable gases or in a potentially explosive environment (for example, paint shop). Risk of explosion or fire.



WARNING

Risk coming from too high a volume



Take care when using headphones. Listening for a long time at high volume could damage your hearing.

Do not use your headphones with the volume set too high. You could damage your hearing and disturb the people around you. At a maximum, set the volume so that you can still hear ambient noises. Keep in mind that you could perceive ambient noise in a different and unusual way.

Do not use the device in dangerous situations, for example, when in traffic, working with machines or

other situations that require your complete attention. The sound could distract you or cause you to miss what is happening around you.

Obey the regulations and laws of the country of use.



Cables

- Always lay the cables plugged into the device in such a way that nobody can stand or trip on them.
Risk of injury!



Maintenance

- If the device is damaged, send or bring it in for repairs by an authorized technician.
- If the device is not working properly or has been dropped, it must be repaired.
- If you notice any smoke, unusual noises or smells, immediately switch off the device and unplug any cables that may be connected to the device.

- Do not use the device if defective until it has been checked by a technician.
- All repair work should only be carried out by qualified technicians.

NOTICE

Cleaning

- Clean the device using a clean, dry cloth only.
- Do not use corrosive liquids.
- Never open the housing of the device, as this will void your guarantee.

NOTICE

Please note the following:

- Protect the device from intense heat or artificial light, sunlight and open fire.
- Do not expose the device to shock, vibration, or force.
- Never pull on the cable. Always use the plug when removing the cable. Do not bend the cable or

allow it to come into contact with heat or sharp surfaces.

- Do not place foreign objects into openings on the device.
- Do not place the device close to magnetic fields (for example, other speakers).
- Do not expose the device to major temperature fluctuations. If this occurs, wait for approximately two hours to start the device.
- The radio waves transmitted can cause static noise in hearing aids.
- The range of the Bluetooth® connection depends on the environmental and ambient conditions.
- It is also possible for unauthorized third parties to receive this data via Bluetooth® connections.

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TARGA GmbH is under license. Other trademarks and the trade names are those of their respective owners.

USB is a registered trademark.

 
Other names and products can be the trademarks or registered trademarks of the corresponding owners.

Intended use

These headphones are a consumer electronics device and are used to reproduce music at a suitable volume. In addition, the headphones can be used as hands-free equipment. The headphones are intended only for private use, not for industrial or commercial purposes. The headphones should not be used in tropical climates. The manufacturer denies any and all liability from damage or malfunctions resulting from unauthorized modifications to the headphones. Use only accessories specified by the manufacturer. Obey the regulations and laws of the country of use.

Items included

Take the headphones and accessories from the packaging and completely remove all packaging materials. Make sure that you have received all items. Report any missing parts immediately to the Service department.

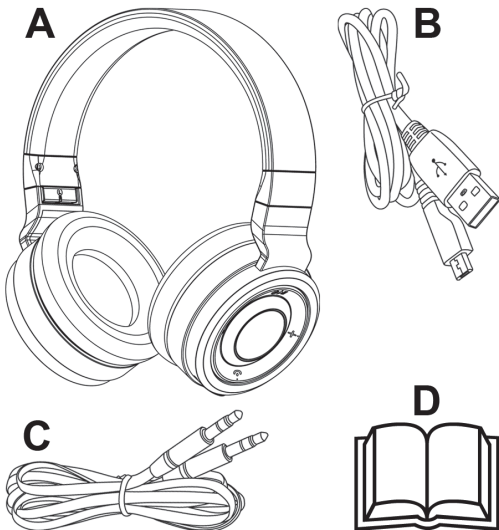

- A SilverCrest SBTH 4.1 A1 Bluetooth® headphones
- B USB charging cable
- C 1/8 in. (3.5 mm) auxiliary audio cable
- D This user manual (symbolic representation)

Technical data

Operating voltage	5 V ^{DC}
Rechargeable battery	Li-Po, 3.7 V
Battery capacity	400 mAh
Bluetooth [®] specification	v4.1
Profile support	A2DP, AVRCP, HSP, HFP
Frequency range, headphones	20 Hz - 20 kHz
Range, Bluetooth [®] operation	Up to 400 inches
Charging time	About 3.5 hours
Music playing time	About 15 hours*
Talk time	About 15 hours*
Impedance (for wired operation)	About 32 ohms
Wide band characteristic voltage (for wired operation)	About 80 mV
Dimensions (W x H x D)	Approx. 7.13 x 7 x 3.15 inch/ 181 x 180 x 80 mm
Weight	Approx. 0.57 lbs./ 260 g
Operating temperature	23°F to 113°F (-5°C to +45°C)
Storage temperature	14°F to 113°F (-10°C to +45°C)
Humidity	Max. 85% relative humidity (non-condensing)

* At medium volume

Technical data and design subject to change without notice.

Operating environment



The headphones are not designed to operate in rooms with a high temperature or humidity (for example, bathrooms) or those with a large amount of dust. Operating temperature and operational humidity: 23°F to 113°F (-5°C to +45°C); max. 85% relative humidity

Copyright

All contents of this user manual are copyrighted and are provided to the reader as an information source only. Copying or duplicating data and information is prohibited without the express written permission of the author. This also applies to the commercial exploitation of the contents and data. The text and figures are up to date at the time of printing.

Overview of the controls and button functions

A figure showing the controls with the reference numbers used can be found in the fold-out inside page of this user manual. You can leave this page folded out while you read the other sections of the user manual. This gives you an immediate reference to the control you are viewing.

- 1 Headband
- 2  button
- 3 - button
- 4 + button
- 5  button
- 6 Speaker
- 7 USB charging connection
- 8 LED
- 9 1/8 in. jack (3.5 mm)
- 10 Microphone

Before using

Charging the battery

Before you start using the device or if the built-in battery is drained, do the following:

- Connect the USB charging cable (B) to the USB charging connection (7) and to an unused USB port of your powered computer or a USB power adapter (not included).
- The LED (8) is orange while charging. Once the battery is completely charged, the LED (8) turns blue.

When the battery charge is low, the LED (8) flashes orange once every 20 seconds and 4 beeps sound at the same time.



Keep in mind that the battery will only reach full capacity after 4-5 complete charge/discharge cycles.


Acoustic signals


The headphones will signal acoustically for certain events. You can see these signals in the following table:

Event	Acoustic signal
Powering on	Tune
Powering off	Tune
Successful pairing	Tune
Bluetooth® connection made	Tune
Incoming call	Ring tone
Minimum volume reached	Beep
Maximum volume reached	Beep
Low battery	Every 20 seconds, 4 beeps sound

First use

 
Powering the headphones on/off

Power the headphones on by pressing the  button (2) for about 4 seconds. The LED (8) now flashes orange indicating Standby mode. With the headphones are being powered on for the first time and they have never been connected to a device before, Pairing mode starts automatically. In Pairing mode, the LED (8) flashes blue and orange alternately. See the next section for connecting your device.

Press the  button (2) for about 4 seconds to power the headphones off again. The LED (8) flashes orange several times while powering off.

Connecting the headphones

Proceed as follows to connect the headphones to your device:

- Power off the headphones.
- Press the  button (2) for about 6 seconds to start Pairing mode.
- The LED (8) now flashes blue and orange alternately. The headphones are now in Discovery mode. In Discovery mode, you can connect a compatible device to the headphones using the Bluetooth® function.
- Now connect your smartphone or audio/media player to the headphones using Bluetooth®. To do this, follow the user manual of your smartphone or media player. Select the SBTH 4.1 A1 device from the list of discovered devices and make the connection. If you are asked for a PIN, enter "0000".

Once the connection is made, the LED (8) flashes blue once briefly about every 4 seconds. Once your device is powered off or is out of range, the headphones go into Standby mode (not connected) and the LED (8) flashes blue quickly.

If you want to connect a different device to the headphones, you must repeat the pairing process as described previously.

As soon as the previously connected device comes into range of the headphones, the connection is automatically made. In some cases, you have to confirm the connection on your device.

Connecting the headphones to two Bluetooth® devices

You can connect the headphones simultaneously to two Bluetooth® devices. If you have already connected one device to the headphones, proceed as follows to connect another device:

- Power off the headphones and deactivate the Bluetooth® function of the first device.
- Power on the headphones again and connect to the second device. To do this, follow the previous section “Connecting the headphones.”
- After making the connection, activate the Bluetooth® function of the first device. The connection between the headphones and the first device is made automatically.

Wired headphone use

As an alternative, you can also connect the headphones (A) to your audio source using the supplied 1/8 in. (3.5 mm) auxiliary audio cable (C). To do this, plug one end of the 1/8 in. (3.5 mm) auxiliary audio cable (C) into the 1/8 in. (3.5 mm) jack (9) and connect the other end to your audio source. In wired use, the headphones act like headphones without Bluetooth® and can also be used when the battery is drained. Now control the volume directly at your audio source. In this mode, the buttons on the headphones (A) do not work.

Wearing the headphones

To wear the headphones correctly, pay attention to the writing on the inside of the headband (1) directly over the speaker (6): R = right, L = left. The buttons and the LED (8) are on the right side.

You can change the size of the headband (1) by pulling the speaker (6) out of the headband (1) a bit or pushing it back into the headband (1) again. This ensures maximum wearing comfort.

Playing music



All the functions described in the following depend on the functions provided by the cell phone or media player used.

Possibly, not all functions are supported.









You can hear music in the headphones once you have connected the headphones to a smartphone or a music player. The following functions are then available:

Function	Action
Play	Press the ▶ button (2) briefly
Pause	Press the ▶ button (2) briefly
Next song	Press the + button (4) briefly
Previous song	Press the - button (3) briefly <u>or</u> press the - button (3) briefly twice
Increase volume	Press and hold the + button (4)*
Decrease volume	Press and hold the - button (3)*

* A beep sounds when the maximum or minimum volume is reached.

Making calls


You can make calls with the headphones if you have connected the headphones to a cell phone. You can use the following functions:

Function	Action
Answer call	Press the  button (5) briefly
End call	Press the  button (5) briefly
Reject call	Press the  button (5) for about 2 seconds until you hear a beep
Redial	Press the  button (5) briefly twice
Increase volume	Press and hold the + button (4)
Decrease volume	Press and hold the - button (3)
Transfer a telephone call from the headphones to the cell phone	Press the  button (5) for about 2 seconds until you hear a beep (while the call is still active)
Take over a telephone call from the cell phone to the headphones	Press the  button (5) for about 2 seconds until you hear a beep (while the call is still active)
Accept a new call and end the current call *	Press the  button (5) once briefly.
Switch between two calls *	Press the  button (5) briefly twice

* This function must be supported by your network provider and be activated in your smartphone.

Deleting the connection list

The headphones save the devices last connected in a connection list. You can delete this connection list as follows:

 
- Start the Pairing mode as described in the section “Connecting the headphones.” The LED (8) flashes blue and orange alternately.
- Press the  button (2) briefly twice. The LED (8) stops flashing and the connection list is deleted. A beep sounds and the LED lights up violet briefly.
- Now, the headphones are again in the Pairing mode and the LED (8) flashes blue and orange alternately.



Before you give the headphones to another person, delete the connection list so they cannot connect to your cell phone by accident.

Transport or storage when not being used

If you are not going to use the headphones (A) or you wish to transport them, you can fold them together to save space as shown in the picture. To maintain the capacity of the battery, it should be recharged regularly if you are going to store it for a long time.

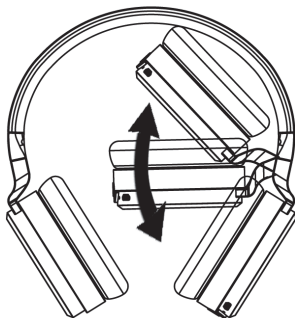

Troubleshooting

You cannot power on the headphones

- Charge the battery.

There is no beep when Bluetooth® connects

- Power on the headphones.
- Try to connect the headphones again to your device.

A Bluetooth® connection is not made

- Check whether the Bluetooth® function of your device is active.
- The distance between the headphones and your device is too large, get closer.
- Remember that a Bluetooth connection is broken as soon as a 1/8 in. (3.5 mm) connector is plugged into the 1/8 in. (3.5 mm) jack (9).

Not all the functions described work

- All the functions described depend on the functions provided by the device used.

Environmental information and disposal specifications

Disposing of packaging



Sort the packaging, before you dispose of it. Dispose of paperboard and cardboard with the recycled paper service and wrappings with appropriate collection service.

Disposing of used devices



Do not dispose of used devices together with household waste! If at any time in the future you should not use this device anymore, please dispose of it in compliance with the applicable regulation in your state or country. This ensures professional recycling of used devices and excludes negative consequences for the environment.

Make sure that the disposal is in compliance with local regulations and EPA recommendations (www.epa.gov).

Questions?

- Call customer service at 1 (844) 543-5872
- Visit the Website Customer Service Platform at www.lidl.com/contact-us

FCC hints

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly agreed by the party responsible for compliance may void the user's authorization to operate the device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate frequency energy and, if not installed and used in accordance with the instructions, may

cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device interferes with radio or television reception, which can be determined by turning the device off and on, the user is encouraged to resolve this issue by carrying out one or more of the following measures:

- Readjust or relocate the receiving antenna.
- Increase the distance between the device and receiver.
- Connect the device to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

FCC RF Exposure Information:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

Warranty

What does this warranty cover?

The warranty covers:

- Damage, breakage, or inoperability due to defect.
- Damage not accounted by normal wear and tear or following the safety and maintenance instructions provided in the user manual.

What is not covered by the warranty?

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;
- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (eg., lightning, fire, water, etc.).

- Tampering with the product (such as removing cover, unscrewing screws etc.)

What is the period of coverage and warranty resolution?

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

What will we not do?

We will not:

- Start a new warranty period upon product exchange;
- We will not repair product.

How to process the warranty?

We recommend first either:

- Call customer service at 1 (844) 543-5872
- Visit the Website Customer Service Platform at www.lidl.com/contact-us
- Visit a LIDL store for further assistance

To ensure the quickest warranty return process, please have the following available:

- The original sales receipt that includes the date purchased;
- The product and manual in the original package;
- A statement of the problem.

How does state law relate to this warranty?

Any State Laws that contradict or modify the warranty listed here to the consumer's benefit will be followed.

Country of origin: China

