

AURA True Wireless Earbuds User Manual

PACKAGE WITH:

PATW-1025-TL
PATW-1025-WH
PATW-1025-BL
PATW-1025-PK
PATW-1025-PR


DATE:

05/12/2023

DESIGNER:

Kevin Candela
kecallstate@gmail.com

COLORS:

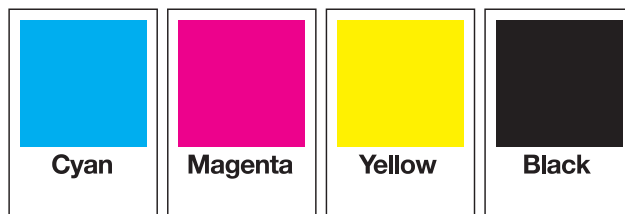

NOTES:

Artwork is 100% scale

Instruction Manual, 1 Sheet Folded, Printed Both Sides

OUTSIDE PRINT

! FOR PRODUCTION PLEASE UPDATE FCC ID # FOR CUSTOMER FIVE BELOW

INSIDE PRINT

177.8 mm



FCC ID: 2AKZ8-TWS023

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



BATTERY SAFETY: This product is fitted with a Li-Polymer battery. Do not damage, open or dismantle the battery and do not use it in damp and/or corrosive conditions. Only use compatible chargers. Never dispose batteries in a fire and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

BATTERY DISPOSAL: The crossed-out wheeled-bin symbol means that you may not dispose of this product together with general household waste; instead, take it to a recycling point for electrical and electronic equipment. For more information about local recycling points, contact your local authority, civic amenity site or the business where you purchased this product. The separate collection and recycling of used items of electrical and electronic equipment prevents any harmful substances they contain from harming human health and polluting the environment.

Please keep this information for later reference.

WARNING: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

© 2023 PRIMEAUDIO
 240 W. 37TH ST. NEW YORK, NY 10018
 THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY BLUETOOTH SIG, INC., AND ANY USE OF SUCH MARKS BY IWORLD IS UNDER LICENSE.
 GOOGLE AND THE GOOGLE ASSISTANT ARE TRADEMARKS OF GOOGLE INC., REGISTERED IN THE U.S. AND OTHER COUNTRIES.
 APPLE, IPOD, IPAD, IPHONE, AND SIRI ARE TRADEMARKS OF APPLE INC., REGISTERED IN THE U.S. AND OTHER COUNTRIES.
 ALL OTHER TRADEMARKS AND TRADE NAMES ARE THOSE OF THEIR RESPECTIVE OWNERS. ACTUAL PRODUCT MAY DIFFER SLIGHTLY FROM IMAGE SHOWN. MADE IN CHINA.

AURA

true wireless earbuds



INSTRUCTION MANUAL


PrimeAudio®

BACK COVER

FRONT COVER

215.6 mm

PRODUCT DIAGRAM

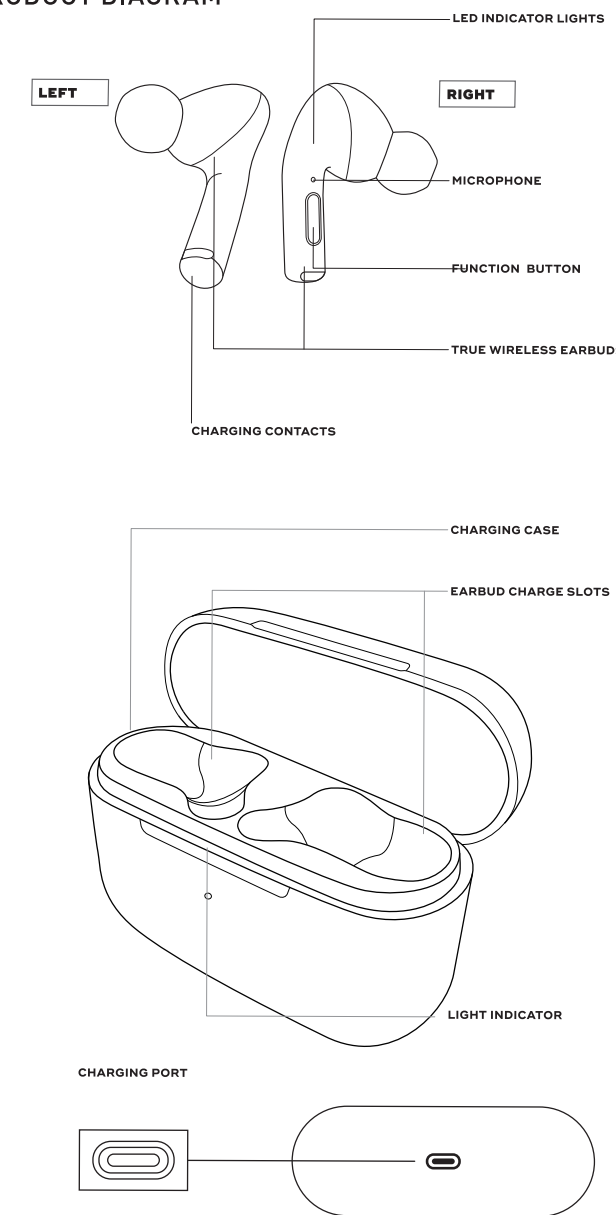

INSTRUCTION MANUAL

Bluetooth® True Wireless Cord-Free Earbuds

FEATURES

- Works with all Bluetooth®-enabled devices
- Stream audio wirelessly via Bluetooth technology in high quality from up to 33 ft. away
- Integrated rechargeable battery provides hours of playing time wherever you go.
- Charging case provides charge to earbuds

CONTENTS

- 1 Pair Wireless Earbuds
- 1 Charging Case
- 1 USB Charging Cable
- 3 Earpad Sizes
- 1 User Manual

SPECIFICATIONS

- Internal Battery: Rechargeable Li-Ion
- Wireless Capability: Up to 33 ft range
- Driver Unit: 10 mm
- Sensitivity: 109±3dB

CHARGING THE CHARGE CASE

The charge case is used to charge the earbuds and it must be fully charged before first use. Keep it fully charged regularly for maximum performance. If it has not been used in a while, it is recommended to fully charge the battery. To charge:

1. Insert the USB-C connector of the included USB cable into the small USB-C charging input port on the charge case.

2. Insert the larger USB end of the cable into the USB port of a computer OR into a compatible USB DC 5V wall charger (not included) to charge through a standard wall outlet. The indicator lights will blink while charging and will turn solid when charging is complete. Unplug from the power source when charging is complete.

NOTE: If earbuds are inside the charge case, they will pause charging while the case is being charged.

USB Charging Cable Rating: maximum 5V/1A

CAUTION: The USB charging cable included with this item is intended for use only with this product. Only use the included USB charging cable to charge this product.

CHARGING THE EARBUDS

The earbuds must be fully charged before first use. The charge case must also be fully charged for maximum performance. To charge:

1. Insert the left and right side earbuds into their corresponding charge slots, ensuring the charge contacts on the bottoms of the earbuds line up and connect with the contacts within the charge slots. 2. Close the lid of charging case. The light indicator on the charge case will turn solid when earbuds are charging and will turn off when earbuds are fully charged.

NOTE: If earbuds are inside the charge case, they will pause charging while the case is being charged.

NOTE: When battery power is low the LED may blink red and/or there may be an alerting sound, even while music is playing. Fully charge the battery as explained above to resume normal operation.

PAIRING WITH A BLUETOOTH DEVICE

1. Make sure both earbuds are charged as explained above. 2. Take out the both earbuds from the charging case - they will automatically pair and connect with each other. When they are successfully connected, one of the earbud LED indicator lights will flash rapidly, signaling that the earbuds are ready to be paired with a Bluetooth compatible device.

3. To pair the synced earbuds to your audio device, activate its Bluetooth function - it should automatically recognize the earbuds and allow you to select it using the name "PrimeAudio". When a connection has been made, the earbud LED indicator lights will flash to signal that the devices are now paired. You are now set to enjoy audio wirelessly within a 33ft range of the audio device.

4. To unpair or remove a Bluetooth compatible device from the earbuds, turn off the Bluetooth function on the compatible device. The earbuds can now be paired with a new compatible device.

NOTE: If you do not connect the earbuds with a Bluetooth device after 5 minutes of being turned on, the earbuds will turn off automatically.

NOTE: When powered on, the wireless earbuds will automatically connect with the last successfully paired audio device.

WIRELESS EARBUDS OPERATION

1. Before playback, first adjust the volume of your audio device to medium level as a safe starting point. The volume will be controlled solely from your audio device.

2. To play audio, click the function button on either earbud once - click it once again to pause.

3. To answer an incoming call, click the function button on either earbud once - click it once again to end the call.

4. To reject an incoming call, press and hold the function button on either earbud for one second.

NOTE: The two True wireless cord-free earbuds work together when listening to the music; just one of them works when phone calling.

5. To disconnect and shut off the earbuds, press and hold the function button on one of the earbuds for around five seconds-the other earbud will also turn off automatically. You can also deactivate the Bluetooth on your device - be sure to power off the earbuds when not in use.

6. To activate Siri, the Google Assistant or other voice assistants, press and hold the function button on either earbud for 1.5 seconds until a tone is heard. (Compatible devices only)

NOTE: Low earbuds power and/or low audio device power may cause poor operation and/or no Bluetooth connection.

CAUTION:

- This is not a toy. Please keep away from small children.
- Please keep the unit away from water and heat.
- Do not overcharge the battery.
- Do not operate charge case with a damaged cable.

TECHNICAL SUPPORT

Please do not attempt to fix the product yourself. If you are experiencing any problems with the product please do not return it to the store you bought it from. You can contact our technical support representatives and they will assist you with any questions you may have. For assistance operating your product, please consult the User's Manual or feel free to contact iWorld technical support:

iWorld LLC
 240 West 37th St., 10th Floor
 New York, NY 10018, USA

email: support@iworldnyc.com
 www.iworldnyc.com
 Please keep instructions for further reference.

FRONT INSIDE

BACK INSIDE