
不适合36个月岁以下儿童由于吞咽小部件的危险。令人窒息的危险! 请保留此份说明书以供将来参考。它包含重要的信息。我们有权改进/修改产品规格不另行通知。 • 请在成人监督下使用

# 请遵守不要改变和修改这个产品,修改产品就无权使用这个产品。

#### 1. 首次使用电池时,请先将电池充电。在首两次充电的时候,充电的时间最少要8个小时,之后的充电时间是4小时。 不要过量充电,过长时间的充电也不会使电量增加: 2. 把电池的电线接头按照槽位插在充电器的电线接头里,再把充电器插上室内的电源插座上。 3. 请使用本公司配置的充电电池与充电器, 4. 定期检查玩具和电池, 充电器的电线, 插头和其他零件。这些件如果有损坏就不可以再使用,

### 5. 请使用高质量的AA电池以更好地使用本产品。 遥控器和遥控车的操作


需要修好才可以使用。

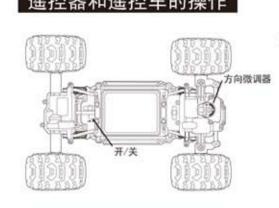

操作提示: · 请确保电源开关是处在 "ON" 的位置上 当您在操作时,如电源开关是处在"OFF" 时, 遥控车是无功能的。 • 当遥控车在直线行驶时向左偏移, 请将 此方向微调器向右微调,直到遥控车恢复正确 的行驶路线。 • 当遥控车在直线行驶时向右偏移,请将 此方向微调器向左微调,直到遥控车恢复正确 的行驶路线。



电池充电及安装方法 1. 依照电池盒里的正负电极的指示 来安装电池: 2. 根据上图的箭头所示安装电池盖 3. 把可充电的电池包装入电池箱里: 4. 要使四个旋转扣位扣紧电池盖: 5. 电池充电需在成人监护下进行。

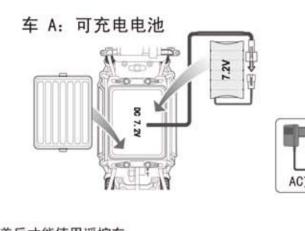

↑ 注意: 1. 需元王女表好电池提口不能接触到水。 1. 需完全安装好电池盖后才能使用遥控车





## 1:12岩石攀爬车使用说明书 欢迎您使用本公司生产的玩具,为了确保您能愉快操作,请在使用前先读熟以下说明,将使

您对本产品有足够的了解,并能正确使用,并且请保留此说明书 使用年龄: 8+

• 不适合36个月岁以下儿童由于吞咽小部件的危险。令人窒息的危险! •请保留此份说明书以供将来参考。它包含重要的信息。我们有权改进/修改产品规格不另行通知。 • 请在成人监督下使用。


## •请遵守不要改变和修改这个产品,修改产品就无权使用这个产品。

电池使用 1. 首次使用电池时,请先将电池充电。在首两次充电的时候,充电的时间最少要8个小时,之后的充电时间是4小时。 不要过量充电,过长时间的充电也不会使电量增加:

### 2. 把电池的电线接头按照槽位插在充电器的电线接头里,再把充电器插上室内的电源插座上。 3. 请使用本公司配置的充电电池与充电器,

4. 定期检查玩具和电池, 充电器的电线, 插头和其他零件。这些件如果有损坏就不可以再使用, 需要修好才可以使用。 5. 请使用高质量的AA电池以更好地使用本产品。

## 遥控器和遥控车的操作

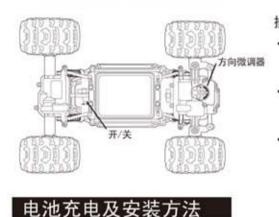


 操作提示: ·请确保电源开关是处在"ON"的位置上。 当您在操作时,如电源开关是处在"OFF" 时,遥控车是无功能的。 · 当遥控车在直线行驶时向左偏移, 请将 的行驶路线。 · 当遥控车在直线行驶时向右偏移, 请将 的行驶路线。











左转/右转

前进/后退

遥控器使用示意图

↑ 注意: 1. 需元至安装好电池温温力 能包加入。 2. 电池及车身电池接口不能接触到水。

ZEGAN



# 1:12岩石攀爬车使用说明书


欢迎您使用本公司生产的玩具,为了确保您能愉快操作,请在使用前先读熟以下说明,将使 您对本产品有足够的了解,并能正确使用,并且请保留此说明书。

# 使用年龄: 8+

- 不适合36个月岁以下儿童由于吞咽小部件的危险。令人窒息的危险! 请保留此份说明书以供将来参考。它包含重要的信息。我们有权改进/修改产品规格不另行通知。
- 请在成人监督下使用。 请遵守不要改变和修改这个产品,修改产品就无权使用这个产品。

# 电池使用

- 1. 首次使用电池时,请先将电池充电。在首两次充电的时候,充电的时间最少要8个小时,之后的充电时间是4小时。 不要过量充电,过长时间的充电也不会使电量增加: 2. 把电池的电线接头按照槽位插在充电器的电线接头里,再把充电器插上室内的电源插座上。
- 3. 请使用本公司配置的充电电池与充电器, 4. 定期检查玩具和电池, 充电器的电线, 插头和其他零件。这些件如果有损坏就不可以再使用, 需要修好才可以使用。
- 5. 请使用高质量的AA电池以更好地使用本产品。

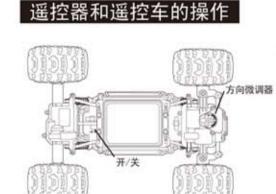


操作提示: · 请确保电源开关是处在 "ON" 的位置上 当您在操作时,如电源开关是处在"OFF" 时,遥控车是无功能的。 · 当遥控车在直线行驶时向左偏移, 请将 此方向微调器向右微调,直到遥控车恢复正确 的行驶路线。 当遥控车在直线行驶时向右偏移,请将 此方向微调器向左微调,直到遥控车恢复正确 的行驶路线。



 电池充电及安装方法 1. 依照电池盒里的正负电极的指示 来安装电池: 2. 根据上图的箭头所示安装电池盖 3. 把可充电的电池包装入电池箱里 4. 要使四个旋转扣位扣紧电池盖: 5. 电池充电需在成人监护下进行









# 1:12岩石攀爬车使用说明书

欢迎您使用本公司生产的玩具,为了确保您能愉快操作,请在使用前先读熟以下说明,将使 您对本产品有足够的了解,并能正确使用,并且请保留此说明书

# 使用年龄: 8+

• 不适合36个月岁以下儿童由于吞咽小部件的危险。令人窒息的危险! 请保留此份说明书以供将来参考。它包含重要的信息。我们有权改进/修改产品规格不另行通知。

操作提示:

的行驶路线。

的行驶路线。

时,遥控车是无功能的。

## • 请在成人监督下使用。 • 请遵守不要改变和修改这个产品,修改产品就无权使用这个产品

1. 首次使用电池时, 请先将电池充电。在首两次充电的时候, 充电的时间最少要8个小时, 之后的充电时间是4小时。

遥控器和遥控车的操作

不要过量充电,过长时间的充电也不会使电量增加; 2. 把电池的电线接头按照槽位插在充电器的电线接头里,再把充电器插上室内的电源插座上。 3. 请使用本公司配置的充电电池与充电器,

·请确保电源开关是处在"ON"的位置上,

当您在操作时,如电源开关是处在"OFF"


· 当遥控车在直线行驶时向左偏移, 请将


当遥控车在直线行驶时向右偏移,请将

此方向微调器向右微调,直到遥控车恢复正确

此方向微调器向左微调,直到遥控车恢复正确

#### 4. 定期检查玩具和电池, 充电器的电线, 插头和其他零件。这些件如果有损坏就不可以再使用, 需要修好才可以使用。 5. 请使用高质量的AA电池以更好地使用本产品。

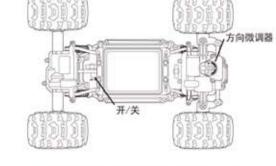

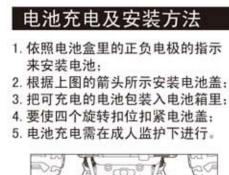







遥控器使用示意图


左转/右转

前进/后退





"AA"尺寸电池

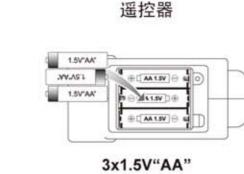

## 如何玩遥控车?

1. 打开遥控车开关: 2. 操作遥控器的遥杆来控制遥控车向前,或者向后,和向左,或者向右;

3. 如果遥控车不能走直线,请调节车底的方向微调器: 4. 使用后要关好遥控车和遥控器的开关。

1. 请在成人监管下进行充电: 2. 请从车底取出可以充电的电池来充电: 3. 把没有电的电池从遥控车, 和遥控器里取出来: 4. 在确定关上遥控车开关的情况下,再装上电池: 5. 要依照电池盒里的指示来安装电池,要注意不要装错电池的(+)和(-)电极,和确定电池的电极安装正确;

#### 9. 不要把电池放在火里,这样电池可能爆炸或者漏液: 10. 不同类型的电池或新旧电池不能混用: 11. 只有和推荐电池相同或者等效的电池方可使用:

6. 非充电电池不能充电: 7. 电源端子不得短路: 8. 若长期不使用,请将遥控车和遥控器中电池取出:

### 13. 请保管好这份说明书用于有需要的时候使用。这份说明书有重要的资料。 保养与维修

5. 长时间不玩,就要取出电池。

12. 应定期检查电池是否有漏液的情况:

 不要把玩具放在水里,这样会损坏电子元件:(如选购的是水陆两栖车即可以在水里行驶) 2. 请勿使电线或电源接口接触到水: 3. 用湿布擦拭表面污迹;




4. 勿把玩具放在高温, 高潮及阳光直射的地方



不要在污水坑、泥土和沙地上玩您的遥控车

故障现象	故障原因	处理方法
车子不能行驶	1. 没有打开车子或遥控器开关。 2. 遥控器电池没有正确安装。 3. 车子电池电量不足。	1. 打开车子或遥控器开关。 2. 将电池正确安装进遥控器。 3. 更换车子电池或对可充电电池进行充电
车子失去控制 或遥控距离短	1. 附近有人在使用相同或接近的频率。 2. 遥控器或车子的电量不足	<ol> <li>到其它地方使用车子或等待其他人停止使用。</li> <li>更换遥控器或车子电池或对可充电电池进行充电。</li> </ol>



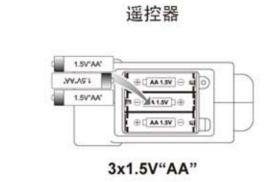

## 如何玩遥控车?

1. 打开遥控车开关: 2. 操作遥控器的遥杆来控制遥控车向前,或者向后,和向左,或者向右; 3. 如果遥控车不能走直线,请调节车底的方向微调器:

### 4. 使用后要关好遥控车和遥控器的开关。 电池的安全使用

1. 请在成人监管下进行充电 2. 请从车底取出可以充电的电池来充电: 3. 把没有电的电池从遥控车,和遥控器里取出来:

9. 不要把电池放在火里,这样电池可能爆炸或者漏液;

11. 只有和推荐电池相同或者等效的电池方可使用:

10. 不同类型的电池或新旧电池不能混用:


4. 在确定关上遥控车开关的情况下,再装上电池: 5. 要依照电池盒里的指示来安装电池,要注意不要装错电池的(+)和(-)电极,和确定电池的电极安装正确; 6. 非充电电池不能充电: 7. 电源端子不得短路: 8. 若长期不使用,请将遥控车和遥控器中电池取出:

### 12. 应定期检查电池是否有漏液的情况: 13. 请保管好这份说明书用于有需要的时候使用。这份说明书有重要的资料

1. 不要把玩具放在水里,这样会损坏电子元件: (如选购的是水陆两栖车即可以在水里行驶) 2. 请勿使电线或电源接口接触到水:

#### 3. 用湿布擦拭表面污迹: 4. 勿把玩具放在高温,高潮及阳光直射的地方 5. 长时间不玩,就要取出电池。

当车移动时,请不要用手触摸遥控车的四个车轮,以免损坏遥控车。

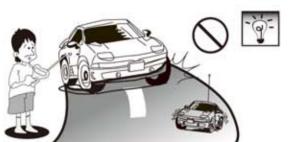




2. 更换遥控器或车子电池或对可充电电池

更 <b>在</b> 卫	地方玩,以防发生意外。	不要在污水坑、泥土和沙地上玩您的遥控车。
<b>全在</b> 与超超或危险		章解决方法
故障现象	故障原因	处理方法
车子不能行驶	<ol> <li>没有打开车子或遥控器开关。</li> <li>遥控器电池没有正确安装。</li> <li>车子电池电量不足。</li> </ol>	1. 打开车子或遥控器开关。 2. 将电池正确安装进遥控器。 3. 更换车子电池或对可充电电池进行充电。
article registre		1. 到其它地方使用车子或等待其他人停止


1. 附近有人在使用相同或接近的频率。

2. 遥控器或车子的电量不足

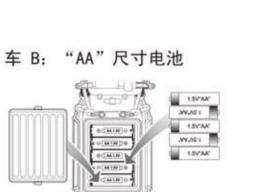

车子失去控制

或遥控距离短

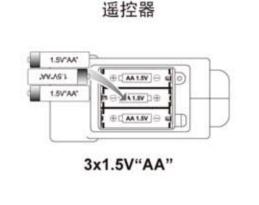

进行充电

## 如何玩遥控车? 1. 打开遥控车开关:

2. 操作遥控器的遥杆来控制遥控车向前,或者向后,和向左,或者向右; 3. 如果遥控车不能走直线,请调节车底的方向微调器: 4. 使用后要关好遥控车和遥控器的开关。

5x1.5V"AA"

## 电池的安全使用 1. 请在成人监管下进行充电

2. 请从车底取出可以充电的电池来充电: 3. 把没有电的电池从遥控车,和遥控器里取出来: 4. 在确定关上遥控车开关的情况下, 再装上电池:

#### 5. 要依照电池盒里的指示来安装电池,要注意不要装错电池的(+)和(-)电极,和确定电池的电极安装正确; 6. 非充电电池不能充电: 7. 电源端子不得短路:

8. 若长期不使用,请将遥控车和遥控器中电池取出: 9. 不要把电池放在火里,这样电池可能爆炸或者漏液: 10. 不同类型的电池或新旧电池不能混用:

### 11. 只有和推荐电池相同或者等效的电池方可使用: 12. 应定期检查电池是否有漏液的情况: 13. 请保管好这份说明书用于有需要的时候使用。这份说明书有重要的资料。

| 保养与维修 1. 不要把玩具放在水里, 这样会损坏电子元件: (如选购的是水陆两桶车即可以在水里行驶)

#### 2. 请勿使电线或电源接口接触到水: 3. 用湿布擦拭表面污迹: 4. 勿把玩具放在高温, 高潮及阳光直射的地方:

故障现象

车子不能行驶

或遥控距离短

5. 长时间不玩,就要取出电池。







3. 车子电池电量不足。

2. 遥控器或车子的电量不足

1. 附近有人在使用相同或接近的频率。




5	
方玩,以防发生意外。	不要在污水坑、泥土和沙地上玩您的遥控车。
常见故障	解决方法
故障原因	处理方法
1. 没有打开车子或遥控器开关。 2. 遥控器电池没有正确安装。	1. 打开车子或遥控器开关。 2. 将电池正确安装进遥控器。

3. 更换车子电池或对可充电电池进行充电。

1. 到其它地方使用车子或等待其他人停止

2. 更换遥控器或车子电池或对可充电电池

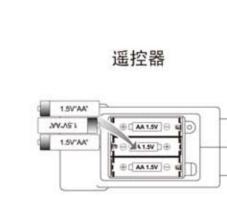

3x1.5V"AA"

进行充电。

# 如何玩遥控车?

"AA"尺寸电池

1. 打开遥控车开关: 2. 操作遥控器的遥杆来控制遥控车向前,或者向后,和向左,或者向右; 3. 如果遥控车不能走直线,请调节车底的方向微调器:

## 4. 使用后要关好遥控车和遥控器的开关。 电池的安全使用

6. 非充电电池不能充电:

1. 请在成人监管下进行充电 2. 请从车底取出可以充电的电池来充电: 3. 把没有电的电池从遥控车,和遥控器里取出来: 4. 在确定关上遥控车开关的情况下,再装上电池: 5. 要依照电池盒里的指示来安装电池,要注意不要装错电池的(+)和(-)电极,和确定电池的电极安装正确;

7. 电源端子不得短路 8. 若长期不使用,请将遥控车和遥控器中电池取出 9. 不要把电池放在火里,这样电池可能爆炸或者漏液; 10. 不同类型的电池或新旧电池不能混用:

#### 11. 只有和推荐电池相同或者等效的电池方可使用: 12. 应定期检查电池是否有漏液的情况: 13. 请保管好这份说明书用于有需要的时候使用。这份说明书有重要的资料。

2. 请勿使电线或电源接口接触到水:

3. 用湿布擦拭表面污迹:

故障现象

车子不能行驶

车子失去控制

或遥控距离短

| 保养与维修 不要把玩具放在水里,这样会损坏电子元件:(如选购的是水陆两栖车即可以在水里行驶)

# 5. 长时间不玩, 就要取出电池。

4. 勿把玩具放在高温, 高潮及阳光直射的地方;

当车移动时,请不要用手触摸遥控车的四个车轮,以免损坏遥控车。

2. 遥控器或车子的电量不足





2. 更换遥控器或车子电池或对可充电电池

进行充电。





# 1:12 4WD RC Crawler instruction manual

## **DRIVING HINTS**

It is highly recommended to read the operation instructions carefully prior to the first use. Please operate this product According to the guidelines specifies in this instruction, and keep the instruction manual for future reference.

## **⚠ WARNING**

button

 This product contains small parts that may cause suffocation if swallowed by children under 3 years. - Please keep this instruction manual for future reference, it contains important information of the product. Products shall be subject to any changes without additional notices;

- Please use it under the guidance of adults.

## the user's authority to operate the product.

- Changes or modifications to this product not expressly approved by the party responsible for compliance may void

## **BATTERY CAUTIONS**

must not be used until the damage has been repaired.

1. Please charge the battery prior to the first use. 8 hours charging time is required for the first two charges, then 4 hours per charge. Do not over-discharge the battery. 2. Please correctly connect the battery and charging wires, insert the charger to power outlet to recharge battery. 3. This product must only be used with the recommended battery and charger. 4. Regulary examine for damage to the plug, enclosure and other parts. In the event of any damage, the product


5. New and good alkaline batteries are recommended to use in this product to obtain best and maximum

 
## RC CRAWLER AND REMOTE CONTROL INSTRUCTION RC Crawler operation hints:




#### BATTERY INSTALLATION AND CHARGING Insert the batteries in the battery compartment with correct polarity. Model A: Rechargeable battery

2. Batteries are to be inserted with correct polarity as show in figure.

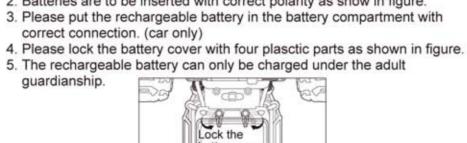



ZEGAN

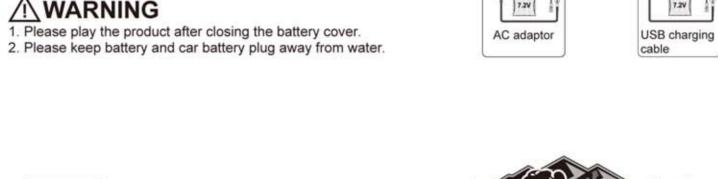

## 1:12 4WD RC Crawler instruction manual

## **DRIVING HINTS**

It is highly recommended to read the operation instructions carefully prior to the first use. Please operate this product According to the guidelines specifies in this instruction, and keep the instruction manual for future reference.

# **↑** WARNING

- This product contains small parts that may cause suffocation if swallowed by children under 3 years. - Please keep this instruction manual for future reference, it contains important information of the product. Products shall be subject to any changes without additional notices; Please use it under the guidance of adults - Changes or modifications to this product not expressly approved by the party responsible for compliance may void the user's authority to operate the product.

#### BATTERY CAUTIONS 1. Please charge the battery prior to the first use. 8 hours charging time is required for the first two charges, then 4 hours per charge. Do not over-discharge the battery. Please correctly connect the battery and charging wires, insert the charger to power outlet to recharge battery.

correct connection. (car only)

guardianship.

**⚠ WARNING** 


On/Off

button

correct connection. (car only)

/ WARNING

This product must only be used with the recommended battery and charger 4. Regulary examine for damage to the plug, enclosure and other parts. In the event of any damage, the product must not be used until the damage has been repaired. 5. New and good alkaline batteries are recommended to use in this product to obtain best and maximum performance. RC CRAWLER AND REMOTE CONTROL INSTRUCTION

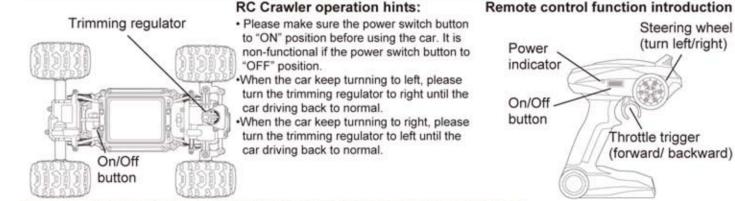

Lock the /!\ WARNING Please play the product after closing the battery cover. 2. Please keep battery and car battery plug away from water

ZEGAN

4 hours per charge. Do not over-discharge the battery.

5. The rechargeable battery can only be charged under the adult

BATTERY INSTALLATION AND CHARGING

Insert the batteries in the battery compartment with correct polarity.

3. Please put the rechargeable battery in the battery compartment with

4. Please lock the battery cover with four plasctic parts as shown in figure.

2. Batteries are to be inserted with correct polarity as show in figure.



AC adaptor

lodel A: Rechargeable battery

**USB** charging

# 1:12 4WD RC Crawler instruction manual

## It is highly recommended to read the operation instructions carefully prior to the first use. Please operate this product According to the guidelines specifies in this instruction, and keep the instruction manual for future reference.


#### This product contains small parts that may cause suffocation if swallowed by children under 3 years. - Please keep this instruction manual for future reference, it contains important information of the product. Products shall be subject to any changes without additional notices;

 Please use it under the guidance of adults. - Changes or modifications to this product not expressly approved by the party responsible for compliance may void the user's authority to operate the product.

1. Please charge the battery prior to the first use. 8 hours charging time is required for the first two charges, then

2. Please correctly connect the battery and charging wires, insert the charger to power outlet to recharge battery.

#### 3. This product must only be used with the recommended battery and charger. 4. Regulary examine for damage to the plug, enclosure and other parts. In the event of any damage, the product must not be used until the damage has been repaired. 5. New and good alkaline batteries are recommended to use in this product to obtain best and maximum

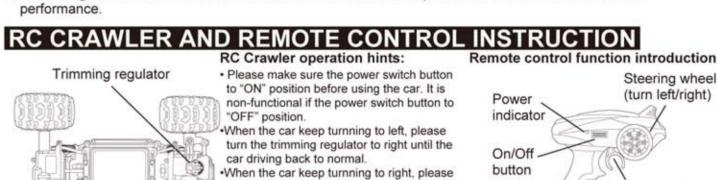

turn the trimming regulator to left until the

car driving back to normal.

BATTERY INSTALLATION AND CHARGING

## 5. The rechargeable battery can only be charged under the adult guardianship.

Please play the product after closing the battery cover.


ZEGAN

Insert the batteries in the battery compartment with correct polarity

2. Batteries are to be inserted with correct polarity as show in figure.

3. Please put the rechargeable battery in the battery compartment with

4. Please lock the battery cover with four plasctic parts as shown in figure.

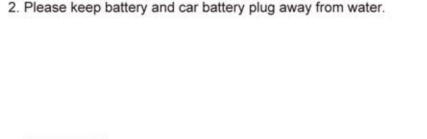



AC adaptor

Throttle trigger

Model A: Rechargeable battery

(forward/ backward)

USB charging

# 1:12 4WD RC Crawler instruction manual

**DRIVING HINTS** It is highly recommended to read the operation instructions carefully prior to the first use. Please operate this product According to the guidelines specifies in this instruction, and keep the instruction manual for future reference. Age: 8+ **⚠ WARNING** 

- Please keep this instruction manual for future reference, it contains important information of the product. Products

1. Please charge the battery prior to the first use. 8 hours charging time is required for the first two charges, then

- This product contains small parts that may cause suffocation if swallowed by children under 3 years.

#### Please use it under the guidance of adults. - Changes or modifications to this product not expressly approved by the party responsible for compliance may void the user's authority to operate the product. **BATTERY CAUTIONS**

On/Off

button

correct connection. (car only)

guardianship.

shall be subject to any changes without additional notices;

 
4 hours per charge. Do not over-discharge the battery.

2. Please correctly connect the battery and charging wires, insert the charger to power outlet to recharge battery. 3. This product must only be used with the recommended battery and charger. 4. Regulary examine for damage to the plug, enclosure and other parts. In the event of any damage, the product must not be used until the damage has been repaired. 5. New and good alkaline batteries are recommended to use in this product to obtain best and maximum performance. RC CRAWLER AND REMOTE CONTROL INSTRUCTION

RC Crawler operation hints:


car driving back to normal.

#### Trimming regulator · Please make sure the power switch button to "ON" position before using the car. It is non-functional if the power switch button to indicator "OFF" position. When the car keep turnning to left, please turn the trimming regulator to right until the car driving back to normal. button •When the car keep turnning to right, please turn the trimming regulator to left until the



4. Please lock the battery cover with four plasctic parts as shown in figure.

 5. The rechargeable battery can only be charged under the adult





Throttle trigger (forward/ backward)

AC adaptor

Model A: Rechargeable battery

USB charging

run on the water.) 2. Keep wire and plug away from water. 3. Wipe the product gently with a clean wet cloth. 4. Keep the product away from direct heat and wet.

Do not play the product on the road or

damage place to avoid injury.



Do not play the product in sump, sand or mud.

GENERAL TROUBLESHOOTING			
Fault symptom	Fault cause	Handling method	
The car is unable to drive.	Did not switch on the car or the remote controller.     Battery is not installed rightly in the remote controller.     Low power of the battery pack.	Switch on the car and the remote controller.     Install the battery rightly into the remote controller.     Charge for the battery.	
The car is out of control,short remote control distance	Someone is using the same or close frequency nearby.     Power shortage of the remote control battery or rechargeable battery pack.	Drive in another place or wait for other people stop driving.     Renew the battery in the remote controller or to charge therechargeable battery pack.	





## Turn the power switch button to "ON" position 2. Use the remote control to control the car forward, backward, turn left, turn right.

 The rechargeable battery can only be charged under the adult guardianship. Rechargeable batteries are to be removed before being charged. 3. Exhausted batteries are to be removed from the product. 4. Make sure the power is off before install and recharging the battery. 5. Batteries are to be inserted with correct polarity.

## 9. Do not use or leave the battery near a heat source such fire or heater, it may cause battery explosion or battery 10. Do not mix old and new batteries; Do not mix alkaline, standard(carbon-zinc) or rechargeable(nickel-cadmium)

13. Please keep this instruction manual for future reference, it contains important information of the product. CARE AND MAINTENANCE

## Keep wire and plug away from water. 3. Wipe the product gently with a clean wet cloth. 4. Keep the product away from direct heat and wet. Always remove batteries from the product when it is not being used for a long period of time.

run on the water.)

The car is out of


control.short

distance

remote control

BATTERY WARNING

Do not play the prod damage place to av		ot play the product in sump, sand or mud.
	GENERAL TROUBL	ESHOOTING
Fault symptom	Fault cause	Handling method
The car is unable to drive.	Did not switch on the car or the remote controller.  Battery is not installed rightly in the remote controller.  Low power of the battery pack.	1.Switch on the car and the remote controller.     2.Install the battery rightly into the remote controller.     3.Charge for the battery.
	P	

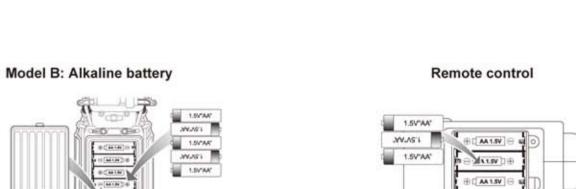

#### 5x1.5V"AA" 3x1.5V"AA" RC CRAWLER OPERATION INSTRUCTION Turn the power switch button to "ON" position. 2. Use the remote control to control the car forward, backward, turn left, turn right.

### 4. Always switch the car and the remote control off when not operating. BATTERY WARNING The rechargeable battery can only be charged under the adult guardianship.

rechargeable battery pack

2. Rechargeable batteries are to be removed before being charged. 3. Exhausted batteries are to be removed from the product. 4. Make sure the power is off before install and recharging the battery. 5. Batteries are to be inserted with correct polarity. 6. Non-rechargeable batteries are not to be recharged.

# 11. Only batteries of the same or equivalent type as recommended are to be used.

8. Always remove batteries from the product when it is not being used for a long period of time.

13. Please keep this instruction manual for future reference, it contains important information of the product. CARE AND MAINTENANCE 1. Do not submerge the product into water that can damage the electronic assemblies.(If for Amphibious car it can

## 4. Keep the product away from direct heat and wet. 5. Always remove batteries from the product when it is not being used for a long period of time.

Keep wire and plug away from water.

run on the water.)



Do not play the product on the road or damage place to avoid injury. GENERAL TROUBLESHOOTING Fault symptom

he car is unable odrive.	Did not switch on the car or the remote controller.     Battery is not installed rightly in the remote controller.     Low power of the battery pack.	Switch on the car and the remote controller.     Install the battery rightly into the remote controller.     Charge for the battery.
the car is out of ontrol, short emote control istance	Someone is using the same or close frequency nearby.     Power shortage of the remote control battery or rechargeable battery pack.	Drive in another place or wait for other people stop driving.     Renew the battery in the remote controller or to charge therechargeable battery pack.



Model B: Alkaline batter

⊕ [ AA 1.5V ] ⊕ 3x1.5V"AA"

# BE WILLIN DE

# ⊕ C AA LSV ⊝

RC CRAWLER OPERATION INSTRUCTION Turn the power switch button to "ON" position 2. Use the remote control to control the car forward, backward, turn left, turn right.

# 3. The trimming regulator at the bottom of the car can be used to adjust the direction of the car if need.

4. Always switch the car and the remote control off when not operating. BATTERY WARNING

## 2. Rechargeable batteries are to be removed before being charged.

5. Batteries are to be inserted with correct polarity.

CARE AND MAINTENANCE

SAFETY HINTS

Do not play the product on the road or

rechargeable battery pack

damage place to avoid injury.

Fault symptom

The car is unable

The car is out of

Model B: Alkaline battery

control, short

remote control

 
6. Non-rechargeable batteries are not to be recharged.

 The rechargeable battery can only be charged under the adult guardianship. 3. Exhausted batteries are to be removed from the product. 4. Make sure the power is off before install and recharging the battery.

## 7. The supply terminals are not to be short-circuited. 8. Always remove batteries from the product when it is not being used for a long period of time. 9. Do not use or leave the battery near a heat source such fire or heater, it may cause battery explosion or battery


10. Do not mix old and new batteries; Do not mix alkaline, standard(carbon-zinc) or rechargeable(nickel-cadmium) 11. Only batteries of the same or equivalent type as recommended are to be used. 12. Please check the battery regularly to aviod battery leakage. 13. Please keep this instruction manual for future reference, it contains important information of the product.


#### 1. Do not submerge the product into water that can damage the electronic assemblies.(If for Amphibious car it can run on the water.) 2. Keep wire and plug away from water. 3. Wipe the product gently with a clean wet cloth. 4. Keep the product away from direct heat and wet.





Do not play the product in sump, sand or mud.

 GENERAL TROUBLESHOOTING Fault cause Handling method Did not switch on the car or the remote controller. .Switch on the car and the remote controller.

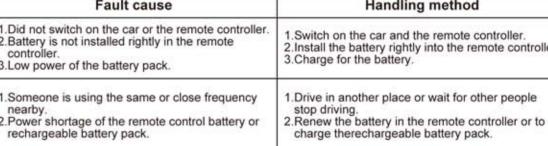

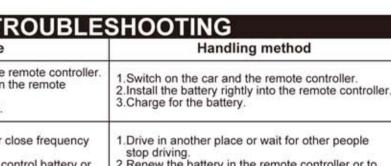

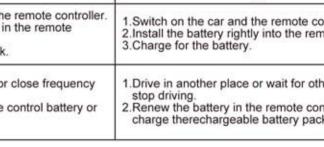







# B B MILEV DE

# ⊕ [ AA 1.5V ] ⊖

### 5x1.5V"AA" 3x1.5V"AA" RC CRAWLER OPERATION INSTRUCTION

#### Turn the power switch button to "ON" position 2. Use the remote control to control the car forward, backward, turn left, turn right. 3. The trimming regulator at the bottom of the car can be used to adjust the direction of the car if need. 4. Always switch the car and the remote control off when not operating. BATTERY WARNING

The rechargeable battery can only be charged under the adult guardianship.

11. Only batteries of the same or equivalent type as recommended are to be used.

2. Rechargeable batteries are to be removed before being charged.

4. Make sure the power is off before install and recharging the battery.


3. Exhausted batteries are to be removed from the product.

#### 5. Batteries are to be inserted with correct polarity. 6. Non-rechargeable batteries are not to be recharged. 7. The supply terminals are not to be short-circuited. 8. Always remove batteries from the product when it is not being used for a long period of time. 9. Do not use or leave the battery near a heat source such fire or heater, it may cause battery explosion or battery

## 12. Please check the battery regularly to aviod battery leakage. 13. Please keep this instruction manual for future reference, it contains important information of the product. 1. Do not submerge the product into water that can damage the electronic assemblies.(If for Amphibious car it can

10. Do not mix old and new batteries; Do not mix alkaline, standard(carbon-zinc) or rechargeable(nickel-cadmium)



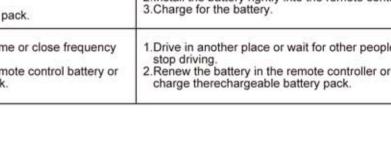

Remote control ⊕ [ AA1.5V ⊝


## RC CRAWLER OPERATION INSTRUCTION 3. The trimming regulator at the bottom of the car can be used to adjust the direction of the car if need. 4. Always switch the car and the remote control off when not operating.

# 6. Non-rechargeable batteries are not to be recharged. 7. The supply terminals are not to be short-circuited.

8. Always remove batteries from the product when it is not being used for a long period of time.

## 11. Only batteries of the same or equivalent type as recommended are to be used. 12. Please check the battery regularly to aviod battery leakage. 1. Do not submerge the product into water that can damage the electronic assemblies.(If for Amphibious car it can



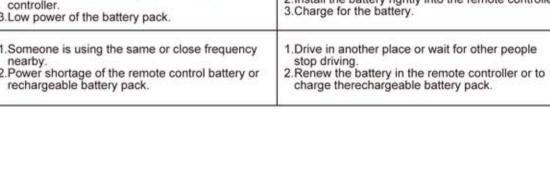


# 3. The trimming regulator at the bottom of the car can be used to adjust the direction of the car if need.

9. Do not use or leave the battery near a heat source such fire or heater, it may cause battery explosion or battery 10. Do not mix old and new batteries; Do not mix alkaline, standard(carbon-zinc) or rechargeable(nickel-cadmium) 12. Please check the battery regularly to aviod battery leakage.

# Warning! Do not touch the running car. Keep hands away from moving parts to avoid injury.

3. Wipe the product gently with a clean wet cloth.

7. The supply terminals are not to be short-circuited.

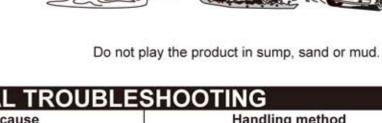

Handling method

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or

operating in conjunction with any other antenna or transmitter.