

**KINMI V03**

**User Manual**

# Contents

1 For your safety .....	1
2 Start to use.....	3
2.1 Battery installation .....	3
2.2 Connecting to network.....	4
3 Operation manual.....	7
3.1 Power on/off.....	7
3.2 Emergency calls .....	7
3.3 Auto response.....	7
4 Fun and games .....	8
4.1 Games .....	8
5 Multimedia.....	8
5.1 Camera .....	8
5.2 Photo album .....	8
5.3 Video recorder.....	8
5.4 Video player .....	9
5.5 Audio player.....	9
5.6 Sound recorder .....	9
5.7 FM radio.....	9
6 User profiles.....	10
6.1 General mode .....	10
6.2 Meeting mode .....	10
6.3 Outdoor mode .....	10
6.4 Indoor mode .....	10
6.5 Headset mode.....	10
7 Call center .....	11
7.1 Call history.....	11

7.2 Call settings.....	11
8 Message.....	12
8.1 Text message .....	12
8.2 MMS .....	14
8.3 Voicemail server.....	16
8.4 Broadcast Message.....	16
9 Phonebook.....	17
10 File manager.....	17
11 Service.....	18
11.1 STK service.....	18
11.2 Internet service .....	18
12 Settings.....	18
12.1 Dual SIM settings .....	18
12.2 Phone settings .....	18
12.3 Network setting.....	18
12.4 Security setup.....	19
12.5 Restore factory settings.....	20
13 Organizer.....	20
13.5 World clock.....	20
13.6 Alarm.....	20
14 Extra .....	21
14.1 Calculator.....	21
14.2 Calendar .....	21
14.5 Ebook reader .....	22
15 USB function .....	22
16 Battery security .....	23

## 1 For your safety

Notice: To use your handset safely and efficiently, please read the following instruction carefully before using and abide by it.



Be careful when you are driving.

Please abide by the relative local laws and regulations. Use both of your hands to drive! Put the handset in its seat to avoid falling down. The ballonet will charge quickly when it is in danger, please don't put anything in its security scope, including fixed phone and handset equipment. Otherwise it may cause serious body injuries.



The handset must be turned off when you are on the plane.

The interference of mobile will influence the flight. It is illegal to use mobile on phone, please power it off.



The handset must be turned off when you are in blowing-up area.

When you are at a blowing-up area or near it, please abide by the relevant laws and power your mobile off.



The handset must be turned off when you are near a danger product.

Please do not use mobile when you are near gas station or chemical plant.



The handset must be turned off when you are in a hospital.

You have to abide by the relevant regulations of hospital and turn your handset off when you are near medical equipment. Any wireless transmission device, including mobile, will interfere those equipment not

fully-protected.



#### Interference

All the mobile handset may be interfered by the radio and reduce the performance of the handset.



#### Professional service

Only the professional can setup or maintain the handset. Improper installation or maintenance would bring out great danger, it also disobey regulations of maintenance guarantee.



#### Accessory and battery

Only the appointed accessory and battery can be used. It is suggested that you return the used battery to the factory or put it in the appointed recycle zone. Do not put it together with other rubbish or discard it.



#### Reasonable use


Please use the handset in reasonable way. It is prohibited to put your handset in high temperature (over 60 °C), such as beside the window where there is sunshine. Please use wet or antistatic cloth to clean the handset. Do not use dry or static cloth to clean it. Your handset is not waterproof, please keep it dry.



#### Emergency call

Please make sure the handset is powered on so that it can dial the emergency call. In idle mode, the handset can dial emergency numbers, such as 112, 119 and 110. Press dial key to dial it, report your location

and the situation briefly. Do not end the call without permission.

 Note: this handset, like any other one, may not support all the features because of the network coverage and wireless transmission. Some network even can not support 112. So do not rely totally on your handset about some significant calling (like medical aid). Please refer to the local operator.

## 2 Start to use

Please read the following section carefully before using the handset. It will instruct you how to insert and unlock the SIM card, how to setup and maintain the handset, how to charge the battery, and also the information about digital GSM network.

### 2.1 Battery installation

Please charge the battery after it has been completely used up, and use it after it has been completely charged. Three times later, the battery will be in best status.

#### 2.1.1 Installing and discharging of the battery

Pull the cover to take out the battery, and put it inside then close the cover to install it.

#### 2.1.2 Charge of the battery

- connect the charger with power supply
- connect the charge with handset
- The battery indication on LCD will bicker. If the handset is powered off when charging, LCD will display “charging”. If you overuse the handset when it is out of battery, LCD will display “charging” a while

after you begin to charge it.

- When the battery indication is full and stops bickering, it means the handset has been completely charged. If the handset is charged when power off, the indication will also be displayed on LCD. It will take 2 to 3 hours to charge, the battery, the handset and the charger will get warm during the charging time.
- Please disconnect the jacket and charger after finishing charging.
- The handset can be normally used when it is charging.

Warning: the handset must be put in a ventilated place where the temperature is  $-40^{\circ}\text{C}$ — $+55^{\circ}\text{C}$ . And you must use the charger supplied by the factory. It is dangerous not to use the appointed charger, and it will break the guarantee terms of the handset.

### 2.1.3 Use of the battery

When the handset is powered off automatically or when there is low battery indication, you should charge it in time. If the battery is not run out of energy before charging, the handset will adjust and reduce the time of charging.

The idle time and talk time of the handset specified by the factory is based on the perfect working environment. Actually, the working time of the battery will vary with the network status, work environment and the way of usage.

## 2.2 Connecting to network

### 2.2.1 SIM card

The phone supports two SIM cards which can be in use at the same

time when power on. Your network provider will supply you two inserted SIM cards. SIM card is the key for you to enter the digital GSM network. Please insert the useful SIM card before using the phone. Two SIM cards can be inserted into the phone at one time and switched to your wanted one at power-on such as dual SIM open, only one SIM open.

All information about the network connecting and your calling record will be saved in the SIM card, and also the list of your phonebook and messages. You can take it out and insert to any other GSM handset.

You should avoid touching the metal area of the card, and put it far away from the magnetic area. Once it is damaged, you can not enter the GSM network.

### 2.2.2 Insert and take out the SIM card

Normally, SIM is put in a card ; please take it out carefully before installing.

Power off the handset, discharge the battery or other power supply.

Insert the card, the metal face being downward.

When you need to take out the card, please turn off the handset and discharge the battery first.

Warning: forbid to take out the SIM card when the handset is powered on. It is definitely prohibitive to insert or take out SIM card when the handset is connected to external power supply, or SIM card may be damaged.

### 2.2.3 Lock SIM card

To avoid the illegal use, the handset is protected by PIN code. Once choosing this function, you have to input the PIN code when you turn on



the handset. You can unlock SIM in this way and then receive or make a call. The user can clear the SIM protection, after which it can not protect it again unauthorized usage. After power it on, you can input PIN code, during which you can clear it if there is mistake. If you input the wrong code continuously for 3 times, the SIM card will be locked by the network, and you will be asked to input the PUK code.

Note: the network supplier will appoint a standard PIN code for the handset, and you should change it to your personal code as soon as possible.

#### 2.2.4 Lock the phone

To avoid the illegal use, you can set password for the handset. After choosing this function, you have to input the password every time after you input the PIN code. Only in this way you can unlock the handset and use it. The user can delete the password, after which it can not prevent unauthorized use.

Input the password, you can clear it when there is mistake. Once you forget the password, you have to contact the retailer or the maintenance center.

#### 2.2.5 Connecting to network

After unlocking the SIM card, the handset will search the registered network or other available network. Once connected, the name of network supplier will show in the middle of the LCD. At this time, your handset is in idle mode.

Note: if it prompts “emergency call only” on LCD, it means you are out of service. But you can still make emergency calls according to the signal strength.

## 3 Operation manual

### 3.1 Power on/off

- Power on

Long press the power key to turn on the handset.

If there is prompt “insert the SIM card”, please power it off and check the SIM card.

When the handset is powered on and indicate you to input the handset password or the PIN code, you have to input it correctly. If you do not know the PIN code yet, please contact with the network supplier. The default password is 1122.

- Power off

Long press the power key to turn off the handset. The handset is power off after displaying the flash on LCD.

### 3.2 Emergency calls

If your handset is under the cover of the network, wherever using the GSM network, you can make emergency calls. if you have no roaming service in the area, LCD will display “emergency calls only”. As long as you are under the cover, you can make those calls even without SIM card.

### 3.3 Auto response

After inserting the headset and setting the auto-answer on, it will auto answer after 2 seconds.

## 4 Fun and games

### 4.1 Games

## 5 Multimedia

On the main menu interface, touch on multimedia icon ,press ok key or left function key to go to the multimedia menu:

### 5.1 Camera

Click the camera submenu and press ok key to shot. At the previewing status,press ok key to shot it, press left functional key to send (as multimedia message,via Bluetooth)or delete it, press return key ,it can save the photo automatically and return to the previewing status, Press the left function key to go to the options interface as the followings:

### 5.2 Photo album

You can view the photos by using the function and you can also send you photos to your friends phone or delete your photos and so .

### 5.3 Video recorder

You can enter the video recorder through multimedia.

After entering Multimedia, at the previewing status. Press left/right key to adjust EV parameter. Press up/down key to adjust the enlarging fold. Press ok key to begin recording video. Press ■ to stop recording for a while, then press ■ to continue .

During video playing, you can adjust the speed by left/right key, and

to pause/continue by OK key. You can press “\*” to switch full screen.

#### 5.4 Video player

By using the Video player ,you can play video 。

#### 5.5 Audio player

When playing music, you can adjust the volume by pressing

“\*” or “#” key, to pause and continue by ok key, to stop by ok key.

Press left/ right key to play the last/next one. You can enter the music list by pressing List, after that you can play, check detail, add, update and set the operation.

Note: the player only put the music in My Music to the list.

Warning: please adjust the volume suitably, to avoid hurting the listening.

#### 5.6 Sound recorder


The handset supports three record ways: WAV and AMR After record, you can save it to Audio directory.

Note: if there is an incoming call during record, the record will stop automatically, and the recorded content will be saved.

Note: please take photos, shooting and record legally.

#### 5.7 FM radio

You can use the function to listen the broadcast.

 Note: The effect of the radio depends on the coverage of broadcasting station.

## 6 User profiles

The handset supplies five modes: general mode, meeting mode, outdoor mode, indoor mode, Headset mode .

### 6.1 General mode

You can operate on each mode.

- Activate : activate general mode
- Customize :

Tone settings: set incoming call tone, Power on/off tone, message tone and keypad tone;

Volume: 1~7 volume levels for ring and key tone

Alert type: ring only, vibration only, ring and vibration, ring then vibration

Ring type: single, repeat and ascending

### 6.2 Meeting mode

The same to the general mode

### 6.3 Outdoor mode

The same to the general mode

### 6.4 Indoor mode

The same to the general mode

### 6.5 Headset mode

It will enter headset mode when you insert the headset.

⚠ Note : on standby mode, long press ctrl to make silence mode on or off.

## 7 Call center

In main menu, touch on center icon and press the ok key to go to call register interface.

### 7.1 Call history

#### 7.1.1 SIM1 call history

The handset can store missed calls, dialed calls and received calls, max 20 for each group.

#### 7.1.2 SIM2 call records

Please refer to SIM1 call records for operation.

### 7.2 Call settings

#### 7.2.1 SIM1 call settings

##### ➤ Caller ID

- ✧ Set by network: whether to send the number
- ✧ Hide ID: the number will not be displayed when dialing
- ✧ Send ID: the number will be displayed when dialing

##### ➤ Call waiting: open or close this function

##### ➤ Call divert:

- ✧ Divert all voice calls: call transfer in all conditions.
- ✧ Divert if unreachable: call transfer when it can not be contacted
- ✧ Divert if no answer: call transfer when there is no answer
- ✧ Divert if busy: call transfer when the line is busy

- ✧ Divert all data calls: call transfer when it is data-call

- ✧ Cancel all diverts: cancel all the call transfer

➤ Call barring:

- ✧ Outgoing calls: Limit the outgoing calls

- ✧ Incoming calls: Limit the incoming calls

- ✧ Cancel all: cancel the limit (need the password)

- ✧ Change barring password: Change the password

Line switch: line switch form 1 to 2. The default is line 1.

Note: if choosing line 2, whether you can make calls depend on the opera

Close user group: select the group list you want to close

### 7.2.2 SIM2 call settings

The details is referred to SIM1 call settings.

### 7.2.3 Advance settings

## 8 Message

In main menu, pitch on Message icon.,enter SMS by pressing the OK key.

### 8.1 Text message

The handset supports EMS with pictures, rings and flash. if the memory is not full, the message will be saved to SIM or handset(set by user). If the memory is full, you can not receive new messages, there will be a flickering icon on top of LCD indicating that the inbox is full, you have to delete some of them so that it can receive new ones.

### 8.1.1 Write a message

To write a message, you can follow the instructions:

Press “ctrl” key to switch the input methods: there are abc,PinYin,Simplified Chinese stroke,id,Numeric and Insert symbol.press “\* ”key,you can press “SYM”key to enter the interface of choosing symbol.

After sending the message, it will return to SMS menu. If you set delivery report on, there will be a report after it is sent successfully.

Please refer to SMS setting for the detail.

### 8.1.2 Inbox

There are SIM1 inbox and SIM2 inbox.

You can check the messages you have received in the inbox and reply, call sender, forward ,delete, delete all, mask as unread,Advanced(use number, use URL,use USSD,copy,move,copy all,move all).

### 8.1.3 Outbox

There are SIM1 outbox and SIM2 outbox.

You can check the messages you have saved in the outbox which is already sent or unsent and reply, delete, edit, forward, copy them to handset/SIM, move to handset/SIM, delete all, copy all, move all, use the number, use the connection, and so on.

### 8.1.4 Drafts



There are SIM1 drafts and SIM2 drafts.

If you do not want to send the message after you have finished it, you can save to drafts.

### 8.1.5 Templates


You can set some common templates for convenience. Choosing one of them, you can edit or delete it. Or you can set new one.

### 8.1.6 SMS setting

You have to make some basic settings before using the message function.

There are the following options:

- Profile setting: set a suitable format for messages. After entering a single format, you can set the file name; SMS center number, validity period and sending format.
- Common setting: whether to set message report or not
- Memory status: the memory status of the SIM card or the handset.
- Preferred storage: SIM card or the handset

 Note: this function needs the support of network operator.

## 8.2 MMS

### 8.2.1 Write a message

- To: input the information of the receiver, which can be single, or several handset numbers, or Email address (max 20). Press left key to select “edit” and then add the number or mail address, or you can add

new number or address. Choose “add number”; if the editing area is blank, you can press “search” to view the numbers in the phonebook, then press “ok” to add it. You can change or delete the phone number or mail address of the receiver. If you choose “delete all”, all numbers and mail addresses of the receiver will be deleted.

- Cc: the handset number or mail address to be sent to, the same operation as “To”.
- Bcc: the handset number or mail address to be sent to as “Cc” is confidential.
- Subject: to input the subject.
- Edit: able to add character, picture, sound, video and attachment.

After writing a new MMS, you can choose to send, save and send, save to draft box, save as template or you can edit message settings by choosing “sending options” or exit.

#### 8.2.2 Inbox

Display all MMS received. You can check, reply, reply to all, forward, delete, delete all or use the number.

#### 8.2.3 Outbox

Display all MMS sent. You can check MMS details, resend, edit, delete, delete all or use the number.


#### 8.2.4 Drafts

All MMS written but not sent yet. You can check MMS details, send,

edit, delete, delete all or use the number.

### 8.2.5 Message setting

- Compose: settings about the creation mode, picture sizing, auto signature.
- Send: settings about the validity period, delivery report, reading report, priority, slide time and delivery time.
- Retrieve: settings about the main network, roaming network, reading report and sending allowance.
- Filter: settings about anonymous sender and advertisement.
- Server profile: setting about the server.
- Memory status: the memory status of MMS.

 Note: this function needs the support of network operator.

### 8.3 Voicemail server


The voice mails you received are saved in network. You have to dial the number of the mail box if you want to listen to it.

- Edit: you can add or edit the name and number of the mail box.
- Call voice mail: dial the number and listen to the voice mail

### 8.4 Broadcast Message

- Receiving Mode: open or close the function
- Read the message: read the information you customized
- Languages: the language of the broadcasting
- Channel setting: set the band of the broadcasting, you can choose, add,

edit or delete it.

 Note: the functions of info service and voice mail are both supplied by the operator, please contact with your operator.

## 9 Phonebook

There are 2 memory types: SIM card and handset. 300 entries for the handset, the capacity of SIM card will depend on the SIM itself.


In the main menu, press phonebook key to enter phonebook.

You can choose the following functions in the phonebook:

- **Add new contact:** when the cursor on the “Add new contact” menu, press OK key, you can add new contact to the SIM or the handset. There is a little difference on the saving format.
- **Search contact:** you can search the linkman by the name.

## 10 File manager

In main menu, please pitch on the document management icon and press ok or left key to enter document management. It is used to management the files, including pictures, videos and flashes. There is 145K space in the handset, and the space can be enlarged by the memory card. After enter “document management”, the total space and the left space will be displayed on the up-right corner of LCD.

 Note: Some folders are hidden. To show them, you'll have to save it to root directory of the handset with a right format, and move them to a corresponding folder.

## 11 Service

### 11.1 STK service

The STK function is supplied by network operator. and it need the support of SIM card and network.

Note: different SIM card will display different content.

### 11.2 Internet service

- Homepage: select this menu; you can enter the default website to get the information about entertainment, movies, fashion, friends, games, etc.

## 12 Settings

You can set the options in the handset, including screen adjusting, handset setting, call setting, network setting, security setting, and restore factory default.

### 12.1 Dual SIM settings

There are 3 models: dual SIM open, only SIM1 open, only SIM2 open.

### 12.2 Phone settings

### 12.3 Network setting

- Network selection

Auto selection:

Manual selection: need registration.

- Preferential network: save some preferential network

## 12.4 Security setup

### SIM card lock

You can use PIN code to lock SIM card. And the code can be changed. You can set the security options of handset to prevent the illegal use of handset or SIM. PIN code can protect your SIM card. If the PIN code is off, you can open it. Next time the handset is power on, the PIN code will be asked. If the PIN code is on, you can close it. Select security setting- change the password-PIN code, you can set new PIN code. Please enter the old PIN code, new code and repeat it according to the instruction.

Note: if you input the PIN code wrongly for three times, the SIM card will be locked. Then you need PUK code to unlock SIM. PIN and PUK code may be provided to you together with SIM CARD. If not, please contact with the operator. The default code is 1234; please change it to your personal code as soon as possible.

### Phone lock

You can lock the handset to avoid being illegally used.

You have to input the handset password each time you power on the handset.

Note: The default password is 1122; please change it to your personal password as soon as possible.

## 12.5 Restore factory settings

Input the password of the handset lock, you can set the parameter to factory default.

## 13 Organizer

In main menu, please pitch on organizer icon ,then press left or ok key to enter tool box.

### 13.5 World clock

You can choose the world time by viewing time zone of every city. And then LCD will display the date and time of the corresponding city.

### 13.6 Alarm

There are 5 alarm clocks for you to choose.

- Open/close
- Alarm time
- Alarm periods: one time, every day, one day or several days in a week.

You can select by up/down key.

- Alarm tone: set the alarm alert with tones or FM radio.
- Snooze: choose from 1 to 10 minutes.
- Alert type : ring,vibration, ring and vibration

Press right functional key to complete.

Note: when an alarm begins to ring, if there is no operation or you choose sleepy time mode, the alarm will ring again after 4 minutes (default). 3 times after that, the alarm will close automatically

## 14 Extra

### 14.1 Calculator

There is calculator in the handset, and you can operate it by keypad.

The operation is as follows:

- Input the first number: when 0 is displayed on LCD, input the first number.
- Input the counting symbol and then the second number. Choose +, -, \*, /, = by press the up, down, left, right key
- Press the equal mark, and come out the result.
- Keeping calculating: You can use the result to keep calculating.
- Clear: press right functional key. The content cleared is decided by the inputting status. If the result is already there, then 0 is displayed on LCD
- If you are inputting number or symbols, only the current number or symbol is cleared.
- Exit: Press back key to exit. If there is no soft back key on LCD, then you have to press clear key to exit one by one.

### 14.2 Calendar

you can check or edit the memo of the appointed date. There are the



following functions.

- View: Check or edit the memo of the date. Refer to memo for details.
- View all
- Add event : add new schedule
- Delete event
- Jump to date: skip to the appointed date to check or edit the memo.
- Go to today: Can be switched to today
- Go to weekly view : display it weekly

#### 14.5 Ebook reader

You can read ebook by using the function.

### 15 USB function

When the USB data-wire is in use, it will start the charging function at the same time. It is no need to install driver when under Windows2000/XP systems; while you have to download the driver from the internet under Windows98/98SE systems.

There are 3 different functions of the USB data-wire in the handset:

Storing: connecting the data-wire to the computer, If the handset is power on, USB setting will pop out, please choose the storage. If the handset is power off, there is no need to set the storage, computer will find the storage in handset automatically, and show the USB icon on computer. Open it and you can see and change the content.

Video camera: connecting the data-wire to the computer, and then choosing “video camera”, you can use the handset as network camera.

Com port: connecting the data-wire to the computer, and then choosing “Sequence port”, you can dial-up to the internet.

Note: this function needs network support, please contact network service supplier if possible.

## 16 Battery security

- Please use the battery appointed by the factory. Using other parts will make all guarantees service invalid. The factory will take no responsibility for the damage caused by using non-original parts.
- The new battery can achieve the best performance only after two or three complete charging and using.
- The battery can be charged for hundreds times, but it will become invalid at last. Please buy a new one when the idle time and talk time are apparently shortened.
- Please disconnect the charger with power supply when you do not use the charger. Do not connect the battery to the charger for more than a week, overcharge will shorten the battery life.
- Please do not put the battery together with metal.
- Please do not bend or open the battery.
- Please do not put the battery in water or fire.

- The battery can be charged when the environment approaches the room temperature, it possibly can't be charged when the temperature is  $-40^{\circ}\text{C}$  or  $+55^{\circ}\text{C}$ .

## **FCC RF EXPOSURE INFORMATION:**

### **WARNING!! Read this information before using your phone**

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

## **BODY-WORN OPERATION:**

This device was tested for typical body-worn operations with the back/front of the phone kept 5mm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 5mm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 5mm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

## **NORMAL POSITION:**

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

### **RF Exposure Information:**

This product is compliant with FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2AL62-KINMIV03 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.