



**KODAK**

23-Inch Wall Photo Frame  
Wi-Fi Enabled  
型号：WF238

# User Guide

## 用户指南





 
# Content 目录

Inside the box 在包装内	Page 1
Sensors 传感器	Page 2
Remote Control 遥控器	Page 3
Set up your wall frame 设置您的相框	Page 4-6
Download Kodak Wall Frame App 下载应用程序	Page 7
Register your account 注册您的帐户	Page 8-9
Activate your account 启动您的帐户	Page 10-11
Connect to your wall frame 连接到您的相框	Page 12-14
Kodak Wall Frame App 应用程序	Page 15-16
Create albums 建立相册	Page 17-18
Create playlists 建立播放列表	Page 19-20


# Content 目录

Add playlists to the frame 加入播放列表到相框	Page 21
Remote Control function - Display menu 遥控器按钮功能 - 主页面	Page 22-24
Remote Control function - Display menu settings 遥控器按钮功能 - 主页面设置	Page 25
Display menu settings 主页面设置	Page 26-28
Kodak Wall Frame App - Edit/Upload Video 编辑/上传视频	Page 29-30
Kodak Wall Frame App - Others 应用程式 - 其他	Page 31-34

# Inside the box 在包装内



Kodak Wall Frame  
Kodak 挂壁式相框

 


Remote Control  
遥控器




Gift Card  
兑换卡



 User Guide  
用户指南

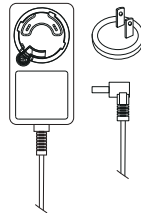

Power Adaptor  
电源适配器

 

Metal Rack  
金属挂架

Prolong use of 3C products will cause harm to vision  
使用过度恐伤害视力。

Please note  
注意事项

1. Recommend to rest 10 minutes for every half hour interval.
2. Children whom are under the age of 2 are not recommended for usage. Children whom are over the age of 2 are recommended to not exceed the prolong usage of 1 hour per day.

- 1 使用30分钟请休息10分钟
- 2 未满2岁幼儿不看萤幕, 2岁以上每天看萤幕不要超过1小时

NCC Warning Statement  
NCC警语

## Article 12

Without permission, any company, firm or user shall not alter the frequency, increase the power, or change the characteristics and functions of the original design of the certified lower power frequency electric machinery.

## 第12条

经型式认证合格之低功率射频电机, 非经许可, 公司、商号或使用者均不得擅自变更频率、加大功率或变更原设计之特性及功能。

 
## Article 14

The application of low power frequency electric machineries shall not affect the navigation safety nor interfere a legal communication, if an interference is found, the service will be suspended until improve ment is made and the interference no longer exists.

## 第14条

低功率射频电机之使用不得影响飞航安全及干扰合法通信; 经发现有干扰现象时, 应立即停用, 并改善至无干扰时方得继续使用。  
前项合法通信, 指依电信法规定作业之无线电通信。  
低功率射频电机须忍受合法通信或工业、科学及医疗用电波辐射性 电机设备之干扰。

## Sensor 传感器

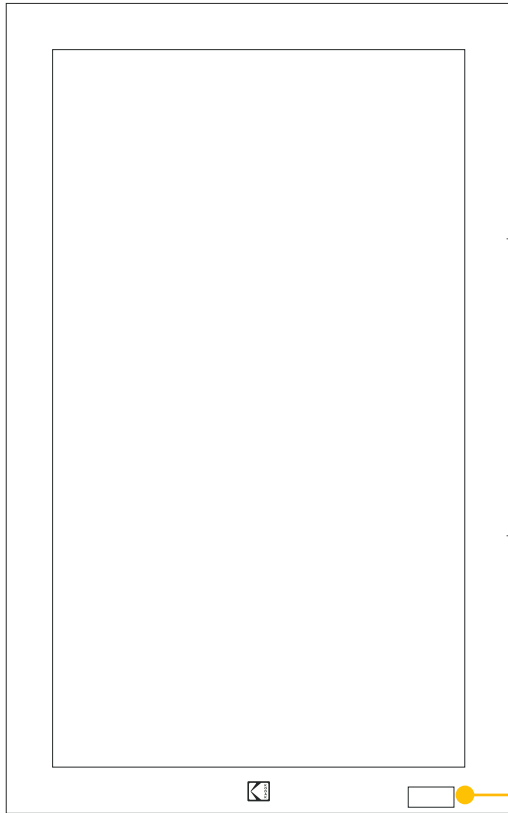

Infrared receiver  
红外线接收器


Infrared receiver receiving signal from remote control  
红外线接收器接收来自遥控器的信号

Auto sleep when no movement in front of frame for around 10 min.  
Under auto sleep status, from will auto switch on  
when sense movement in from of frame.

在相框前面约10分钟无移动动作时,相框自动休眠。  
相框处于自动睡眠状态下,当感觉到相框前面有移动动作时,相框自动点亮。

# Remote Control 遙控器

 
## Instruction guide of your remote control 遙控器的使用说明

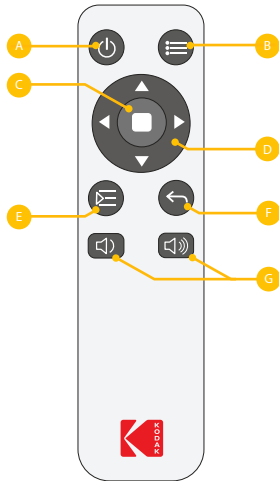

- |   |  |
|---|--|
| <b>A</b> On / Off                           | Turn On/ Off the wall frame<br>打开/关闭相框   |
| <b>B</b> Menu<br>菜單                         | Go to menu<br>转到菜单   |
| <b>C</b> Enter<br>確定                        | Select / Play / Pause<br>选择 / 播放 / 暂停  |
| <b>D</b> Left / Right<br>Up / Down<br>上 / 下 | Menu navigation / Video playback control<br>菜单导航 / 图片播放控制<br>Menu navigation / Quick picture browse<br>菜单导航 / 快速浏览图片 |
| <b>E</b> Playlist<br>播放清單                   | Choose different playlist<br>选择播放清單  |
| <b>F</b> Back<br>返回                         | Go back to the last step<br>退回上一步  |
| <b>G</b> Volume<br>音量                       | Increase/decrease volume<br>增加/减小音量  |

# Set Up Your Picture Frame 设置您的相框
 
## Kodak Wall Frame

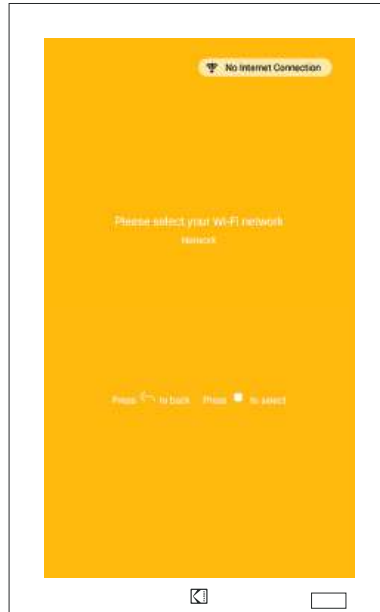

Please be prepared the following items before setting up  
在安装之前请准备好以下事项

- Kodak Wall Frame
- Remote Control
- A smart phone
- WiFi network which can access to the internet
- Kodak 相框
- 遥控器
- 智能电话
- 能连接互联网的 WiFi 网络

Choose your language  
选择你的语言

Then choose your WiFi network  
然后选择您当地的无线网络



# Set Up Your Wall Frame 设置您的相框

## Kodak Wall Frame



 
Select and confirm your WiFi network  
确认您的网络




Then type in your password  
然后输入您的密码

# Set Up Your Wall Frame 设置您的相框

## Kodak Wall Frame

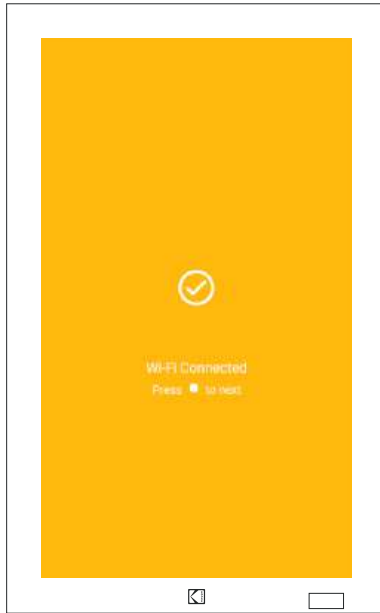

 If the password is correct,  
it will show as "Wifi Connected"  
如果密码正确，  
它将显示“已连接网络”

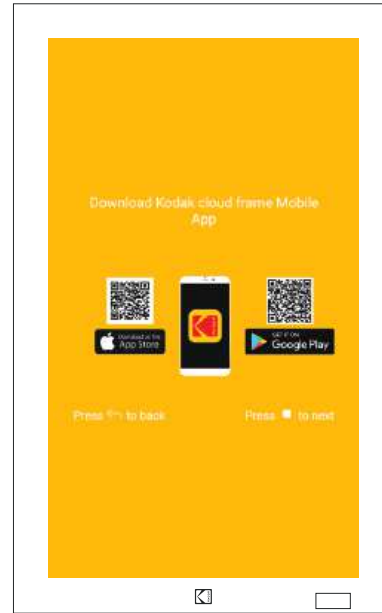

Select the iOS/ android QR code  
on your Kodak Wall Frame to  
download the mobile app  
在 Kodak 云端相框上  
选择 iOS / Android 二维码下载App

# Download Kodak Wall Frame App 下载应用程序

## Kodak APP

Download the Kodak Wall Frame App  
下载Kodak Wall Frame 应用程序

 
Download and Install the Kodak Wall Frame App from Apple App store or Google Play  
從Apple App Store或Google Play下载并安装Kodak Wall Frame App




Open the application & sign up to create your account  
打开应用程序并注册以建立您的帐户

# Register Your Account 注册您的帐户

## Kodak APP

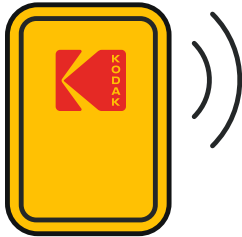

 
Open the Kodak App through your phone  
通过手机打开 Kodak wall frame app

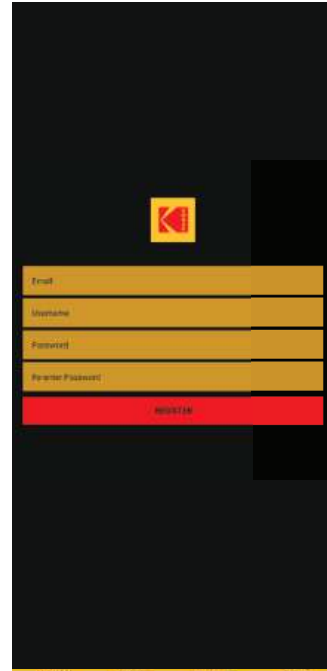

Sign up a account by using a valid email address & setup your  
username & password to login. Then click " Register"  
使用有效的电子邮件地址注册帐户并设置用户名和密码进行登录  
然后点击“注册”

# Register Your Account 注册您的帐户
 
## Kodak APP

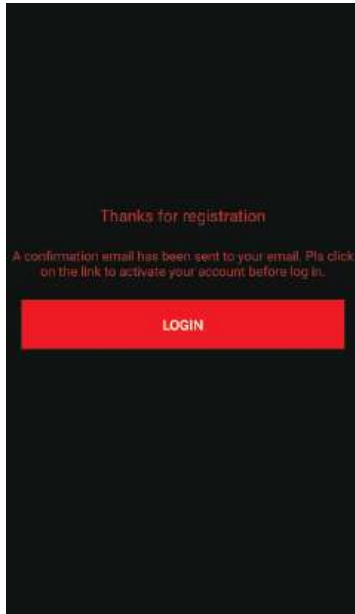

### Registration Success

A verification mail will be sent to your provided email address.  
Then by clicking the activation link to complete the sign-up process

验证邮件将发送到您提供的电子邮件地址。  
然后点击激活链接以完成注册过程

# Activate Your Account 启动您的帐户

## Kodak APP

Check your mailbox, click on the link  
检查您的邮箱, 点击链接

 
```
Dear Customer,  
Thanks for your registration. Pls click on the link to activate your account, then log-in to enjoy the services.  
Thanks for using our products and services.  
http://kodakframes.maxtdigital.com/activate?id=5ef8520a4af0530a18b0c3f1
```

Dear Customer,  
Thanks for your registration. Pls click on the link to activate your account,  
then log-in to enjoy the services. Thanks for using our products and services.

亲爱的客户, 感谢您的注册。  
请点击链接以激活您的帐户, 然后登录以享受我们的服务。  
感谢您使用我们的产品和服务。

# Activate Your Account 启动您的帐户

## Kodak APP

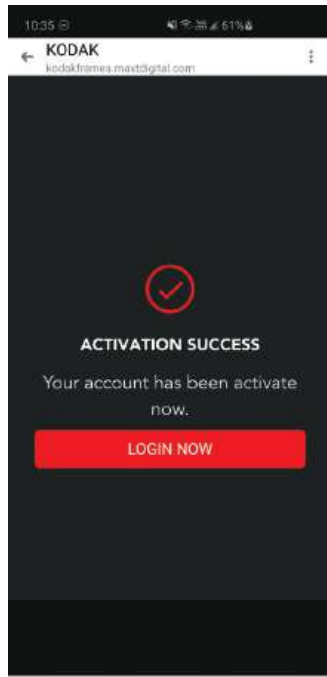

Activation success

Your account has been activate now.  
You can now login in.

激活成功

你的帐户已激活  
现在可进行登入。

# Connect to Your Wall Frame 连接到您的相框

## Kodak APP



Click the “+” sign next to FRAMES or  
点击 FRAMES 旁边的“+”符号 或  
点击“连接到新相框”

 


Scan QR code  
掃描二維碼




# Connect to Your Wall Frame 连接到您的相框

## Kodak Wall Frame

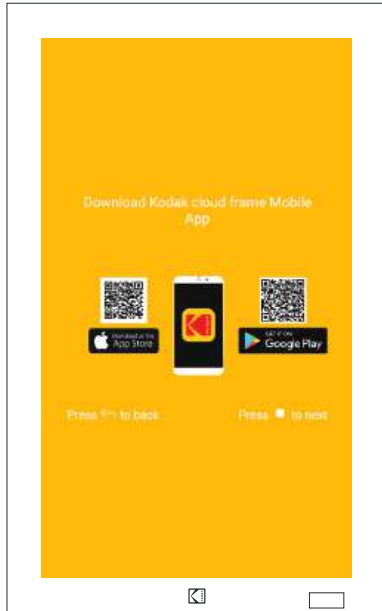

 Press "Enter" to show the Frame QR code,ready for scan  
按“确认”键后,会显示相框专属的 QR code

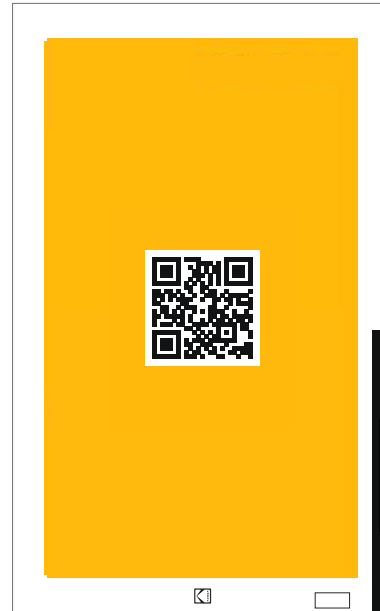

After the QR code scanning interface is opened,  
Scan the QR code via your phone and start pairing  
打开扫描介面后,通过手机扫描二维码,然后开始配对

## Connect to Your Wall Frame 连接到您的相框

### Kodak Wall Frame

 


Once your frame is connected to your phone,  
the Kodak logo will be appeared  
当您的相框连接到手机时,会出现Kodak商标


Now, customer can upload their picture  
and manage photos on the frame using mobile app  
现在,客户可以使用APP上传图片并管理相框中的照片

**Kodak Wall Frame App 应用程序** >>

## Kodak APP

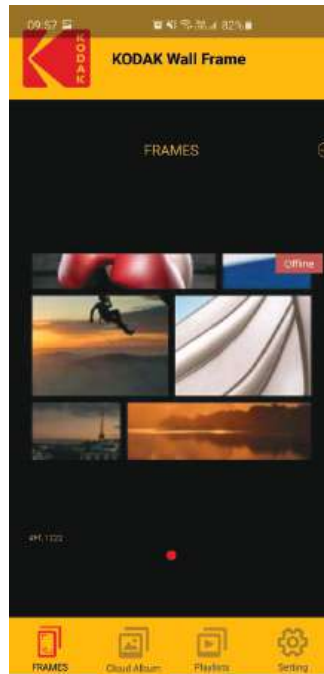

## Kodak APP

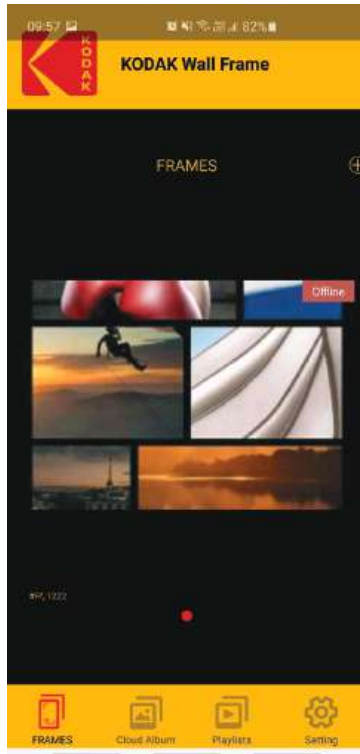 

Home page

1. Connect to Kodak Wall Frame
2. Managing photo frame (photo albums & playlists) (May connect to max. 5 picture frames simultaneously with one account)

主页

1. 连接到相框
2. 管理相框 (相册和播放列表)  
(一个帐户同时连接最多 5 个相框)

Albums (Upload & manage photo)  
相片集 (上传和管理照片)




Playlists (Add & manage photos at the frame)  
播放列表  
(新增及管理相框中的照片)

Setting  
Change profile picture, name, password, language, Code redemption

设定  
更改个人帐户 图片, 名称, 密码, 语言及代码兑换

## Kodak APP

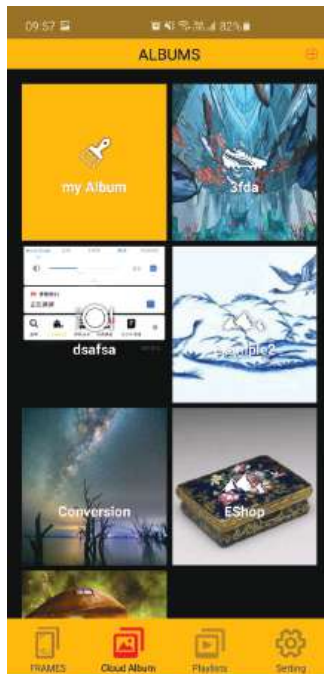 


Create Albums  
建立相冊

Import, upload and manage your photo easily  
轻松建立, 上載和管理您的照片

# Kodak Wall Frame App - Create Albums 建立相册
 
## Kodak APP

Step 1  
步骤 1

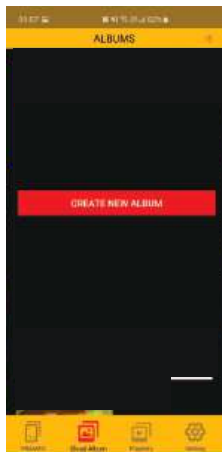

Click "+" or "create new album" to create album  
点击“+”或新增相册以建立相册

Step 2  
步骤 2



 
Enter album name  
输入相册名称

Step 3  
步骤 3




Select the source to import your photo  
选择照片来源以上传到云相册

Step 4  
步骤 4

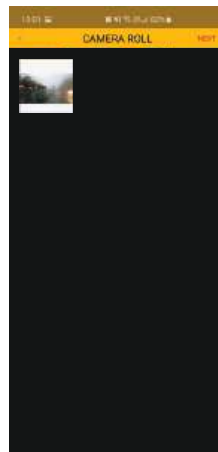


Select the photo to import  
选择要上传的照片

 Step 5  
步骤 5

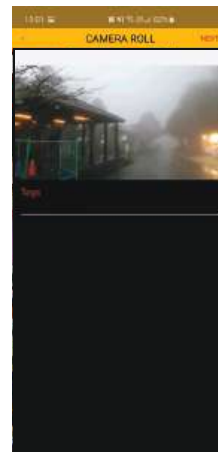

Create tags for each of your photos before pressing the "ADD" to confirm  
在确认按“添加”之前，为每张照片加上标签

 Step 6  
步骤 6

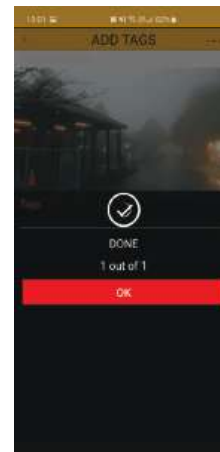

Upload complete  
上传完成




Create playlists  
Manage the photo to display on picture frame(s)

建立播放列表  
管理在相框展示的相片

# Kodak Wall Frame App - Create Playlists 建立播放列表
 
## KODAK APP

Step 1  
步骤 1

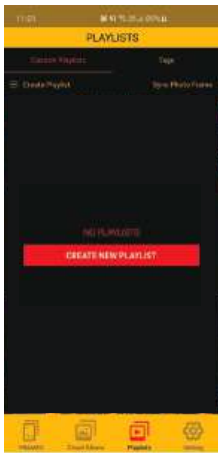

Click “+”  
or “create new playlist”  
to create playlists  
点击“+”或按“建立播放清单”  
以建立播放清单

Step 2  
步骤 2



Enter name for playlist,  
then press “ADD”  
输入播放列表的名称,  
然后按“添加”

Step 3  
步骤 3



Click “import photo”  
button to add photos  
点击“输入照片”按钮  
添加照片

Step 4  
步骤 4



Select photo from album,  
then press “Confirm”  
从云相册中选择照片,  
然后按“确认”

Step 5-8  
步骤 5-8



# Kodak Wall Cloud Frame App - Create Playlists 建立播放列表

## KODAK APP

Step 1-4  
步骤 1-4

Step 5  
步骤 5

Step 6  
步骤 6

Step 7  
步骤 7

Step 8  
步骤 8



Playlist created  
播放列表已建立



Assign playlists to your  
wall frame  
将播放列表连结到相框



Select playlist(s)  
选择播放列表

 


Assign playlists to wall frame  
completed  
成功将播放列表连结到相框

# Kodak Wall Frame App - Assign playlists to the Frame 加入播放列表到相框

## KODAK APP

Step 1  
步骤 1

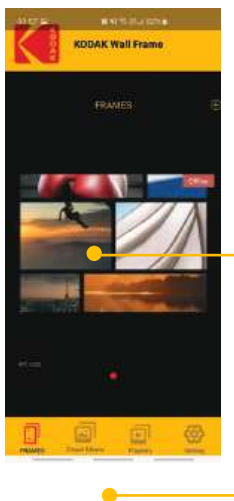

Select the frame  
选择相框

Step 2  
步骤 2

 


Press on the playlist  
按一下播放列表

Step 3  
步骤 3




Select the playlist you want  
to add and press confirm  
选取需要加入的播放列表  
按确认键

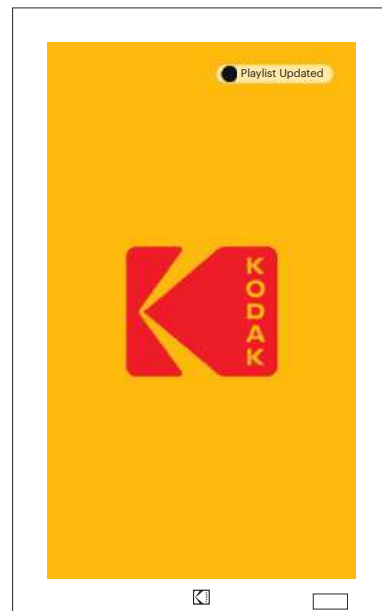


"Playlist Updated" will be show on  
the frame  
“播放列表更新”的提示会显示在  
相框

## Kodak Wall Frame

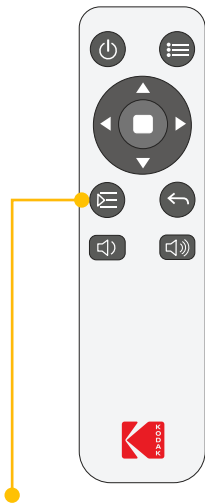 

 
To access your playlist page directly, press "Playlist" button  
播放清单键:直接进入播放清单页面

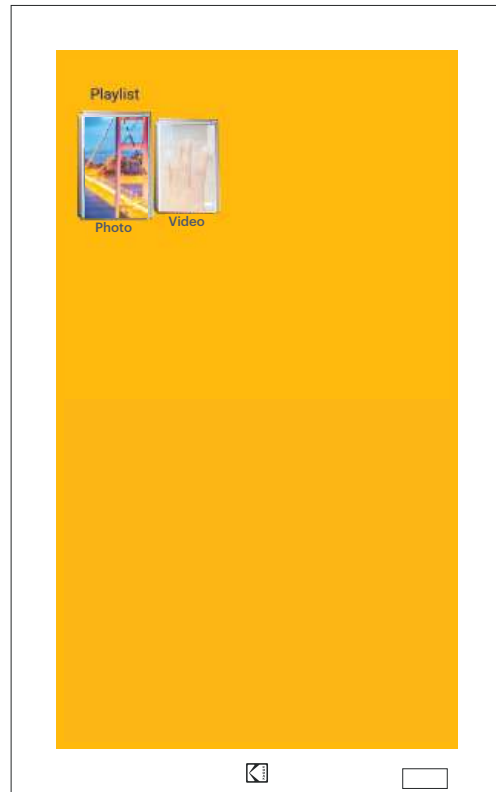


## Kodak Wall Frame



 To access frame setting, press "menu" button  
按菜单按钮进入相框设置

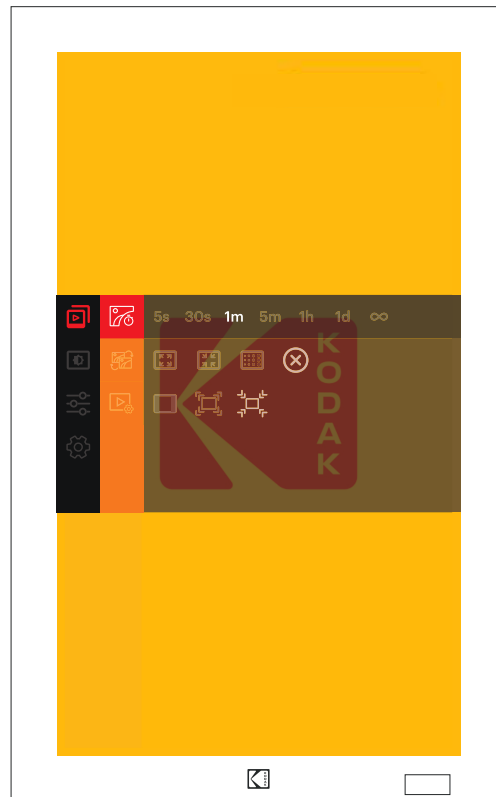


## Kodak Wall Frame

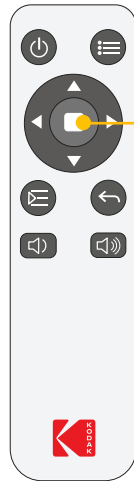 

Press "Enter" button to adjust the current image  
按确定键对正在播放的相片作出调整

 Rotate clockwise / anticlockwise  
Zoom in / out  
顺时针 / 逆时针旋转  
放大 / 缩小

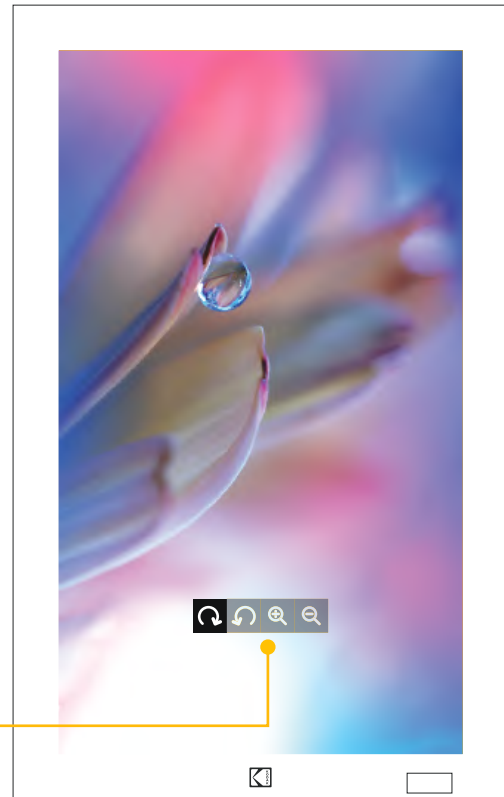

Kodak Wall Frame


 
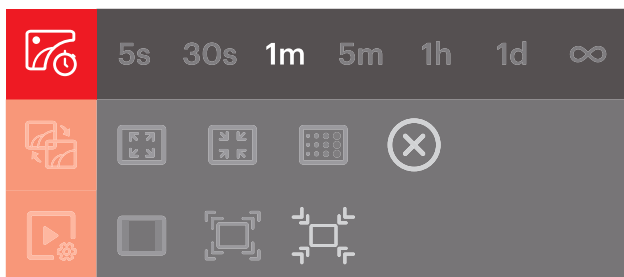 


Photo display duration adjustment 照片显示时长调整

Photo display mode adjustment  
(zoom in / zoom out / fade in & out / None)  
照片显示模式调整 (放大/缩小/淡入/淡出/无)

Photo transition mode adjustment  
(fit to screen / fill screen / full screen)  
照片过渡模式调整 (適合屏幕/填充屏幕/全屏)



## Kodak Wall Frame

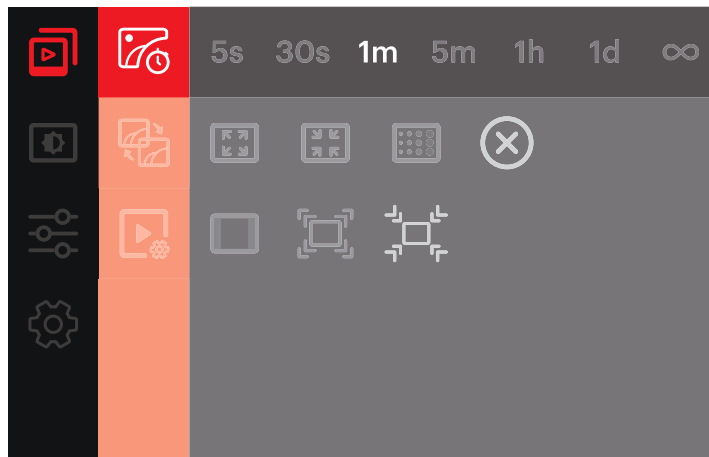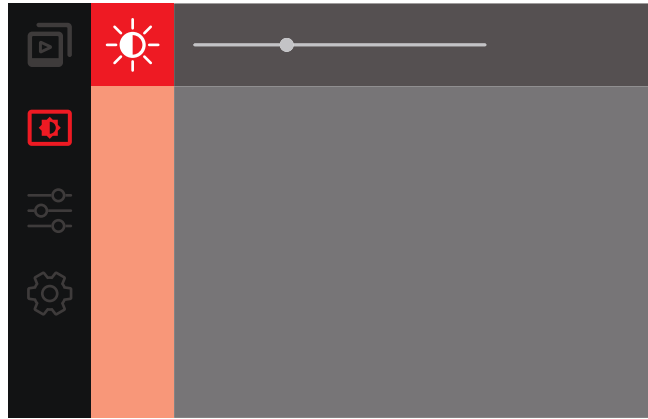 

Adjust the frame brightness level  
自由调整亮度

# Display Menu Settings 主页面设置
  
## Kodak Wall Frame

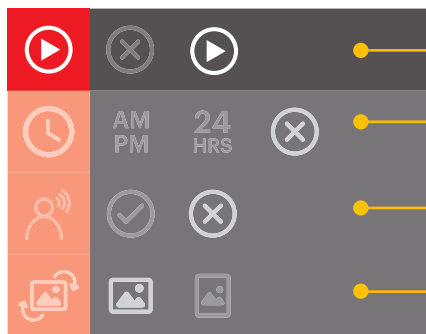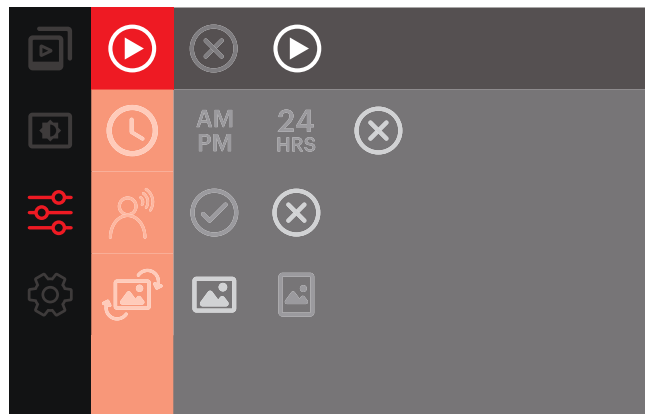

Play: ON/OFF to play video 播放: 开/关 播放视频

Time display: AMPM/24HRS/OFF 时间显示: AMPM/24小时制/关


Motion Sensor: ON/OFF

人体感应: 开/关

Change the photo display orientation: Horizontal/Vertical

 更改显示方向: 水平/垂直



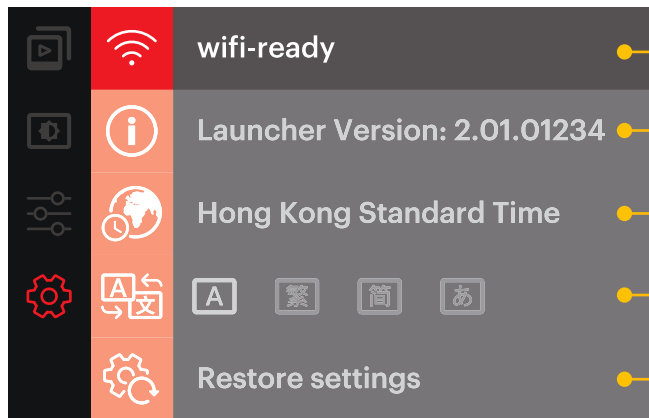

Connect to WiFi 连接到WiFi

Launcher information, include information on binded user ID, email, product serial number, launcher version, local storage information and "Check for Update" button  
相框系统信息, 包括已绑定的用户ID, 电子邮箱, 产品序列号, 相框系统版本, 本地存储信息, 检查更新按钮等

Time zone: selection of Time Zone 时区:选择时区

Support languages: selection of language at launcher  
支持语言:选择相框系统的使用语言

Restore Settings: restore to factory settings  
恢复设置:恢复出厂设置


## Kodak APP

 Step 1  
步骤 1



Select the local Video button in album to add video  
在相册内选择增加视频

Step 2  
步骤 2

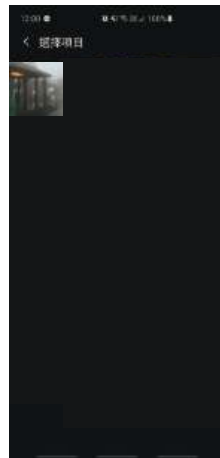

Select the video in which you would like to add  
选择你要转换的视频

Step 3  
步骤 3



Users are able to trim and preview a "15 seconds clip" with the selected video  
用户可剪辑与预览最多15秒的片段

Step 4  
步骤 4



After press the trim video button, wait until the video finish process  
确定剪辑后,等待视频完成处理

Step 5-8  
步骤 5-8

# Kodak Wall Frame App - Edit/Upload Video 編輯/上傳視頻

## Kodak APP

Step 1-4  
步骤 1-4

Step 5  
步骤 5

 
Step 6  
步骤 6

Step 7  
步骤 7

Step 8  
步骤 8



Video is now ready for preview,  
Press video import  
视频现在可以预览, 按下输入视频

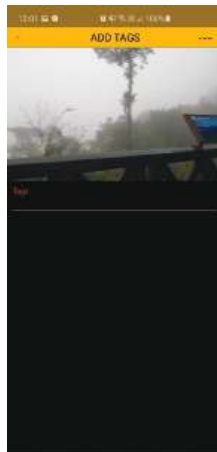

Add tags for the video,  
and press ADD  
为视频加入标签,  
完成后按新增



Video start to upload,  
Wait until it finish  
视频开始上传,  
等待完成



Video added into  
album now  
视频已新增到相册

## Kodak APP



### Personal Profile Settings

#### 个人资料设置

You are able to change your user profile password, language settings, and access to user application version for reference.

#### Key Feature Settings :

- Change password
- Change languages
- Redemption for cloud storage
- Change profile picture
- Change user name

 
您可以更改用户配置文件密码, 语言设置, 访问用户应用程序版本以供参考。

#### 主要功能设置：

- 更改密码
- 选择语言
- 兑换云存储空间
- 更改用户个人图片
- 更改用户名称

## Kodak APP

Step 1  
步骤 1

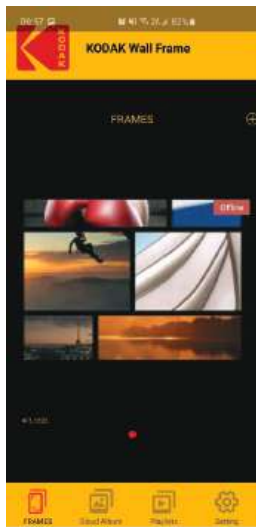


Press on the frame you want to restore to factory setting.  
点击需要恢复出厂参数设定的相框

Step 2  
步骤 2



Press on the reset button under Factory Reset  
点击恢复出厂参数设定的恢复键

 Step 3  
步骤 3

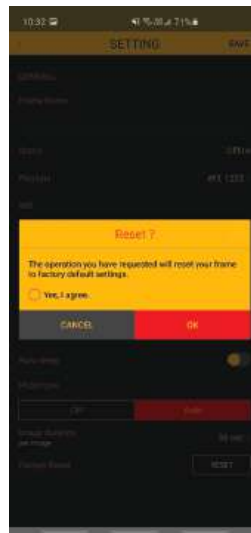

Select "Yes, I agree." and press OK  
勾选“同意”后按确定

Restore to factory settings  
恢复设置: 恢复出厂参数设定

For reset to factory default:

Select frame with online status then go to setting page and select sign out.

恢复出厂参数设定

选择相框后, 去设定介面并选择登出

## Kodak Wall Frame



The frame reset to factory default  
User can set up the frame now  
(User guide page 4 for more details)

相框已经恢复为出厂设定  
用户可以开始设置相框  
(参考用户指南 page 4)



## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### **FCC Radiation Exposure Statement:**

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.