

User manual

The lights are installed by EX39 lampholder. Users can control the brightness of the lights and switch them on or off with their mobile phones and computer. The control process is realized through the zigbee signal of the lights and gateway. When you execute a control command, the gateway will send a zigbee signal. The antenna on the lamp then picks up the signal and performs the action.

1. Account registration—Send the username and email address to Chenzw@yankon.com.
2. Login username by <https://www.megaman-system.com/login>.
3. Send the Mac of lights and the gateway to the background administrator (Chenzw@yankon.com) for addition.
4. Turn on the lights. Control the lights on the web.

FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.