品牌:ozzie 型号: H50

设计项目:说明书

文件名称: H50\_ozzie\_OZ-H50\_说明书\_折页\_01

说明书尺寸:60mm X 90mm(展开尺寸:300mm X 90mm)

工艺说明:105g铜板纸,单色正反面印刷,折页(折扇形).

制作版本:01

90.0 mm

备注: 第一版


### 300.0 mm

60.0 mm

## ozzie

### **Outdoor Wireless Speaker**

# **User Manual**

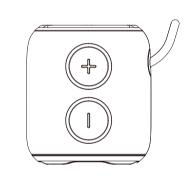

**H50** 

#### SAFFTY INSTRUCTIONS

Do not open up the speaker, it voids the warranty and may damage the product. Rechargeable batteries have a limited number of charge cycle:

 
Battery life and number of charge cycles varies by use and settings.

Never place the speaker close to high temperature heat sources.

To keep the warranty valid, never try to repair the product yourself

#### PARTS AND FUNCTIONS

- +: Volume up button: next song, increase the volume.
   -: Volume down button: previous song, decrease the volume.
   Power button: power on/off, switch the playing mode.
   Pause button: play, pause, answer call, TWS.
   Type-C charging port.
   AUX IN port.
   Microphone.



#### THE SPEAKER'S BATTERY

nect the supplied charging cable to the charge input and to a USB port on your computer or a USB charger

The charging LED is lit red during charging.

# The LED turns off when fully charged. It is recommended to charge 10 minutes before power on if you 7 days unused, then you can continue to use while charging.

hen the Bluetooth indicator light is on and you can connect Bluetooth devices.

Long press power button 3 seconds to por and then Bluetooth indicator will turn off.

#### CONNECT THE SPEAKER

Turn on the speaker, the bluetooth indicator flashing white, on your device search for Bluetooth devices. Select the speaker from the list.

Select the Speaker I of II the III.s.

It will give an indication sound when the connection is success. The bluetooth indicator solid white.

Only one Bluetooth device can be connected at the same time.

If you want to connect another device to the speaker, then first disconnect the current one.

#### DISCONNECT THE SPEAKER

#### RECONNECT THE SPEAKER

Some Bluetooth devices support automatic reconnection, with those devices the speaker will automatically reconnect. The speaker will not automatically reconnect on devices that does

When it's not connected: double click power button to connect to the last disconnected device.

#### PLAYING MODE

#### PLAY MUSIC USING MICRO SD CARD

### AUDIO CABLE CONNECTION

#### THE PAUSE BUTTON'S FUNCTIONALITY

1) Music playback status: play, pause function

 When you're calling: Press 2 seconds to reject the call.
 Press 2 seconds to enter TWS connection, once connected, press 2 seconds to disconnect TWS connection.

3) Long press for 5 seconds to clear the pairing information and

### CHANGE VOLUME AND SONG

When listening to music Increase volume: Short press on the "+" button. Decrease volume: Short press on the "- " button.

Previous song: Long press on the "-" button.

Next song: Long press on the "+" button.

#### HANDS-FREE FUNCTIONALITY

- Turn on the speaker and the bluetooth indicator will flash white
   Short press the pause button to answer the call on the speaker, you can talk to each other through the microphone hole,
- after call ended, it will continue to play music arter call ended, it will continue to play music.
   3. Long press the pause button on the speaker to reject an incoming call.
   4. The bluetooth indicator will be solid white, only one bluetooth device can be connected at the same time.

ress and hold the reset button through the aux port with clip for

### **AUTOMATICALLY TURN OFF FUNCTIONALITY**

Bluetooth is not connected and no music is playing.

正面

#### TECHNICAL PARAMETERS

- Model: H50
   Bluetooth: V5.1
   Speaker: SW\*1
   Built-in rechargeable battery: Li-on, 3.7V, 1200mAh

- Charging time: 3 hours
  Playing time: 6 hours
  Input: 5.0V 1.0A
  Product Size: 80\*80\*86mm
- Product Weight: 260g
- Range: Up to 10m

#### PACKAGE INCLUDING

- 1pcs\* H50 wireless spea 1pcs\* Product manual 1pcs\* Type-C USB cable

### TWS CONNECTION

- 2: Press and hold the Play/Pause-button on one of the speakers fo
- spaker for pairing initially.

  3: Release play/Pause button. It can take a few more second: before speakers connect to each other. Check the indicator lights to distinguish L/R channel; The white light on one speaker is to distinguish L/R channel: The white light on one speaker is flashing white for every 3 seconds that should be the left channel (the primary speaker); the white light on the other speaker is solid white that should be the right channel 4: Go into the Bluetooth menu on your smartphone and pair the speakers with your phone by selecting the speaker model number (it will only display 1 number which is both combined into one)

### TWS DISCONNECTION

Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound

#### FAULT AND MAINTENANCE

- Please power on your speakers if the light isn't on.
- Please charge the speaker if the light is still not on (2) Please turn off the other Bluetooth devices, if there are many
- Bluetooth devices surrounding.
  This may result in search difficulties.
  (3) Restart wireless speaker on devices for Bluetooth search

#### Second problem: The music player appears sound breaks.

- (1) View the distance between the player and the speaker has not ceeded offective Bluetooth connection distance
- (3) Check the playback device or whether the speaker is in a low

### NOTES BEFORE USE

- This product is designed with full attention for safety performance To ensure safe operation, please follow the following rules:
- 1. Place the speakers in a stable position avoid fall and cause
- equipment, stoves, or other heat-generating equipment) where the use of speakers.
- 4. Please send professional maintenance staff to repair for any
- reason damage.

  5. Before wiping with a dry cloth to clean the speakers, set the power switch to the off position and unplug the power cord from the power outlet.

  6. Health considerations, please adjust the sound to a suitable level.

- nplies with Part 15 of the FCC Rules. eration is subject to the follo
- Operation is subject to the following two conditions:
  (1) This device may not cause harmful interference.
  (2) This device must accept any interference received, including interference that may cause undesired operation.

responsible for compliance could void the user's authority to

for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonab harmful interference in a residential installation

However, there is no guarantee that interference will not occur in a

. If this equipment does cause harmful interference to radio o It his equipment does cause harmful interference to radio or letevision reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver

- Connect the equipment into an outlet on a circuit different
- from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for

#### FCC Radiation Exposure Statement:

forth for an uncontrolled environment

### ROUBLESHOOTING

The speaker does not turn on?

The speaker does not turn off or does not respond?

Reset your speaker. hold the power button for automatically reset the speaker and turn it off

#### There is no sound?

Ensure there is no obstacles in the way that can block/disturb the eck via the device's Bluetooth connection if the speaker is

There is poor sound quality?

### Cannot connect the device with the speaker?

In order to avoid harming the product performance please do charge your device each 3 months at least.