品牌:ozzie								备注:	
名称:P4 说明书 P4_ozzie_中性_说明书_01					产品型号:OZ-P4 说明书尺寸:90mm X 60mm (展开尺寸:450mm X 60mm) 工艺说明:105g铜版纸 , 单色正反面印刷 , 折扇形。			第一版,	
		90.0 mm			450.0 mm				
en n		P4 PartyBox Bluetooth Speaker User Manual P4		Read all ir Only chargy Do not ope Rechargeal Battery life Never place To keep the PARTSAI 1. Power bu 2. Bluetoot 3: Volum decrease 4. Pause bu 5t; Volum 6. AUX INP 7. TF card : 8. RESET.	harging port.	/ damage the product. cles. settings. urces.	 THE SPEAKER'S BATTERY A built-in rechargeable battery powers the speaker. CAURGINE Connect the supplied charging cable to the charge input and to a USB port on y charger. The chargeing LED is lit white when charging, and the 5 LED indicator v charged. It is recommended to charge 10 minutes before you power on the speatent provide and continue to use while charging. POWER ON/OFF Power on: Long press power button 3 seconds to power on the speaker, then the is on and you can connect Bluetooth devices. Power off: Long press power button 3 seconds to power off the speaker, and the will turn off. CONNECT THE SPEAKER Turn on the speaker, the bluetooth indicator flashing white, on your device sees Select the speaker from the list. It will give an indication sound when the connect to us on the connect another device to the speaker, then first disconnect the lit you want to connect another device to the speaker, then first disconnect the lit so connected via Bluetooth , long press bluetooth button 3 seconds to device. DECONNECT THE SPEAKER When it's connected via Bluetooth , long press bluetooth button 3 seconds to device. CONNECT THE SPEAKER Some bluetooth devices support automatic reconnection; with those devices, the speaker of the speaker.	will be solid white when fully eaker if you 7 days unused, the Bluetooth indicator light hen Bluetooth indicator arch for Bluetooth devices. ection is successful. ed at the same time. e current one. lisconnect it .	reconnect. The speaker will not When it's not conner RGB LIGHT short press RGB light Long press the RGB light Ung press the RGB light While the light off ,sl While pay music ,RC While pause music , RC While pause music , RC Short press the bluet BASS MODE The BASS MODE The BASS mode is tu Short press to turn o Long press for 5 sect and automatically sh PLAY MUSIC US Connect a micro SD (AUDIO CABLE CC Power the speaker o Connect a 3.5 mm at

下面

AUTOMATICALLY TURN OFF FUNCTIONALITY

The speaker will automatically turn off in 10 minutes when Bluetooth is not connected and no music is playing.

TECHNICAL PARAMETERS

- Model: P4 Speaker: Ø80mm 4Ω/20W*2 Charging time: 3.5 hours Input: 5.0V - 2.0A
 Product Weight: 1932g Waterproof level: IPX4
- Bluetooth: V5.0 Built-in rechargeable battery: 7.2V, 2500mAh
 Playing time: 3 hours • Product Size: 330mm*125.6mm*140.8mm Range: Up to 10m

PACKAGE INCLUDING • 1pcs* P4 wireless speaker 1pcs* Product manual
 1pcs* Type-C USB cable

TWS CONNECTION

- Furn on both speakers 2: Press and hold the Plav/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound. The default is the primary speaker that you operated the Play/Pause-button of this
- spaker for pairing initially. 3: Release play/Pause button. It can take a few more seconds before speakers connect to each other. Check the indicator lights to distinguish L/R channel: The white light on one speaker is flashing white for every 3 seconds that should be the left channel(the primary speaker); the white light on the other speaker is solid white that should be the right channel
- 4: Go into the Bluetooth menu on your smartphone and pair the speakers with your phone by selecting the speaker model number. (it will only display 1 number which is both combined in to one)

TWS DISCONNECTION

1. Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound

EXPLANATION

- . Whe symbol indicates: The product is only suitable for the safe non-tropical climates. . Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped.
- Otherwise maybe explosion occurs
- 3. The lithium battery may not be exposed such as fire or excessive heat.

FAULT AND MAINTENANCE

First fault: connection failed.

- (1) Please check whether the multifunction indicator light flashes white. Please power on your speakers if the light isn't on. Please charge the speaker if the light is still not on.
- (2) Please turn off the other Bluetooth devices, if there are many Bluetooth devices surrounding. This may result in search difficulties.
- (3) Restart wireless speaker on devices for Bluetooth search function.

Second problem: The music player appears sound breaks.

- (1) View the distance between the player and the speaker has not been exceeded effective Bluetooth connection distance 8-12meters.
- (2) Ensure there is not any obstacle between the play device and speakers. (3) Check the playback device or whether the speaker is in a low power state.

NOTES BEFORE USE

- This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:
- 1. Place the speakers in a stable position avoid fall and cause damage or personal injury. 2. Do not drop, disassemble, open, crush, bend, puncture, burn speaker.
- 3. Do not close to any heat source (such as radiators, heating equipment, stoves, or other heat-generating equipment) where the use of speakers.
- Please send professional maintenance staff to repair for any reason damage.
 Before wiping with a dry cloth to clean the speakers, set the power switch to the off position and unplug
- the power cord from the power outlet. 6. Health considerations, please adjust the sound to a suitable level.

FCC STATEMENT:

- his device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired
- operation.

WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TROUBLESHOOTING The speaker does not turn on ? Recharge your speake

your body.

NOTE



automatically reconnect to devices that do not support automatic reconnection ted ,long press bluetooth button 3 seconds to connect to the last disconnected device.

t button to switch the 6 kinds of light display effect light button 3 seconds to turn off the light.

hort press the RGB light button to turn on the light. SB lights flash with the rhythm of the music.

RGB light breathes slowly.

etooth button to switch different playing mode:BT,TF,AUX,USB.

rned on by default when turning on the speaker off Bass mode nds to clear the pairing information to restore the default volume with a beep, hut down

ING MICRO SD CARD

card and power on the speaker

CONNECTION

audio cable to the speaker and your device.

The speaker is now connected to your device.

USB MODE

ect a USB stick to the speaker to play music. Charging other USB devices.

MICROPHONE nect a wired microphone allow you to Karaoke.

THE PAUSE BUTTON'S FUNCTIONALITY

hort Press: Music playback status: play, pause function.

Long Press: Press 2 seconds to enter TWS connection, once connected, press 2 seconds to disconnect TWS connection.

CHANGE VOLUME AND SONG

When listening to music Increase volume: Short press on the "+" button. ecrease volume: Short press on the "- " button. Previous song: Long press on the "-" button. Next song: Long press on the "+" button.

RESET FUNCTIONALITY

Press and hold the reset button through the aux port with clip for 6 seconds to automaticaly reset the speaker and turn off.

ment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference unications

However, there is no guarantee that interference will not occur in a particular installation. If this equipmen does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the ollowing measures

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator &

The speaker does not turn off or does not respond ?

Reset your speaker, hold the power button for 6 seconds to automatically reset the speaker and turn it off.

There is no sound?

Make sure that your Bluetooth device is within range. Ensure there is no obstacles in the way that can block/disturb the signal. Check via the device's Bluetooth connection if the speaker is connected with the device.

There is poor sound quality?

e the device closer to the speaker or try removing obstacles between them.

Cannot connect the device with the speaker?

nnect other connected devices and then try ag ou can force a disconnection by moving out of Bluetooth range (10 m).

In order to avoid harming the product performance, please do charge your device each 3 months at least.