


品牌：ozzie	备注： 第一版，
型号：OZ-P5	
设计项目：说明书	
文件名称：P5_ozzie_OZ-P5_说明书_折页_01	
说明书尺寸：60mm X 90mm (展开尺寸：240mm X 90mm) 工艺说明：105g铜板纸，单色正反面印刷，折页（折扇形）。	
制作版本：01	


240.0 mm

60.0 mm

90.0 mm

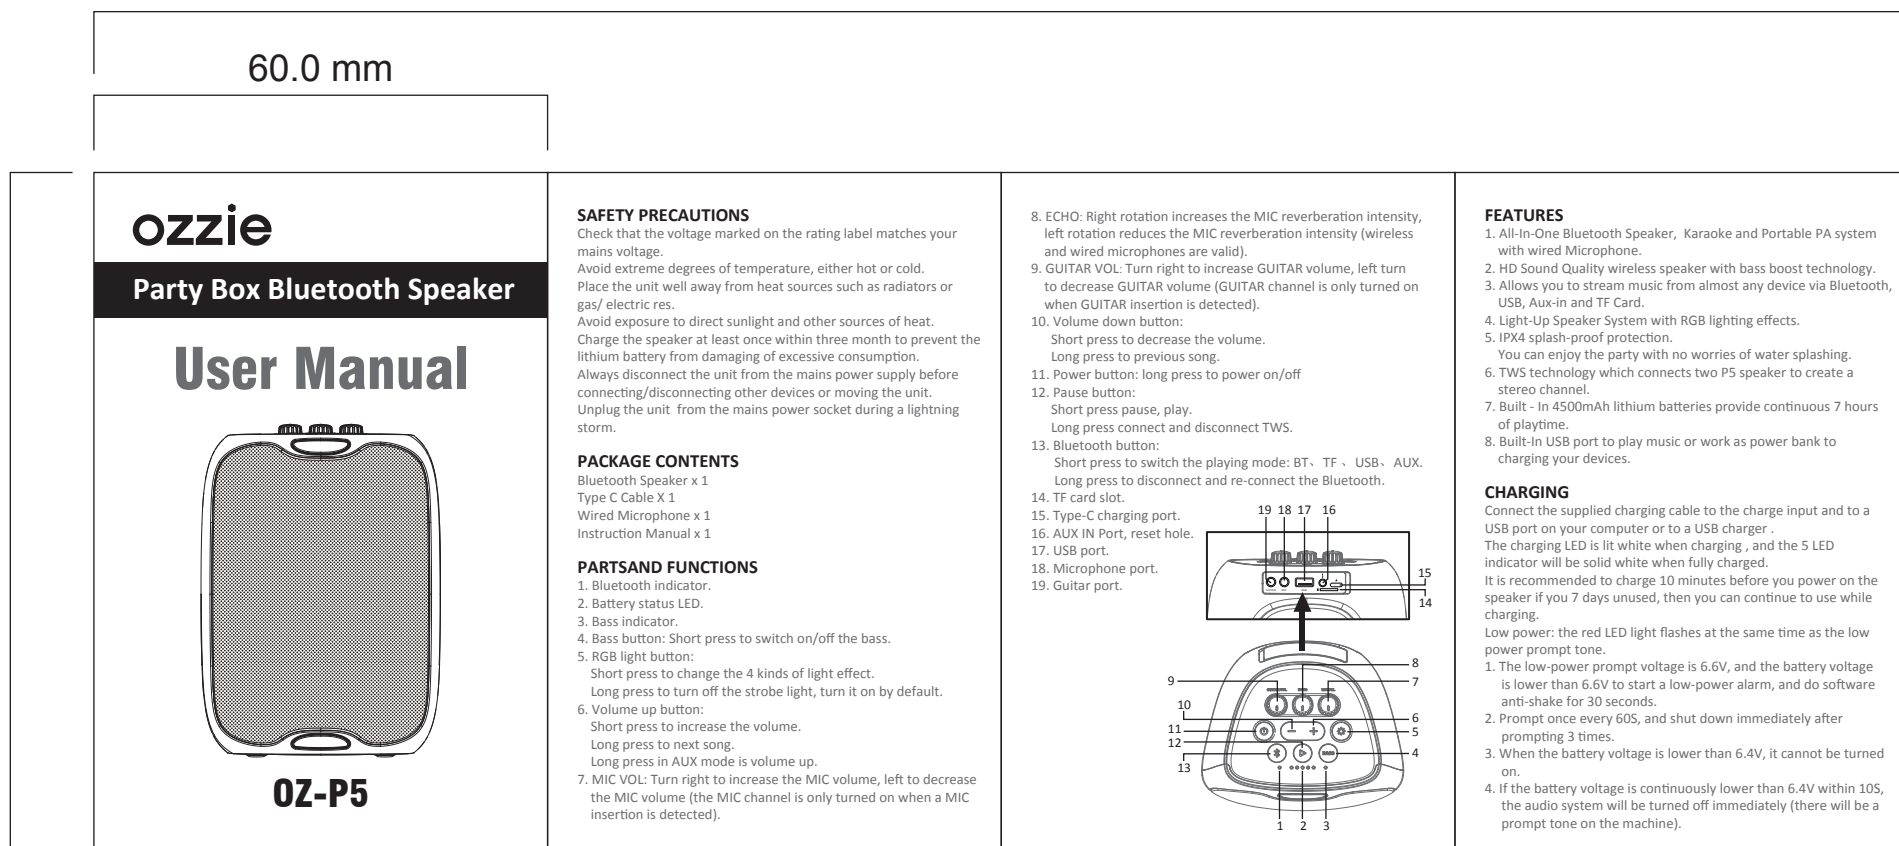

正面

<p>BLUETOOTH OPERATION Turn on the speaker, and search for its bluetooth name P5 in the device you want to pair and start the pairing process, it will give a prompt tone when the connection is successful. Long press the bluetooth button to disconnect it. Some bluetooth devices support automatic reconnection; with those devices, the speaker will automatically reconnect. The speaker will not automatically reconnect to devices that do not support automatic reconnection. when it's not connected, long press bluetooth button 3 seconds to connect to the last disconnected device.</p> <p>TWS CONNECTION 1. Turn on two speakers and disconnect any paired Bluetooth devices. 2. Long press the pause button on one of the speakers, this speaker will become "MASTER" speaker, until you hear a prompt tone and release the pause button and search another P5 speaker pairing for up to 60 seconds. 3. It will give a prompt tone after TWS connected. 4. Connect your Bluetooth device to the P5. 5. Long press the pause button on one of the speakers to disconnect TWS pairing.</p> <p>LIGHT EFFECT Short press RGB light button to switch the 4 kinds of light display effect. Long press the RGB light button 3 seconds to turn off the light.</p> <p>MEMORY CARD OPERATION Connect a micro SD card and power on the speaker.</p> <p>AUDIO AUX IN OPERATION Power the speaker on. Connect a 3.5 mm audio cable to the speaker and your device. The speaker is now connected to your device.</p>	<p>USB OPERATION Connect a USB stick to the speaker to play music. Work as a power bank to charge other USB devices.</p> <p>MICROPHONE Connect a wired microphone allow you to Karaoke.</p> <p>AUTOMATICALLY TURN OFF The speaker will automatically turn off in 10 minutes when Bluetooth is not connected and no music is playing.</p> <p>TECHNICAL PARAMETERS • Model: OZ-P5 • Bluetooth: V5.0 • Speaker: 30Ω * 1 + 15Ω * 1 • Built-in rechargeable battery: 7.4V, 4500mAh • Charging time: 3 hours • Playing time: 7 hours • Input: 5.0V \approx 2.0A • Product Size: 301mm*220mm*185mm • Product Weight: 2500g • Range: Up to 10m</p> <p>TROUBLESHOOTING The speaker does not turn on ? Recharge the speaker.</p> <p>The speaker does not turn off or does not respond ? Reset your speaker, press and hold the reset button through the aux port with clip for 6 seconds to Automatically reset the speaker and turn off.</p> <p>There is no sound? Adjust the volume. Make sure that your Bluetooth device is within range. Ensure there is no obstacles in the way that can block/disturb the</p>	<p>signal. Check via the device's Bluetooth connection if the speaker is connected with the device.</p> <p>There is poor sound quality? Move the device closer to the speaker or try removing obstacles between them.</p> <p>Cannot connect the device with the speaker? Disconnect other connected devices and then try again. You can force a disconnection by moving out of Bluetooth range (10 m).</p> <p>EXPLANATION 1. The symbol indicates: The product is only suitable for the safe non-tropical climates. 2. Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs. 3. The lithium battery may not be exposed such as fire or excessive heat.</p> <p>NOTES BEFORE USE This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules: 1. Place the speakers in a stable position avoid fall and cause damage or personal injury. 2. Do not drop, disassemble, open, crush, bend, puncture, burn speaker. 3. Do not close to any heat source (such as radiators, heating equipment, stoves, or other heat-generating equipment) where the use of speakers. 4. Please send professional maintenance staff to repair for any reason damage. 5. Before wiping with a dry cloth to clean the speakers, set the power switch to the off position and unplug the power cord from the power outlet.</p>	<p>6. Health considerations, please adjust the volume to a suitable level. 7. In order to avoid harming the product performance, please do charge your device each 3 months at least.</p>  <p>This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information please contact the local authority or your retailer where you purchased the product.</p> <p>NOTES FOR BATTERY DISPOSAL The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product.</p>
--	--	--	--

反面

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.