


品牌：MONOPRICE		备注： 第一版，
名称：T20说明书 T20_Monoprice_MP43260_说明书_01 共20P	产品型号：MP43260 说明书尺寸：60mm X 85mm 工艺说明：80g书纸，单色正反面印刷，折扇形。	

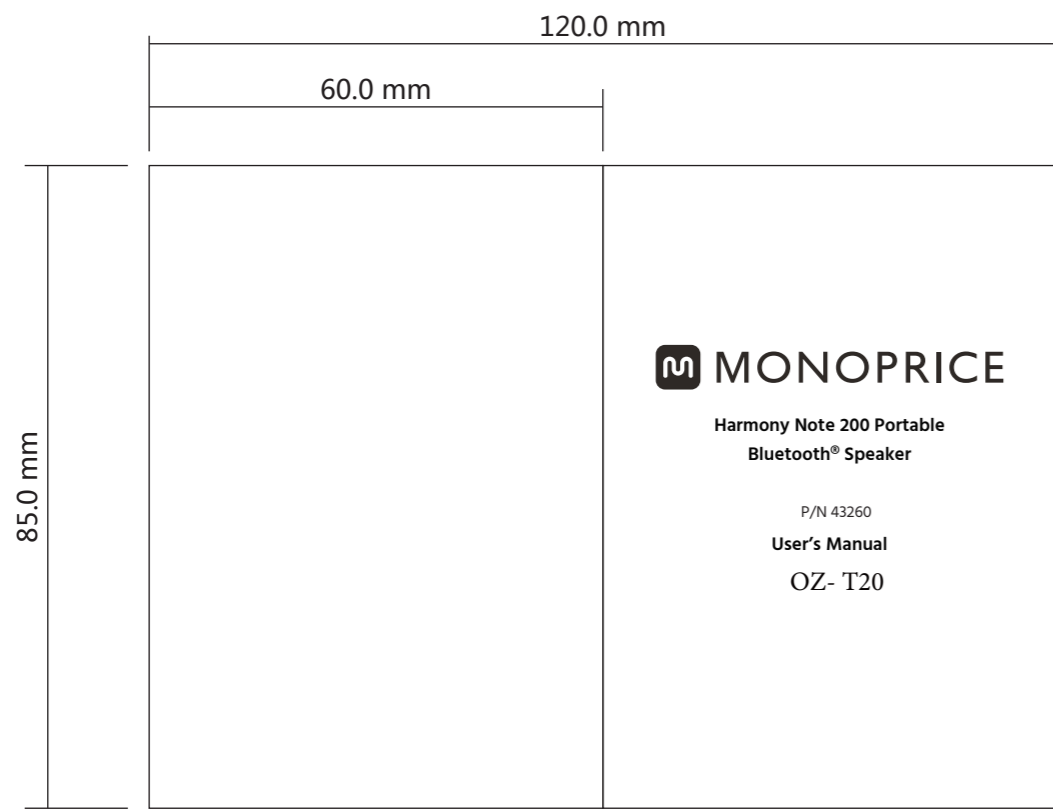

封底与封面

<p><b>SAFETY WARNINGS AND GUIDELINES</b></p> <p>Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.</p> <ul style="list-style-type: none"> <li>Do not expose this device to excessively high temperatures. Do not place it in, on, or near a heat source, such as a fireplace, stove, radiator, etc.</li> <li>Do not expose this device to excessive vibration, extreme force, shock, or fluctuations in temperature or humidity.</li> <li>This device contains a Lithium-ion battery. Dispose of this device only in accordance with local, state, or federal regulations for electronic waste.</li> <li>Charge the battery before first use and at least once every two months to keep it fresh and capable of holding the full charge.</li> <li>Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.</li> <li>This device has no user serviceable parts. Do not attempt to open, service, or modify this device.</li> </ul> <p style="text-align: right;">2</p>	<p><b>CUSTOMER SERVICE</b></p> <p>The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website <a href="http://www.monoprice.com">www.monoprice.com</a> or via email at <a href="mailto:support@monoprice.com">support@monoprice.com</a>. Check the website for support times and links.</p> <p><b>PACKAGE CONTENTS</b></p> <p>Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.</p> <ul style="list-style-type: none"> <li>1x Bluetooth® Speaker</li> <li>1x USB Type-C® Charging Cable</li> <li>1x User's Manual</li> </ul> <p style="text-align: right;">3</p>
---	---

页 02-03

<p><b>PRODUCT OVERVIEW</b></p> <ol style="list-style-type: none"> <li>Battery Charge Indicator</li> <li>Power Button</li> <li>Play/Pause Button</li> <li>Bluetooth® Button</li> <li>Bluetooth Indicator</li> <li>Volume - Button</li> <li>Volume + Button</li> <li>BASS Button</li> <li>3.5mm AUX Jack</li> <li>MicroSD™ Card Slot</li> <li>USB Type-C® Charging Port</li> </ol> <p style="text-align: right;">4</p>	<p><b>CHARGING</b></p> <p>Charge the battery before first use and at least once every two months to keep it fresh and capable of holding a full charge. We recommend that you charge the speaker for about 10 minutes prior to use, if it has been unused for at least 7 days.</p> <ol style="list-style-type: none"> <li>When the <b>Battery Charge Indicator</b> has only one element illuminated, the battery level is low and needs to be recharged.</li> <li>Plug one end of the included <b>USB Type-C® Charging Cable</b> into the <b>USB Type-C Charging Port</b> on the speaker, then plug the other end into a USB power source, such as a wall charger, power bank, computer, etc. (available separately). The <b>Battery Charge Indicator</b> will flash white and the number of illuminated elements will increase while charging is in progress.</li> <li>When charging is complete, the <b>Battery Charge Indicator</b> will be solid white in all four elements.</li> </ol> <p><b>BLUETOOTH PAIRING</b></p> <ol style="list-style-type: none"> <li>Press and hold the <b>Power Button</b> for 3 seconds to turn</li> </ol> <p style="text-align: right;">5</p>
--	--

页 04-05

<p>the speaker on. When the speaker is first powered on, it will automatically enter Bluetooth® pairing mode and the <b>Bluetooth Indicator</b> will flash white, indicating that it is in Bluetooth pairing mode.</p> <p>If the speaker is already paired to a device and that device is powered on and within range, the speaker will attempt to reconnect to the paired device. If it cannot automatically reconnect to the paired device, you can either press and hold the <b>Bluetooth Button</b> for 3 seconds to reconnect the device or proceed with pairing a different device.</p> <ol style="list-style-type: none"> <li>Open the Bluetooth® settings on your device and scan for nearby Bluetooth connections.</li> <li>Locate and select the <b>MP43260</b> entry. If prompted for a passcode, enter <b>0000</b> (four zeros).</li> <li>Once connected, the <b>Bluetooth Indicator</b> will stop flashing and will illuminate solid white, and an audible cue will be heard.</li> </ol> <p><b>AUX PLAYBACK</b></p> <p>If your audio device does not have Bluetooth® or if you do not want to use Bluetooth, you can listen to audio using a</p> <p style="text-align: right;">6</p>	<p>wired connection to the <b>3.5mm AUX Jack</b> on the speaker.</p> <ol style="list-style-type: none"> <li>Plug one end of the included <b>3.5mm Audio Cable</b> into the <b>3.5mm AUX Jack</b> on the speaker, then plug the other end into the headphones or other analog audio output on your audio source device.</li> <li>Press the <b>Bluetooth Button</b> to switch between Bluetooth, AUX, and microSD™ (TF) card playback.</li> <li>Use the controls on your device to control audio playback and the volume controls on the speaker to control the volume. The playback controls on the speaker do not function with a wired connection.</li> </ol> <p><b>MICROSD CARD PLAYBACK</b></p> <p>This speaker features a microSD™ card slot, which can be used to play mp3 files into the inserted microSD card.</p> <ol style="list-style-type: none"> <li>With the speaker powered off, insert a microSD card with mp3 files into the <b>microSD Card Slot</b>. The speaker supports microSD cards with capacities up to 32GB and formatted with the FAT16 or FAT32 file system. The mp3 files on the card can be in any subdirectory.</li> </ol> <p style="text-align: right;">7</p>
---	--

页 06-07

<ol style="list-style-type: none"> <li>Press and hold the <b>Power Button</b> for 3 seconds to turn the speaker on.</li> <li>Press the <b>Bluetooth Button</b> to switch between Bluetooth, Aux, and microSD™ (TF) card playback.</li> <li>Use the controls on the speaker to control playback and volume.</li> </ol> <p><b>BUTTON OPERATION</b></p> <p><b>Power Button</b></p> <ul style="list-style-type: none"> <li>With power off, press and hold the <b>Power Button</b> for 3 seconds to turn the speaker on. If it has not already been paired or if its paired device is off or out of range, the speaker will enter Bluetooth® pairing mode. If it has been paired and the paired device is on and in range, the speaker will reconnect with your device.</li> <li>With power on, press and hold the <b>Power Button</b> for 3 seconds to turn the speaker off. Note that after 10 minutes of no audio playback, the speaker will automatically turn off.</li> <li>Press the <b>Power Button</b> to enable Siri® functionality. The speaker also supports the Huawei® Intelligent</li> </ul> <p style="text-align: right;">8</p>	<p>voice assistant.</p> <p><b>Bluetooth Button</b></p> <ul style="list-style-type: none"> <li>With a device paired, but not connected, press and hold the <b>Bluetooth Button</b> for 3 seconds to reconnect the last connected device.</li> <li>With a device connected, press and hold the <b>Bluetooth Button</b> for 3 seconds to terminate the Bluetooth connection.</li> <li>Press the <b>Bluetooth Button</b> to switch between Bluetooth® and AUX, and microSD™ (TF) card playback.</li> </ul> <p><b>Play/Pause Button</b></p> <ul style="list-style-type: none"> <li>With audio playing, press the <b>Play/Pause Button</b> to pause playback.</li> <li>With audio playback paused, press the <b>Play/Pause Button</b> to resume playback.</li> <li>At any time, press and hold the <b>Play/Pause Button</b> for 2 seconds to make a TrueWireless™ Stereo (TWS) connection with another <b>43260</b> speaker.</li> <li>When a TWS connection is active, press and hold the</li> </ul> <p style="text-align: right;">9</p>
---	--

页 08-09

<p><b>Play/Pause Button</b> for 2 seconds to disconnect the TWS connection.</p> <p><b>Volume + and Volume - Buttons</b></p> <ul style="list-style-type: none"> <li>Press the <b>Volume + Button</b> to increase the volume level.</li> <li>Press the <b>Volume - Button</b> to decrease the volume level.</li> <li>Press and hold the <b>Volume + Button</b> for 2 seconds to skip forward to the next track.</li> <li>Press and hold the <b>Volume - Button</b> for 2 seconds to skip back to the previous track.</li> </ul> <p><b>BASS Button</b></p> <ul style="list-style-type: none"> <li>With Bass Boost off, press the <b>BASS Button</b> to turn Bass Boost on. Note that Bass Boost is on by default.</li> <li>With Bass Boost on, press the <b>BASS Button</b> to turn Bass Boost off.</li> <li>Press and hold the <b>BASS Button</b> for 5 seconds to reset the speaker, clearing all pairing information and resetting the volume level to default.</li> </ul> <p style="text-align: right;">10</p>	<p><b>TWS OPERATION</b></p> <p>This speaker features TrueWireless™ Stereo (TWS) functionality, which allows you to connect two <b>43260</b> speakers together to act as a stereo pair, with one speaker playing left channel audio and the other playing right channel audio. Perform the following steps to establish a TWS connection with two <b>43260</b> speakers.</p> <ol style="list-style-type: none"> <li>Press and hold the <b>Power Button</b> on each speaker for 2 seconds to turn each speaker on.</li> <li>Press and hold the <b>Play/Pause Button</b> on one of the speakers for about 2 seconds until you hear a beep sound. This will be the primary/left channel speaker in the TWS array.</li> <li>Release the <b>Play/Pause Button</b> and the speakers will connect to each other. The <b>Bluetooth Indicator</b> on the primary/left channel speaker will flash blue once every 3 seconds, while the <b>Bluetooth Indicator</b> on the right channel speaker will illuminate solid blue.</li> <li>Open the Bluetooth® settings on your phone. Locate and select the <b>MP43260</b> entry, which is now the two speakers operating as a single stereo speaker array.</li> </ol> <p style="text-align: right;">11</p>
---	--

页 10-11

<p>To disconnect the TWS array, press and hold the <b>Play/Pause Button</b> on one of the speakers for 2 seconds until you hear a beep sound.</p> <p><b>TECHNICAL SUPPORT</b></p> <p>Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website <a href="http://www.monoprice.com">www.monoprice.com</a> or through email by sending a message to <a href="mailto:tech@monoprice.com">tech@monoprice.com</a>. Check the website for support times and links.</p> <p>To download the latest drivers, firmware, manuals, etc., go to <a href="http://www.monoprice.com">www.monoprice.com</a> and type the <b>P/N</b> into the search bar. If available, support files are linked at the bottom of the product page.</p> <p style="text-align: right;">12</p>	<p><b>SPECIFICATIONS</b></p> <table border="1"> <tr><td>P/N</td><td>43260</td></tr> <tr><td>Driver size</td><td>2x ø52mm</td></tr> <tr><td>Amplifier Power</td><td>2x 10 watts</td></tr> <tr><td>Nominal Impedance</td><td>4Ω</td></tr> <tr><td>Bluetooth® Version</td><td>5</td></tr> <tr><td>Bluetooth Range</td><td>Up to 32 feet ( 10 meters )</td></tr> <tr><td>Bluetooth Pairing Name</td><td>MP43260</td></tr> <tr><td>microSD™ Card Capacity</td><td>32GB</td></tr> <tr><td>micro SD Card Formatting</td><td>FAT16 or FAT32</td></tr> <tr><td>Waterproof Level</td><td>IPx7</td></tr> <tr><td>Battery Type</td><td>7.4V Lithium-ion</td></tr> <tr><td>Battery Capacity</td><td>2200mAh</td></tr> <tr><td>Charging Time</td><td>About 3-4 hours</td></tr> <tr><td>Playback/Talk Time</td><td>About 10 hours</td></tr> <tr><td>Input Power</td><td>5 VDC, 2.0A</td></tr> <tr><td>Dimensions</td><td>8.1" x 2.6" x 2.8" (206 x 67 x 71 mm)</td></tr> <tr><td>Weight</td><td>231 oz. (655 g)</td></tr> </table> <p style="text-align: right;">13</p>	P/N	43260	Driver size	2x ø52mm	Amplifier Power	2x 10 watts	Nominal Impedance	4Ω	Bluetooth® Version	5	Bluetooth Range	Up to 32 feet ( 10 meters )	Bluetooth Pairing Name	MP43260	microSD™ Card Capacity	32GB	micro SD Card Formatting	FAT16 or FAT32	Waterproof Level	IPx7	Battery Type	7.4V Lithium-ion	Battery Capacity	2200mAh	Charging Time	About 3-4 hours	Playback/Talk Time	About 10 hours	Input Power	5 VDC, 2.0A	Dimensions	8.1" x 2.6" x 2.8" (206 x 67 x 71 mm)	Weight	231 oz. (655 g)
P/N	43260																																		
Driver size	2x ø52mm																																		
Amplifier Power	2x 10 watts																																		
Nominal Impedance	4Ω																																		
Bluetooth® Version	5																																		
Bluetooth Range	Up to 32 feet ( 10 meters )																																		
Bluetooth Pairing Name	MP43260																																		
microSD™ Card Capacity	32GB																																		
micro SD Card Formatting	FAT16 or FAT32																																		
Waterproof Level	IPx7																																		
Battery Type	7.4V Lithium-ion																																		
Battery Capacity	2200mAh																																		
Charging Time	About 3-4 hours																																		
Playback/Talk Time	About 10 hours																																		
Input Power	5 VDC, 2.0A																																		
Dimensions	8.1" x 2.6" x 2.8" (206 x 67 x 71 mm)																																		
Weight	231 oz. (655 g)																																		

页 12-13

<p><b>REGULATORY COMPLIANCE</b></p> <p><b>Notice for FCC</b></p> <p>This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and</p> <p style="text-align: right;">14</p>	<p>used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>Reorient or relocate the receiving antenna.</li> <li>Increase the separation between the equipment and receiver.</li> <li>Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p><b>Radio Notice for FCC</b></p> <p><b>Caution</b></p> <p>This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said</p> <p style="text-align: right;">15</p>
--	---

页 14-15

<p>product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p><b>Notice for Industry Canada</b></p> <p>This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.</p> <p><b>Radio Notice for Industry Canada</b></p> <p><b>Caution</b></p> <p>This IC RSS-210 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including</p> <p style="text-align: right;">16</p>	<p>the use of non-approved antennas, could void the user's authority to operate this device. This device complies with IC RSS-210. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p><b>RF warning statement:</b></p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p style="text-align: right;">17</p>
--	--

页 16-17

<p><i>Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.</i></p> <p><i>The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc.</i></p> <p><i>USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.</i></p> <p><i>microSD™ is a trademark of SD-3C, LLC.</i></p> <p><i>Siri® is a trademark of Apple Inc., registered in the U.S. and other countries.</i></p> <p><i>Huawei® is a registered trademark of Huawei Technologies Co., Ltd.</i></p> <p><i>Qualcomm® is a trademark of Qualcomm Incorporated, registered in the United States and other countries.</i></p> <p><i>TrueWireless™ is a trademark of Qualcomm Technologies International, Ltd. Qualcomm® TrueWireless™ is a product of Qualcomm Technologies International, Ltd.</i></p> <p style="text-align: right;">18</p>	
--	--

页 18-19