


Instructions

Congratulations on purchasing this new device, the Bluetooth trackers that work with your iOS or android phone to help you find your keys and valuables

How to set up your new device

1. Download The app - search the App Store or scan these QR Codes

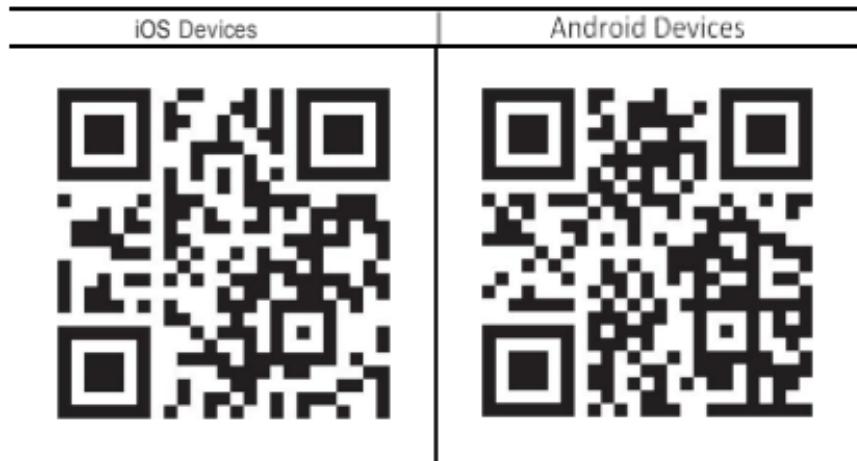

2. Press the button on your new device for five seconds to start it
3. On the App main page - click the "Bluetooth" symbol (top left)
4. Click the "Search" symbol (magnifying glass) and follow the instructions. The App will find and pair with your device(s)
5. Customise your device List, click the device icon to add a photo of your keys or valuables, and use the "edit" icon to change the name to something you recognise

Using your new device

To find your device-Tap the "Bluetooth" icon to choose the device you have lost. Then, on the bottom of the Map page press the device bar. Your device will beep and flash. To turn off, press the device bar again, or the button on the device

To find your phone - Press the button on the device, and your phone will ring. The App must be running in the background if you want to use this feature.

Disconnecting Notification - This alerts your phone and device if they get too far apart. Turn this on or off in Settings. The App must be running in the background if you want to use this feature.

The Disconnecting Notification can cause false alarms - To avoid this, in Settings slide the Delay Alarm up to 30 seconds. If you still get problems switch off the Disconnecting Notification feature

Quiet zone (iOS Only)-To disable Disconnecting Notifications automatically while you are at home or work you can set a "quiet zone". The App detects when the phone is on your home WIFI, and stops false alarms

Quiet time (iOS Only)-To disable disconnecting notifications during certain periods (e.g. at night) you can set a "quiet time"

Alarm Type - in Settings set the sound, vibration and flashing, and alarm

melody of your phone alert. You can also choose from 3 melodies for each device.

Lost Devide Location - if you have lost your device, click on the "device Pin" on the map to see the location where your device last disconnected from your phone

Remote camera shutter - press the "camera" icon and you can use your device as a remote camera shutter control. Just press the device button to take a picture or start a video

Specifications

	Classic	Sport	Edge	Style
Dimensions	Ø 31mm x 5.4mm	Ø 37mm x 9mm	38 x 38 x 8.7mm	43 x 43 x 6mm
Weight	5g	12g	12g	19g
Outdoor Range	0 - 35 metres	0 - 70 metres	0-70 metres	0 - 50 metres
Buzzer volume	87dB Peak 80dB Av	93dB Peak 87 dB Av	93dB Peak 87 dB Av	87dB Peak, 80dB Av
Battery	CR2016	CR2032	CR2032	CR2025
Temp Range	-20°C to +70°C	-20°C to +70°C	-20°C to +70°C	-20°C to +70°C
Waterproofing	Splash proof	IP67 Waterproof	IP67 Waterproof	IP67 Waterproof

Replacing the battery

1. Classic Model, Undo the case screw & prise open the case
2. Sport Model, lever the edge slots using the supplied opener, then pull open the case
3. Carefully push the battery out of its holder while avoiding the nearby microswitch.
4. Insert the new battery being careful to match the polarity
5. Press closed the outer shell.

DISPOSE OF THE USED BATTERIES CAREFULLY- BUTTON BATTERIES CAN KILL IF SWALLOWED

IMPORTANT SAFETY NOTICES

1. Devide cannot be used without installing and running the app on your phone. Devide may assist finding your keys and valuables. However, due to many environmental and other factors we cannot guarantee that they will work in all situations, and we do not accept any liability for loss or damage if you cannot find your keys or valuables
2. Do not disassemble the product except in accordance with these instructions. Do not attempt to repair or modify it in any manner
3. **THIS PRODUCT CONTAINS SMALL PARTS THAT CAN INJURE OR CHOKES SMALL CHILDREN OR ANIMALS. IT SHOULD NOT BE USED WITHOUT ADULT SUPERVISION. RING EMERGENCY SERVICES OR CONSULT YOUR DOCTOR OR VETERINARIAN IMMEDIATELY IF THE BATTERY OR ANY OTHER PART IS SWALLOWED**

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.