	Introduction	A Quick Look at Your Device	Charging Your Speaker	Pairing Your Speaker	Using Your Speaker
VIVITAR	Thank you for purchasing your Vivitar Bluetooth Speaker, item VM80017BT. You can use your speaker with iPads, iPhones, iPods and many other types of smartphones and Bluetooth devices to stream music and enjoy hands-free calling. In order to get the best results when using this		Your speaker has a built-in, rechargeable lithium-ion battery. To avoid damage, do not attempt to remove the battery. The full performance of the battery is only achieved after a few charging-discharging cycles. Charge the battery fully before first use. To do so, follow the steps below:	Your speaker can be paired with most Bluetooth devices including iPads, iPhones, iPod Touches, and most smartphones, laptops and tablets. In order to pair your speaker with a phone, follow the steps below:	Powering Your Speaker On and OFF 1. Press the On/Off Switch to power on your speaker. If you have already paired your speaker to your Bluetooth device, they will automatically remain paired each time yo power on your speaker.
BLUETOOTH SPEAKER Instruction Manual	device, please read this manual first before using. Package Contents		<ol> <li>Connect one end of the included Mini USB charging cable to the Mini USB charging port on your speaker. Then plug the other end of the Mini USB charging cable into a USB port on your computer or a suitable power adapter in</li> </ol>	<ol> <li>Press the On/Off Switch to power on your speaker. The LED indicator light on your speaker will flash. This indicates that your speaker is in pairing mode.</li> </ol>	<ol> <li>Press the On/Off Switch to power off your speaker.</li> <li>Short press the power button once to play/pause song; press the power button twice constantly to play next song, press the power button three times to play previous song.</li> </ol>
		6	order to recharge the internal rechargeable battery. NOTE: The internal battery of your speaker takes approximately two hours to charge when completely drained. To maximize performance, it is recommended to charge the battery for two hours before initial use.	2. Go to the Bluetooth Manager of your Bluetooth device.     3. Search Bluetooth devices and select "Bendable speaker" to start connection.	
	VM60017BT Mini USB 3.5mm Instruction Bluetooth Charging Aux Manual Speaker Cable Cable with Warranty Info.		2. When the battery is charging, the LED indicator light will turn red. The LED indicator light will turn off when the battery is fully charged. Unplug when charging is complete.		Listening to Music - Connect your audio device to the speaker through Bluetooth (see Pairing Your Speaker). - Play the music from your audio device.
6	Specifications Bluetooth Version: 4.1 Bluetooth Range: Up to 32.8 feet (10 meters)	ON/OFF Switch	NOTE: Overoharging could reduce the life of the battery. A charged battery will lose its capacity if it is not used on a regular basis. Important!		Adjust volume and playback settings on your phone or connected audio device. Audio Input
	Power Supply: DC 5V Battery Type: 150 mAh, Lithium Battery Charge Time: 2-3 Hours Driver Diameter: 40mm Impedance: 4 Ohms	Mirco USB charging port 15mm audio input	To avoid a complete discharge of the battery, charge your speaker at least once every six months.	4. Enter "0000" if your device asks for the PIN code.	<ul> <li>Plug the included 3.5mm audio cable into the speaker's audio input port and your audio device. Playback through your audio device.</li> </ul>
em# VM60017BT					
aintenance and Care	Important Safety Precautions	FCC Statement	Vivitar One Year Warranty	Vivitar One Year Warranty (cont.)	
fore using your speaker, inspect the ports and jacks to te sure that they are clear of dust and debris before rging or inserting an AUX cable.	When using your Vivitar Bluetooth Speaker, basic safety precautions should always be followed, including the following:	This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference	This warranty covers the original consumer purchaser only and is not transferable.	NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR	
a a soft cloth to clean your speaker. Never use any h chemicals or detergents. Make sure your speaker is before using.	1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER. 2. Do not use your speaker near water. Clean using a soft	received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the	This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.	A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED	
en your speaker is not in use, it should be stored in a I, dry place.	cloth or paper towel. 3. Do not place your speaker on any wet surfaces. 4. Do not allow children or the infirm to play with your speaker without adult supervision.	equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B diaital device, pursuant to Part 15 of the FCC Rules.	What Is Not Covered by Warranty Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from	ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR. REPLACEMENT, OR	
er tug or yank on the USB cable or AUX cable while are connected to your speaker. Connect and onnect these cables as carefully as possible.	<ol> <li>Do not expose your speaker to excessive heat, flames or fire.</li> <li>Always press all buttons carefully. Do not manhandle your speaker.</li> </ol>	These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not	other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.	REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO	
ver expose your speaker to high temperatures, eme cold, high humidity or excessive moisture or er.	7. Do not use in extremely dry environments, as this can lead to static discharge during usage. 8. Do not expose your speaker to temperatures above 40°C. Keep out of direct sunlight. 9. Do not attempt to repair this product yourself. Contact a	installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:	To Obtain Warranty Service and Troubleshooting Information: Call 1-800-592-9541 in the U.S. or 0-800-917-4831 in the UK or visit our website at www.vivitar.com.	EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINOS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR	VIVITAR
ase recycle or dispose of your speaker properly based the laws and rules of your municipality. Contact local cling facilities and/or the manufacturer of your speaker urther information.	<ol> <li>bot not attempt to repair in your speaker is in need of service.</li> <li>Do not drop, puncture or expose your speaker to excessive trauma.</li> <li>Your speaker is not intended for commercial use.</li> <li>Do to place near objects that generate a strong magnetic</li> </ol>	Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/ TV technician for help.	To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s).	RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT	
	field. 13. Use only the supplied chargers and cables. Unplug this device when not in use for long periods of time or during lightning storms.	FCC ID: 2AL9B-VIM60017BT is inside the detachable plastic cover of your speaker.	The product is writing the approacher virtuality pendots, MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at	SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.	
<u> </u>			a value return address to the address service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.	This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored,	

50mm \_\_\_\_\_

86mm