
1 Caster Remote Control

Take Off Guide


CASTER

CSR001: T4HXXXXXXXXXXXX Caster product family

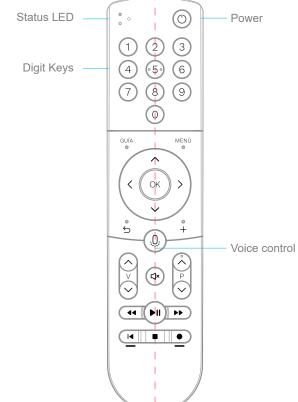


2 Turn On Caster

Caster remote control arrives with a 2 AAA batteries blister inside a polybag. To turn on your Caster remote control, please follow the instructions below.

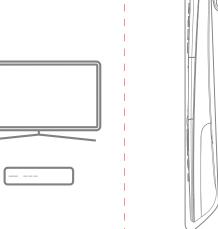

 
1. Turn ON your TV and your 2. Remove your Caster Set Top Box.





3. Remove the battery lid.

 Caster remote control as and close it with the battery




indicated in the image above Caster is ready to operate.

3 Caster Control Your STB

Caster remote control is able to control your STB by IR or BLE connection. To perform this test, execute the following steps...





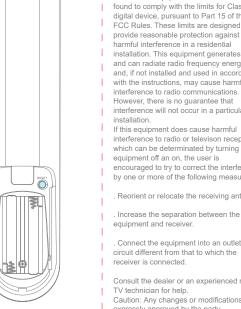

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

FCC Compliance Statements

cause undesired operation.

This device complies with Part 15 of the

FCC Rules. Operation is subject to the following two conditions: (1) this device may

not cause harmful interference, and (2) this device must accept any interference received, including interference that may

. Reorient or relocate the receiving antenna.

interference to radio or televison reception, which can be determinated by turning the

- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/ TV technician for help. Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement: This equipment complies with FCC

radiation expuser limits set forth for an

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

uncontrolled environment.

- 4. Place the batteries on the 5. After place the batteries, 1. Press two keys simultaneously.
 - wait a few seconds and the 2. If the RCU is connected by IR, the LED will turn green.
 - 3. If the RCU is connected by BLE, the LED will turn blue.

Note: If you change the function or have trouble operating the remote, open the battery cover and press the Reset button for more than three seconds to restore the command to the factory conditions.

