Bond Outdoor Waterproof TWS Speakers

Instruction Manual



PowerButton

- ·Micro-USB ChargingPort
- .LED Indicator

·Mic (speakerbase)

What'sincluded:

2 x Speaker

1 x Silicon band

1 x USB to Micro-USB chargingcable

- 1x audio cable
- 1 x Instruction Manual

Tech Specifications

- · Input: DC5V/500mA
- · Paring name : Bond
- Bluetooth version:4.2+EDR
- · Battery type:Li-Polymer
- · BatteryCapacity:500MAH

Instructions:

Pairing the speaker:

Make sure two speakers closed .Put the **OPEN/OFF** button for 3 seconds , the blue led is flashed slowly, the two speaker will pair each automatically, onedu will sound once the 2 speaker paired successfully.

Then Select " **Bond** " on your device with computer or mobile to pair

Charging thespeaker:

- a. Using a regulated USB adapter. Connect a USB cable to a USB adapter. Usingthe Micro-USB connector, connect the other end of the USB cable to the charging port on the speaker. Plug the USB adapter into the outlet to begin charging. The LED will light up inred while in charging, turns off when fully charged.
- b. Using your computer. Connect a USB cable to a USB outlet on your computer. Using the Micro-USB connector, connect the other end of the USB cable to an charging port on the speaker. Make sure the computer is on to begin charging the speaker.

Using the speaker:

When receiving a phone call, the speaker will pause the current audio. Press the Play/Answer button to answer the call, press this button again to end the call. Short press : power on/off button Short press : play/pause the audio Short press : inext track Long press : : volume increase Short press : : previous track Long press : : volume decrease Press : : answer a call

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.