

MARGARITAVILLE®



Sounds Of Paradise  
**Tiki Torch**  
BLUETOOTH  
Light Up Speakers

User's Manual



FOR ITEM: MA112PK2-MGV



# Important Safety Precautions

When using your Sounds of Paradise Tiki Torch Bluetooth Light Up Speakers, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKERS.**
2. Clean using a soft cloth or paper towel.
3. Do not allow children or the infirm to play with your speakers without adult supervision.
4. Do not expose your speakers to excessive heat, flames or fire.
5. Always press all buttons or switches carefully. Do not manhandle your speakers.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your speakers to temperatures above 40°C.
8. Do not attempt to repair this product yourself. Contact a qualified service center if your speakers are in need of service.
9. Do not drop, puncture or expose your speakers to excessive trauma.
10. Your speakers are not intended for commercial use.
11. Do not place near objects that generate a strong magnetic field.
12. Unplug this device when not in use for long periods of time or during lightning storms.
13. Never submerge in water or any liquids.
14. Please recycle or dispose of your speakers properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



**CAUTION**

## BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced.
- Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

# Introduction

Thank you for purchasing the Sounds of Paradise Tiki Torch Bluetooth Light Up Speakers, item MA112PK2-MGV. You can use your speakers with most smartphones and Bluetooth devices to stream music wirelessly while also enjoying exciting outdoor play. In order to get the best results when using this device, please read this manual first before using.

## Package Contents

- MA112PK2-MGV Sounds of Paradise Tiki Torch Bluetooth Light Up Speakers
- USB Charging Cable x2
- Ground Stick x2
- User's Manual with Warranty Information

## Specifications

Bluetooth Range: Approximately 30 feet

Battery Capacity: DC 3.7V 1200 mAh

Charging Time: Approximately 4-5 hours

 
Play Time (Music Only): Approximately 22 hours per charge\*

Play Time (Lights Only): Approximately 11 hours per charge

Play Time (Music & Lights): Approximately 7 hours per charge\*

\*Applicable at 50% of maximum volume. Results will be lower when volume is higher.

# A Quick Look at Your Speaker

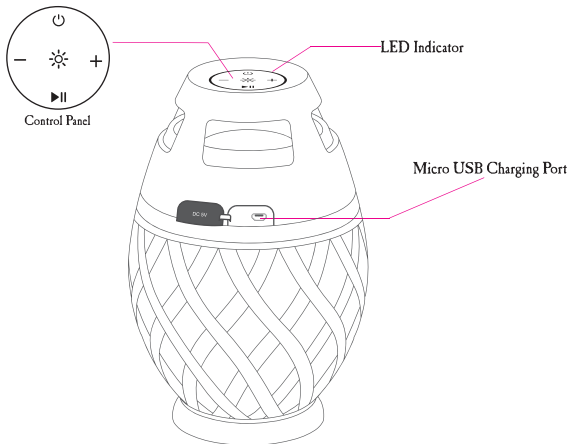


Side of Speaker  
with Silicone Cover Open

**Please Note:**  
Before using the speaker in a wet environment, make sure the silicone flap on the side of the speaker is fully closed and secured.

# Assembling the Ground Stick

 Included with your speaker is a ground stick. The ground stick acts as a stand that is perfect for outdoor use.

The ground stick comes with the following pieces:

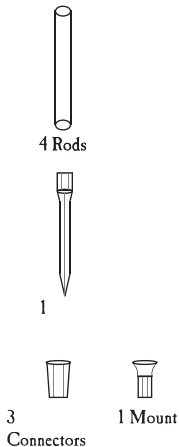


Use the connectors to attach the three rods together.



Attach the spike to one end of the ground stick. Connect the mount to the other end.




 Screw your speaker onto the mount. Drive the spike into soft ground until the ground stick stands upright securely.

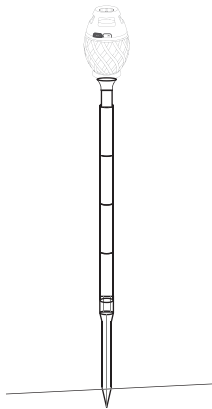


# Charging Your Speaker

 Micro USB  
Plug




USB  
Plug

 1. The USB charging cable has a Micro USB plug and a standard USB plug.

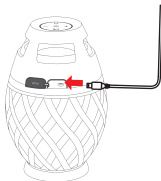

 2. Insert the USB charging cable's Micro USB plug into the Micro USB Charging Port on the back of your speaker.



3. Insert the USB charging cable's standard USB plug into the USB port of a computer or suitable USB charging adapter.

## LED CHARGING INDICATOR LIGHT

- (red) = Charging
- (off) = Fully Charged



4. The Charging Indicator Light turns red while the speaker is charging. When the speaker is fully charged, the indicator light turns off.

## NOTES:

--Charging can take approximately 4.5 hours to complete when the battery is fully drained.

--Remove the charging cable once charging is complete.

 
--Overcharging could reduce the life of the battery.

--A charged battery will lose its capacity if it is not used on a regular basis.

**Important:** To avoid a complete discharge of the battery, charge your speaker at least once every six months.


# Bluetooth Pairing When Using One Speaker

(Press & Hold)

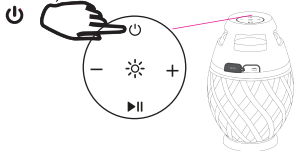


1. Press and hold the Power Button for 3-4 seconds to power on your speaker.

 Pairing Mode  
White Flashing LED Light

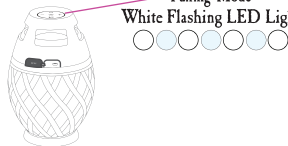


 2. The LED Indicator Light will turn white and flash rapidly to indicate that your speaker is in pairing mode.

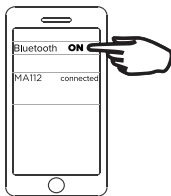


3. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "MA112."

 Paired  
White LED

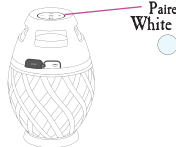


4. The LED Indicator Light will stop flashing and remain white to indicate that your speaker is paired with your phone. While music is playing, the LED Indicator Light will flash slowly.

# Bluetooth Pairing When Using Both Speakers Together

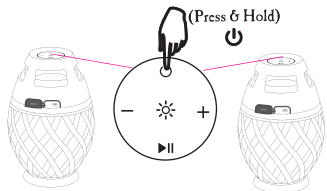 

(Press & Hold)

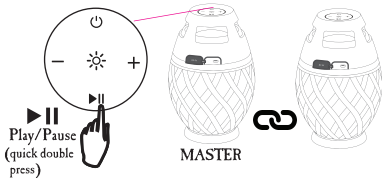 

Play/Pause  
(quick double  
press)

MASTER

1. Press and hold the Power Button on each speaker for approximately 3-4 seconds in order to power both of your speakers on.
2. Quick double press the Play/Pause button on one of the speaker of your choice, to make both speakers paired with each other, the choiced speaker will be the master speaker.

 
Bluetooth Pairing Mode  
White Flashing LED Light



White LED



MASTER

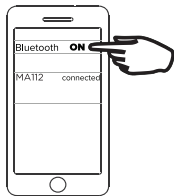

4. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "MA112."

White LED



White LED




MASTER

3. The LED Indicator Light on the master speaker will turn white and flash rapidly to indicate that your speakers are in Bluetooth pairing mode. The LED Indicator Light on your second speaker will remain white.


5. The LED Indicator Lights on both speakers will remain white to indicate that your speakers are paired with your phone. While music is playing, the LED Indicator Light will flash slowly.




# Using Your Speakers

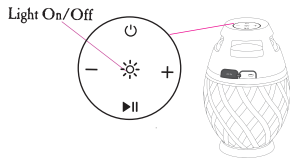 

 
1. Press the Light On/Off button to turn the light on or off.



 2. Press the Play/Pause button to play a track. Press it again to pause a track.

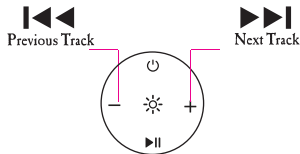

 3. Press Next Track, or Previous Track buttons to advance to the next track or return to the previous track in a playlist.

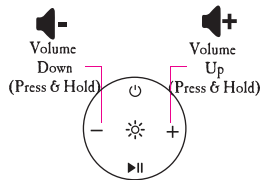

4. Press and hold the Volume Up Button to increase the volume. Press and hold the Volume Down Button to decrease the volume.

# FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

# Sakar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

## What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

## To Obtain Warranty Service and Troubleshooting Information:

Call 1-877-397-8200 or visit our website at [www.sakar.com](http://www.sakar.com).

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), **MUST** be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unpaired.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.