 
SIZE:165*90MM

Wireless Speaker



Functions:

- 1. Power Button
- 2. Play/Pause, Answer/End Call
- 3. Vol -/Previous Track
- 4. Vol +/Next Track
- 5. Type-C charging port

What's included:

1 x Speaker 1 x USB to Type-C Charging Cable 1 x Instruction Manual

Tech Specifications:

Pairing name: RS011 S/N Ratio: >70dB Input: DC 5V/1A Speaker driver: 40mm Output power: 5W Frequency: 150Hz - 15KHz Battery capacity: 1200 mAh Bluetooth version: 5.3 Charging time: about 3 hours Playing time: about 5 hours Transmission distance: 10m IPX5 waterproof

How to use speaker:

1. Bluetooth Setup:

Press and hold Power Button (1) to turn ON the speaker. LED Indicator will flash Blue when in pairing mode. Turn on the Bluetooth function on mobile device, select "RS011" pairing name. LED will turn solid Blue if successfully paired.

Speaker will automatically pair if the mobile device has been paired before. If disconnected from Bluetooth, the speaker will automatically shut off after 5 minutes. Long press Power Button (1) to turn off the speaker.

2. Playing & Call:

This speaker has a built in microphone for use with phone calls.

To answer an incoming call, short press the Play/Pause Button (2). Press the Play/Pause Button (2) again to end the phone call. To refuse a call, press and hold the Play/Pause Button (2) to refuse a call, or double press the Play/Pause Button (2) to redial.

When playing music, short press the

Play/Pause Button (2) to control the Audio. Short press "+" and "-" Buttons to increase or decrease the volume. To skip to next song, press and hold the

"+" Button (4).

To skip to previous song, press and hold the "-" Button (3).

3. Charging the Speaker

Using the provided charging cable, plug the USB into a reliable wall adapter (not included), and the other end into the Type C charging port (5).

Red LED light when charging the speaker, light turn OFF when fully charged.

SAFETY PRECAUTIONS:

WARNING-When using this product, basic precautions should always be followed:

Read all the instructions before use.

- Never store or use this product in temperatures below 32°F(0°C) or above 115°F (45°C).
- Do not overcharge the speaker. The unit may become hot from excessive use.
 Please unplug the speaker once fully charged and do no charge for longer than 7 hours at a time.
- The unit will only achieve full performance after 2 or 3 completed charge and discharge cycles.
- To reduce the risk of injury, close supervision is required when the product is used near children.
- Do not use the device in excess of its output rating. Overload outputs above the rating may result In a risk of fire or injury.
- Do not use the device if damaged or modified
- Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury

MADE IN CHINA

SIZE:165*90MM

FCC warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and. if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception.

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/ TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction