


247.4 mm

88.9 mm

Recycled ABS 3000 mAh Wireless Power Bank Instruction Manual XY-PR018

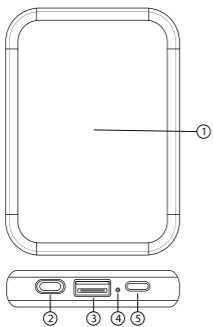

Functions:

1. Wireless Charging Surface
2. Power ON/OFF Button
3. USB-A Output Port
4. LED Indicator
5. Type-C Input Port

What's included:

- 1 x Wireless Charging Power bank
- 1 x Instruction Manual
- 1 x USB-A to Type-C Charging Cable

Tech Specifications

- Battery Capacity: 3000mAh/11.1Wh
- Type-C Input: 5V/2A
- USB-A Output: 5V/2.4A (MAX)
- Wireless Output: 5W

Instructions:

1. Charging the Powerbank:

- Be sure the power bank is fully charged before usage.
- Using the included Type-C to USB-A charging cable, insert the USB-A port of the cable into a certified USB AC adapter or USB port of a computer and Type-C tip into Type-C Input(5).
- Once connected, the LED indicator(4) will flash BLUE twice then will flash RED when charging.
- Once fully charged the LED indicator will glow solid RED, remove the charging cable from the power bank.

*Note: The LED will flash in RED quickly when the battery in low, please charge the power bank.

2. Charging Mobile Phones and Other Electronic Devices:

- Connect the charging cable to your mobile phone/device using the appropriate connector and connect the USB-A tip of the cable into USB-A Output(3).
- Phone will begin to charge automatically, the LED indicator will flash BLUE twice then will glow RED.
- Remove the charging cable from your mobile device when it is fully charged.

3. Wireless Charging Mobile phones and other electronic devices:

- Press the ON/OFF button(2) once to turn on the wireless charger function, the LED indicator will flash BLUE and RED then turn solid RED when in standby mode.

- Place the wireless charging supported mobile device on the wireless charging surface(1), it will begin to charge automatically and the LED Indicator will glow BLUE when device is charging.
- Once fully charged remove the device.
- Double press the button to turn off the wireless charger.
- **Note: When wireless charging, if the LED indicator glows solid RED and flashes BLUE, the device is either NOT a wireless charging device or there is an object between the the device and charging surface interfering with the charging process.

SAFETY PRECAUTIONS:

- WARNING-When using this product, basic precautions should always be followed:
 1. Read all the instructions before use.
 2. Never store or use this product in temperatures below 32°F(0°C) or above 115°F(45°C).
 3. Do not overcharge your phone. The unit may become hot under excessive use. Remove your phone once it is fully charged. Never charge your phone for more than 7 hours at a time.
 4. The unit will only achieve full performance after 2 or 3 completed charge and discharge cycles.
 5. To reduce the risk of injury, close supervision is required when the product is used near children.
 6. Do not expose the device to moisture.
 7. Do not use the device in excess of its output rating. Overload outputs above the rating may result in a risk of fire or injury
 8. Do not use the device if damaged or modified.

9. Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.
10. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 104°F may cause explosion.
11. Ensure that qualified service professionals use only identical replacement parts to ensure product safety.
12. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating.
13. Please remove any attachments from the phone before charging on this device, attachments can interfere with wireless charging and lead to over heating.

FCC Statement:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FC
MADE IN CHINA

