



La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation.

Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

La prise du secteur est utilisé pour déconnecter le système.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation.

Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

L'adaptateur AC/AC de l'appareil est utilisé pour déconnecter le système.

L'adaptateur AC/AC de l'appareil ne doit pas être obstrué ou doit être facilement accessible pendant son utilisation.

Pour être complètement déconnecté de l'alimentation d'entrée, l'adaptateur AC/AC de l'appareil doit être déconnecté du secteur.

- minimum distances: 10 cm around the apparatus for sufficient ventilations.
- 10cm de distance minimale autour de l'appareil pour une ventilation suffisante.
- the ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- Ne pas recouvrir les entrées d'aérations avec des objets tel qu'un journal, une nappe, un rideau, etc.
- no naked flame sources such as lighted candles should be placed on the apparatus.
- Aucune source de flamme nue, tel qu'une bougie, ne doit être placée sur l'appareil.
- attention should be drawn to the environmental aspects of battery disposal.
- Les piles usages doivent être jetées en respectant l'environnement.
- the use of apparatus in tropical and/or moderate climates.
- L'utilisation de l'appareil dans un climat tropical et/ou modéré

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Le socle de prise de courant doit être installé à proximité du matériel et doit être aisément accessible.

L'appareil ne doit pas être exposé à des égouttements d'eau ou des éclaboussures et de plus qu'aucun objet rempli de liquide tel que des vases ne doit être placé sur l'appareil.

lorsque la prise du RESEAU D'ALIMENTATION sur l'appareil est utilisée comme appareil de déconnexion, cet appareil doit demeurer aisément accessible.

les batteries ne doivent pas être exposées à une chaleur excessive telle que celle du soleil, d'un feu ou d'origine similaire.

Fast Wireless Charging SmartSet® Clock Radio with Bluetooth, USB Charge Out, Dual Alarm and 1.4" Aqua LED Display

(SmartSet® Patent No. 6,567,344)

OWNER'S MANUAL ER100202



Visit our website at www.emersonradio.com

1 WARNING

TO PREVENT ELECTRIC SHOCK HAZARD, DO NOT CONNECT TO MAINS POWER SUPPLY WHILE GRILLE IS REMOVED. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

POUR ÉVITER TOUT DANGER DE CHOC ÉLECTRIQUE, NE PAS RACCORDER AU SECTEUR TANT QUE LA GRILLE N'APAS ÉTÉ REMISE EN PLACE. POUR RÉDUIRE LE RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, NE PAS EXPOSER CET APPAREIL SOUS LA PLUIE ET L'HUMIDITÉ.

The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION
RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRIR

WARNING: SHOCK HAZARD - DO NOT OPEN COVER (ON BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This is CLASS II apparatus with double insulation, and no protective earth provided.

The Caution Marking and Rating plate are located at the bottom enclosure of the apparatus. Les marquages sont inscrits en arrière de l'appareil. Les précautions d'emploi sont inscrites en arrière de l'appareil.

IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- 2.) Do not use this apparatus near water.
- 3.) Clean only with dry cloth.
- 4.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 5.) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 6.) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 7.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 8.) Only use attachments / accessories specified by the manufacturer.
- 9.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 10.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 11.) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 12.) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- 13.) Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- 14.) Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

PRÉCAUTION: Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.



WARNING DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

WARNING

Do not ingest the battery, Chemical Burn Hazard
This product contains a coin/button cell battery.

If the coin/button is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

AVERTISSEMENT

Ne pas ingérer la pile, Danger de brûlure chimique
Ce produit contient une pile bouton. Si la pile bouton est avalée, elle peut provoquer de graves brûlures internes en 2 heures seulement et peut entraîner la mort.

Conservser les piles neuves et usées hors de portée des enfants.

Si le compartiment pile ne se ferme pas correctement, cesser d'utiliser le produit et tenir hors de portée des enfants.

En cas de doute concernant le fait que les piles pourraient avoir été avalées ou introduites dans une partie quelconque du corps, consulter immédiatement un médecin.

2 Important Notes

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as: electric heaters, on top of other stereo equipment that radiates heat, places lacking ventilation, dusty areas, places subject to constant vibration and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC adapter is properly installed.
- When moving the set, be sure to first disconnect the AC adapter.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Thank you for purchasing this Emerson SmartSet® Dual Alarm Clock . This clock uses Emerson's patented SmartSet® Automatic Time Setting System. The first time you connect this clock to your AC outlet, and after every power interruption, within seconds the clock will automatically set itself to the correct Year, Month, Date, Day, and Time. In addition, all changes from Standard Time to Daylight Saving Time, and back to Standard Time, are made automatically. There are dual alarms that can be set and used independently, and both of the alarms can be programmed for everyday operation, weekdays only, or weekends only. There is a long life lithium battery installed in this clock when you buy it. This battery can maintain the time and alarm settings for 1 to 2 years, or even longer. We have taken every precaution to make sure this clock was in perfect working order when it left our factory. If you encounter any problems with the set up or operation of this item, please call the Emerson Consumer Products Corp., Customer Service Hotline, toll free, at 1-800-898-9020.

3 Preparation For Use

- Remove the clock from the carton and remove all packing material from the

clock. **Save the packing material, if possible, in case the clock ever needs to be serviced or transported. The original carton and packing material is the only safely to pack your clock to protect it from damage in transit.**

- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Note the serial number on the bottom of your clock and write this number in the space provided on the Warranty page of this manual.
- Place your clock on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the Line cord connecting the AC adapter and extend it to its full length.

Protect Your Furniture

 
This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

Power Source

This clock is designed to operate on normal 120V 60Hz AC power only. Do not attempt to operate the clock on any other power source. You could cause damage to the clock that is not covered by your warranty. This clock should be connected to an AC outlet that is always 'live'. Do not connect it to an outlet that is controlled by a wall switch. When the power to the clock is interrupted, the built in lithium battery takes over to maintain the time and alarm settings. To maximize the life of the lithium battery keep the clock connected to a 'live' AC outlet at all times.

4 Package Contents


- ER100202 Clock Radio x 1
- Owner's Manual
- Read This Insert (Quick Start Guide)

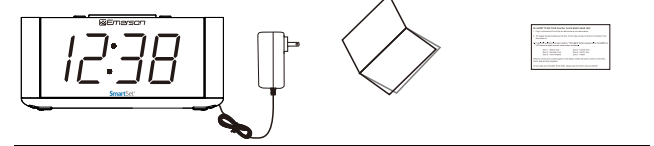


5 Location of Controls and Indicators



 TOP PANEL

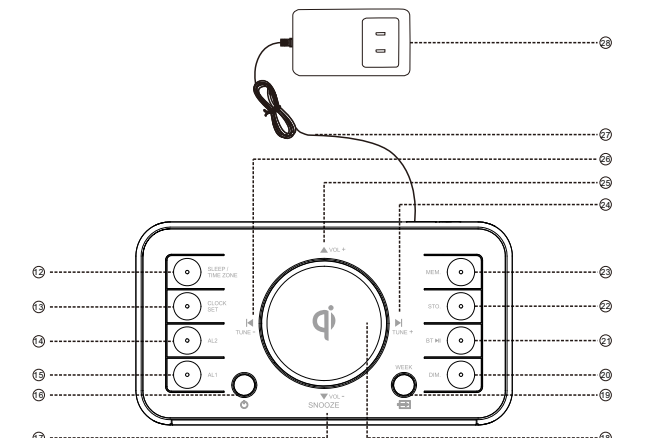

REAR PANEL

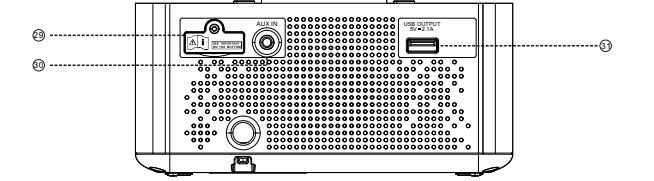 

1. (AL 1 'Radio') Alarm Indicator
2. (AL 1 'Buzzer') Alarm Indicator
3. AM Indicator. ('On'=AM; 'Off'=PM)
4. AUX Indicator
5. Wireless Charging Indicator
6. DAY OF WEEK Indicators
7. LOW BATTERY Indicator
8. MHz FM Radio Indicator
9. BT Indicator ('Solid'=Bluetooth connected)
10. (AL 2 'Buzzer') Alarm Indicator
11. (AL 2 'Radio') Alarm Indicator
12. SLEEP/TIME ZONE Button
13. CLOCK SET Button
14. AL2 ON/OFF/SET Button
15. AL1 ON/OFF/SET Button
16. POWER ('ON'/Standby) Button
17. DOWN/VOL-/SNOOZE Button
18. Qi Wireless Charging Pad
19. SOURCE/WEEK Button
20. DIM. (DIMMER) Button
21. BT (Play/Play) Button
22. STO. (STORE) Button
23. MEM. (MEMORY) Button
24. TUNE+ Button
25. UP/VOL+ Button
26. TUNE- Button
27. Adapter Cable (acts as Antenna)
28. AC Adapter
29. Backup Battery Compartment
30. AUX IN Jack
31. USB CHARGING Port


6 Setting the Time Zone

Initial Default Setting at Clock Mode

IMPORTANT: The first time you connect your new SmartSet® clock to the AC outlet the internal computer will automatically set the time correctly for the Eastern Time Zone, which is the initial default setting. The display will scan for a few seconds and then show the correct Day and Time in the Eastern zone. If you live in the Eastern Time zone, there's nothing else to do. Your clock is set correctly and running. If you do not live in the Eastern Time zone you must change the default zone display to your own zone. You only do this one time and the SmartSet® will remember the new default time zone setting and will always return to that setting after power interruption.

- There are 7 time zones programmed into your SmartSet® clock as follows:
- | | |
|-----------------------|--|
| ZONE 1 -Atlantic Time | ZONE 2 -Eastern Time (Default Setting) |
| ZONE 3 -Central Time | ZONE 4 -Mountain Time |
| ZONE 5 -Pacific Time | ZONE 6 -Yukon Time |
| ZONE 7 -Hawaiian Time | |

 To view the current zone number, press the **TIME ZONE** button briefly and then release.

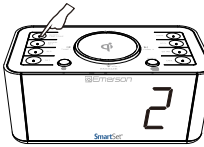

To change default time zone, press the **TIME ZONE** button repeatedly to select your own zone number. When the correct zone number appears in the display, release the button.

Note: Time zone and clock settings can only be adjusted in Standby mode, where the function of Radio, Bluetooth and AUX are disabled (i.e. indicator of MHz, BT and AUX are 'Off').

7 Setting the Clock Manually

Checking the Current Year-Date-Day of Week-Time Settings
Press briefly the **CLOCK SET** button repeatedly to see the cycle of year, date, day of week and time. To restore time display mode, leave it idle for 3 secs.

 
Setting the Year

- ① Press and hold the **CLOCK SET** button until the Year 'Flashes', then release the button;
- ② Press the or button to adjust Year;




Setting the Date

- ③ Press the **CLOCK SET** button again and release, the Date 'Flashes';
- ④ Press the or button to adjust the Month;
- ⑤ Press the or button to adjust the Date; For example, April 16th will appear as '4.16';



Setting the Time

 - ⑥ Press the **CLOCK SET** button again and release, the Hour 'Flashes';
- ⑦ Press the or button to adjust the Hour (where **AM** indicator 'On' is AM, 'Off' is PM);
- ⑧ Press the or button to adjust the Minutes;
- ⑨ Press the **CLOCK SET** button again, or leave it idle for 10 secs, to store all new settings and restore it to time display mode.



8 Daylight Saving and Leap Year Adjustment

All Daylight Saving Time (DST) and Leap Year adjustment are made automatically by the SmartSet® internal computer as follows:

Start of Daylight Saving time:
At 2:00 AM on the 2nd Sunday in March, the clock will automatically advance to 3:00 AM

End of Daylight Saving time:
At 3:00 AM on the 1st Sunday in November, the clock will automatically reset to 2:00 AM

Turn Daylight Saving Function Off / On:
Daylight Saving Time is NOT observed in Hawaii, American Samoa, Guam, Puerto Rico, the Virgin Islands and in, most of Arizona, with exception of the Navajo Indian Reservation in Arizona. If you do not want the clock to adjust itself automatically according to Daylight Saving Time, you can disable it by pressing and holding the **TIME ZONE** button, following with the **WEEK** button, pressing and holding both buttons at the same time for 4 secs, the display will show 'On', which means the auto Daylight Saving Time is enabled by default. By pressing the **WEEK** button briefly, the display will show 'OFF' to indicate that the auto Daylight Saving Time function is disabled, if pressing the **WEEK** button again, the display will show 'On' to enable the auto Daylight Saving Time function again.

Leap Year:
At 12:00 Midnight on February 28th, the calendar display will change to '2 29'.

9 Setting the Alarm

IMPORTANT: Alarm settings can be checked and adjusted in Standby mode or even while Bluetooth, Radio or AUX mode is On.

Your clock radio has two separate alarms Alarm1 (AL1) and Alarm2 (AL2) that can be set and used independently. You may use the alarms to wake two persons at different times, or you may use one alarm for weekdays and the other one for weekends. Please ensure that you have set the wake up time and alarm week mode correctly.

Adjusting the Wake Up Time

The procedure for adjusting the wake up time is the same for both Alarm1 and Alarm2.

- Press and hold either the **AL1** or **AL2** button. The display will change from the current time to the Alarm1 or Alarm2 wake up time and alarm week mode.
- While holding the **AL1** or **AL2** button, press either the or button to advance or reverse your desired wake up time.
- When the desired wake up time appears on the display, release the and buttons to store the wake up time setting.

Note: Be sure that you have set the wake up time correctly by observing the **AM** indicator. If the **AM** indicator is 'On' the wake up time is "AM". If it is 'Off', the wake up time is "PM". When the desired wake up time appears on the display, release the **AL1** or **AL2** button.