

Package Content



1 x Door Remote

 


1 x Visor Clip



— 1 —

LED and Button Rules

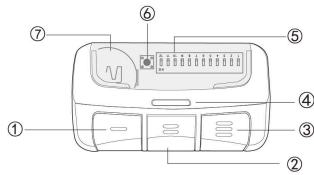

- ① Button 1
- ② Button 2
- ③ Button 3
- ④ Status LED
- ⑤ DIP switches
- ⑥ Program Button
- ⑦ Battery

NOTE: If your opener uses DIP switches to add remote, please

1. Start with door closed.
2. Match the same on/off positions as the working remote or radio receiver.
3. Press and hold the program button until the status LED lights solid red. Then following below 4-5 steps to finish the configuration.

 
— 2 —

Configuration Guide

1. Start with your garage door, villa door, or commercial door closed.



2. Remove the battery cover. Press and hold the program button until the status LED lights solid red to entering into configuration mode. This mode will last 1 min.

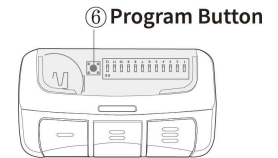

— 3 —

3. Press Button 1 or Button 2 or Button 3 to adjust to the required code. The red light will flash once for each press. Press several times to set the button as the code type.

4. Press the program button to finish programming, the indicator light will turn off, and the button will save the set code type automatically.

Note 1: Only one button can be set at a time. To set other, you must program again.

Note 2: The program time limit is 60 seconds. If the program button is not pressed again 60 seconds after entering the program, the red light will turn off and the programming will exit automatically. This program item is invalid.

Note 3: In the programming, you must keep pressing the same button, otherwise, the red light will turn off and exit the program immediately. For example, to enter the program, press button 1 twice, and press button 2 again, and then exit the program immediately, and the program item does not change.

Note 4: The remote control supports at most 16 kinds of wireless codes. If you press it for more than 16 times, the red light will turn off and exit the program. The key type does not change.

Note 5: Dip Switch is used to set the data code for the fixed code. Different dip switch numbers are used according to different code positions. This dip switch supports programming with battery, which can be program at any time and no need to reprogram.

— 4 —


The required times of button presses varies by different door brands/types.

Number of Button presses Needed	Brand	Type/Color of Smart/Learn
1 time	Linear	MegaCode 1997-Current 318MHz
2 times	Chamberlain	Orange+red Button 1997-2005 390MHz
3 times	Chamberlain	Purple Button 1999-2009 315MHz
4 times	Billion Code	Green Button 1993-1996 390MHz
5 times	Genie Overhead Door	Intellicode 2005-Current 315MHz
6 times	Genie Overhead Door	Intellicode 2005-Current 390MHz
7 times	Chamberlain	Yellow Button 2011-Current 310/315/390MHz
8 times	Chamberlain 9-Code	9 Code Switch 1990-1992 390MHz
9 times	Chamberlain 9-Code	9 Code Switch 1990-1992 315MHz
10 times	Genie 12-Code	12 Code Switch 1985 390MHz
11 times	Linear	Multi code /Ez Code 10 Code Switch 300MHz
12 times	Chamberlain 8-Code	8 Code Switch 390MHz
13 times	Stanley	10 Code Switch 310MHz
14 times	Genie 9-Code	9 Code Switch 390MHz
15 times	Linear Moor-O-Matic	8 Code Switch 310MHz
16 times	Chamberlain 7-Code	7 Code Switch 390MHz
17 times	Wayne Dalton	Wayne Dalton Rolling code 372.5MHz 1993-Current

— 5 —

NOTE: Access Master, Do-It, Gatheron, LiftMaster, Link Control, Master Mechanic, Raynor, Sears Craftsman, Steel Craft, True Value are all compatible with Chamberlain technology. Please refer to the relevant learn button.

 5. Press the SMART/LEARN button on your existing door opener.

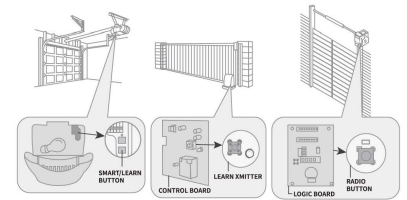

6. Then press the programmed remote control to learn on your receiver now.

You can use the configured button to control your door now. If your door does not response, please reconfigure the button once more. If it still fails, please contact us for further help.

— 6 —

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

— 7 —