

# USER MANUAL

---

## PROFESSIONAL BATTERY TROLLEY SPEAKER



TYPE 1



TYPE 2

**Please read this user manual carefully before system connection**

**THANK YOU FOR PURCHASING OUR SPEAKER. PLEASE READ THE MANUAL CAREFULLY BEFORE OPERATION.**

## **IMPORTANT SAFETY MEASURES**

Before using this machine, please read all the safety and operating instructions. Please adhere to all the instructions herein, and save this information in a safe place for future use.



1. Please ensure the power cord for this unit is out of the path of foot traffic. Do not place heavy objects on the power cord as it will cause damage to the cord. Always firmly grasp the plug and pull the plug from the power supply, never yank the cable in order to pull out the plug. Avoid the use of an extension cable.
2. Ventilation: This unit should be placed in a well ventilated space where it has no less than 10cm ventilation space on either side of it. Do not cover the unit with a cloth or blanket. Do not put it on a bed, sofa, or carpet as this will stifle the ventilation of the unit.
3. Casing Dismantling: DO NOT dismantle the casing . There are no usable parts inside the unit. Make use of a service center in order to have your unit repaired.
4. Should the unit emit any smell or smoke, immediately turn off the power supply. Take the unit to the service center from which you bought it for repairs.

## ***FEATURES***

- Bluetooth Function
- Plays Mp3 files stored in SD card/USB drive/external audio device.
- FM radio
- Guitar input
- With remote control
- Built-in 4.5A/7A rechargeable battery
- Super dynamic sound speaker
- LED light ON/OFF switch

## ***CONNECTING***

1. This set applies to AC 110V-240V, 50/60Hz
2. AC power: battery can be charged when connected to AC power. Red light on battery is charging, it will change to green once battery complete charge.
3. Internal battery will be charged even device switch off when plugged in to AC power
4. Speaker battery can be charged using 12V external car battery as well(connect cable not included) by "DC 12V input". Please make sure "+" and "-" in right connection.
5. Adjust function keys to your personal audio preference.

## ***BLUETOOTH INSTRUCTION***

Change the mode into "BLUE", the bluetooth sign light twinkles, and speaker will give an alarm. Ensure you enable the Bluetooth function on your Bluetooth device. Search for Bluetooth connection until you find device model and pair.

## **BATTERY & CHARGING**

 
1. The units takes approximately 8 hours to fully charge. It will automatically begin charging once the power cord is connected.
2. If the battery power is low may caused sound distortion or stop play, pls charging the battery ontime.
3. To maximize the battery's lifespan, please charging the battery immediately. When the unit is not used for prolonged periods of time,the battery will gradually lose its power. It is recommended to fully charge the battery at least every 30days.
4. To saving battery, please power off once stop using.





## **REMOTE CONTROL**

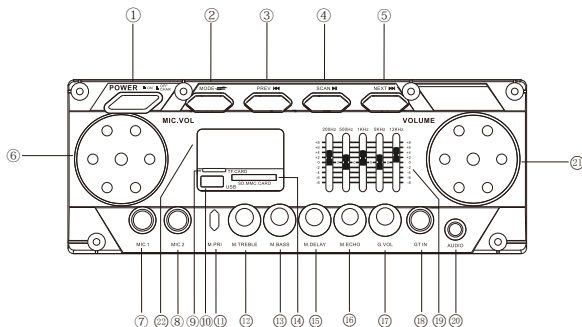


- Standby
- USB/SD/LINE/BLUETOOTH (Audio input)
- Prev/FM CH-
- Play/pause/FM tuner
- Next/FM CH+
- Repeat
- Stop
- Volume up
- Volume down
- Mute
- Equalizer
- Number

## TYPE 1 FRONT CONTROL PANEL



 
- ① **POWER** ON/OFF SWITCH
- ② **MODE**  :MODE SELECT
- ③ **PREV**  :PREVIOUS
- ④ **SCAN**  :PLAY/PAUSE
- ⑤ **NEXT**  :NEXT
- ⑥ **MIC.VOL** MICROPHONE VOLUME ADJUST
- ⑦ **MIC.1** MICROPHONE INPUT JACK 1
- ⑧ **MIC.2** MICROPHONE INPUT JACK 2
- ⑨ **TF CARD** TF CARD INPUT
- ⑩ **USB** USB INPUT
- ⑪ **M.PRI** MICROPHONE PRORITY ON/OFF SWITCH
- ⑫ **M.TREBLE** TREBLE ADJUST
- ⑬ **M.BASS** BASS ADJUST
- ⑭ **SD/MMC CARD** SD/MMC CARD INPUT
- ⑮ **M.DELAY** DELAY ADJUST
- ⑯ **M.ECHO** ECHO ADJUST
- ⑰ **G.VOL** GUITAR VOLUME ADJUST
- ⑱ **GT.IN** GUITAR INPUT JACK
- ⑲ **EQUALIZER**
- ⑳ **AUDIO** INPUT
- ㉑ **VOLUME** MASTER VOLUME ADJUST
- ㉒ **DISPLAY SCREEN**

## TYPE 2 FRONT CONTROL PANEL

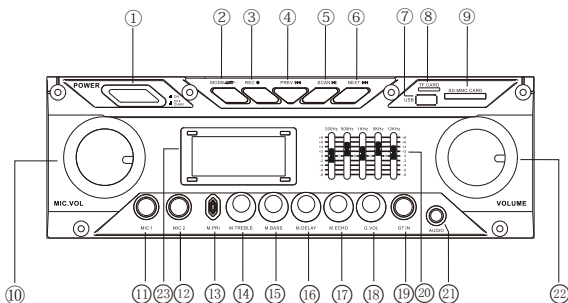

- ① **POWER** ON/OFF SWITCH
- ② **MODE** ←: MODE SELECT
- ③ **REC** RECORDING FUNCTION  
INSERT THE USB MEMORY/SD CARD AND PRESSTHIS BUTTON TO START RECORDING.  
PRESSING THE BUTTON AGAIN STOPS RECORDING
- ④ **PREV** ⏮: PREVIOUS
- ⑤ **SCAN** ⏪: PLAY/PAUSE
- ⑥ **NEXT** ⏩: NEXT
- ⑦ **USB** USB INPUT
- ⑧ **TF CARD** TF CARD INPUT
- ⑨ **SD/MMC CARD** SD/MMC CARD INPUT
- ⑩ **MIC VOL** MICROPHONE VOLUME ADJUST
- ⑪ **MIC.1** MICROPHONE INPUT JACK 1
- ⑫ **MIC.2** MICROPHONE INPUT JACK 2
- ⑬ **M.PRI** MICROPHONE PRIORITY ON/OFF SWITCH
- ⑭ **M.TREBLE** TREBLE ADJUST
- ⑮ **M.BASS** BASS ADJUST
- ⑯ **M.DELAY** DELAY ADJUST
- ⑰ **M.ECHO** ECHO ADJUST
- ⑱ **G.VOL** GUITAR VOLUME ADJUST
- ⑲ **GT.IN** GUITAR INPUT JACK
- ⑳ **EQUALIZER**
- ㉑ **AUDIO** INPUT
- ㉒ **VOLUME** MASTER VOLUME ADJUST
- ㉓ **DISPLAY SCREEN**

## REAR CONTROL PANEL

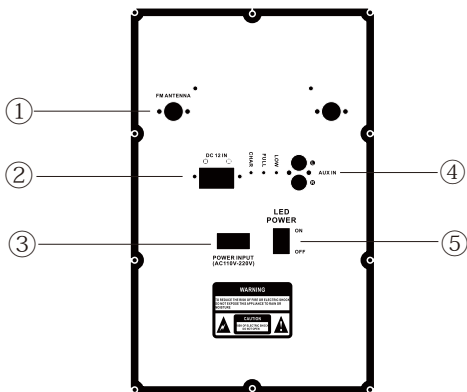 

- ① FM ANTENA
- ② DC 12 IN
- ③ POWER INPUT(AC 110V-220V)
- ④ AUX IN
- ⑤ LED LIGHT ON/OFF SWITCH

**FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.