



BV370
Stereo Bluetooth speaker

USER MANUAL ►

FCC ID:2ALJ2-BV370

Preface

Dear Users:

Thanks for purchasing "SeeMeHere"'s product ,please read this user manual carefully before using it.

Thanks , Let' s enjoy music together!

FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Beginning

Warnings

- Please use and store this product at room temperature
- Do not expose this product to rain or wet conditions
- Please avoid throwing and dropping the speaker
- Do not self-dismantling, repair and transform the product
- Do not use chemical solvent cleaning the product
- Please don't arbitrarily discarded or placed the lithium battery in the fire in order to avoid the risk of explosion

1

Features

 
- ◆ Take pictures by one button via Bluetooth
- ◆ TF card play and support MP3/WMA normal format
- ◆ Support APE/FLAC/WAV lossless music format
- ◆ Built-in 1700 mAh Li-ion rechargeable battery
- ◆ Support voice prompt
- ◆ Built-in radiator to enhance the bass
- ◆ Output power: 3.5Wx2, stereo sound

Technique Parameters

Appearance parameters	
Interfaces	Micro USB port
	TF card slot
Product Size	W123 × D64 × H46 (mm)
Product weight	278g (Built-in battery)

3

Packing Content

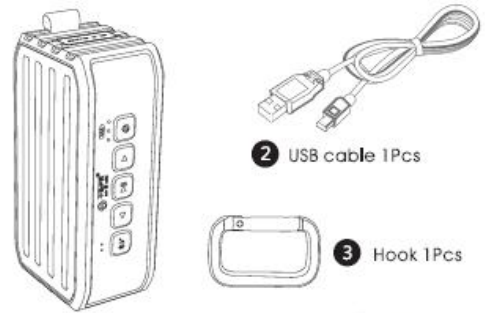

2 USB cable 1Pcs



3 Hook 1Pcs

1 Bluetooth speaker 1Pcs

 


4 3.5mm Audio cable 1Pcs



5 User manual 1Pcs

2

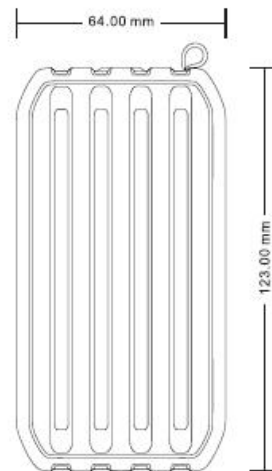






4

Technical	
Output power	68Hz-20KHz
Frequency response	68Hz-20KHz
USB	USB2.0, compatible to USB1.1
Charging time	DC 5C=500mA around 3-3.5 hours
Playback time	around 10 hours when middle volume

TF card music play	
Music format	MP3,WMA, APE, FLAC, WAV
Bit Rate	MP3: 8Kbps-320Kbps
	WMA: 32Kbps-384Kbps
	APE: 600Kbps-1414Kbps
	FLAC: 600Kbps-1414Kbps
	WAV: 32Kbps-1414Kbps

5

 
- ①  **Power/Mode Key:** Long press: power on or power off
Short press: mode shift
*:if connected with AUX & TF card press this mode key will shift the mode from BT>TF>AUX orderly
*:if without TF card or AUX, press mode :no mode shift, just stay on BT mode
- ②  **Bluetooth:** disconnect&connect/handsfree/snapshotting
1)When a call comes in, short press to answer the call short press to hang up while on the call
2)Long press 2S, enter into Bluetooth mode or disconnect Bluetooth,short press to reconnect
3)Short press to reconnect the last paired device
- ③  **Previous:** short press, go to the previous song;
long press, volume down
- ④  **Play/pause:** short press to play/pause music
- ⑤  **Next:** short press, go to the next song; long press, volume up

7

Get Started

Keys Function

Noted the keys's function on BV370

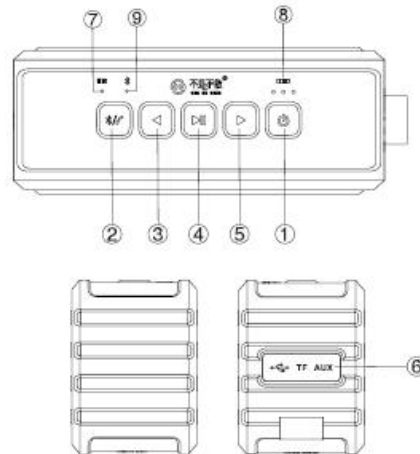

6

- ⑥  **TF card slot:** insert TF card and play the stored music;
 - **Reset:** Press it when speaker crashes
 - **Line In:** Connect 3.5MM Audio cable connect the computer to access the TF
 - **Micro USB port:** charging
- ⑦  **Built in Microphone**
- ⑧  **Power indicator light:** battery capacity

8

Battery indicator

☀️☀️☀️ 100% Power
white LED stay

☀️☀️○ 75% Power
white LED stay

☀️○○ 30% Power
white LED stay

☀️○○ 15% Power
Low Power, need charging
The volume will be turn down automatically
Change to red LED

○○○ Turn off soon
red LED flash

Charging indicator

☀️☀️☀️ charge to 100%
white LED stay

☀️☀️☀️ charge to 100%
white LED stay flash

☀️☀️☀️ charge to 30%
white LED stay flash orderly

☀️☀️☀️ Charging
flash orderly



Note:
When ultra low Power, red LED quick flash when turn on, and BV370 will turn off in 15S.

9

Mode indicator

☀️ **Turn on:** white LED quick flash, waiting to be connected, white LED stay when connected

☀️ **Pause under Bluetooth mode:** white LED slow flash

☀️ **Play under Micro SD card:** white LED stay

☀️ **Pause under Micro SD card:** white LED flash

☀️ **Play under Aux In:** white LED stay

☀️ **Mute under Aux In:** white LED flash

☀️ **Max volume:** white LED quick flash




10



Built in snapshotting function

1 Snapshotting

When BV370 connected with Apple devices (iPhone, iPad, etc.). Operate camera app, then short press  to take pictures.

2 compatible list

iPhone 4/4S/5/5S/5C/6; iPad etc.

11



Operation & Bluetooth connection

1 2S long press turn on/ turn off

 
Power on: "Ding Dong" then, voice prompt "Bluetooth mode" white LED turn on and flash.



2 Bluetooth connection

Turn on Bluetooth function on smart phone, tablet or other devices, search the speaker "BV370" and connect it.

12

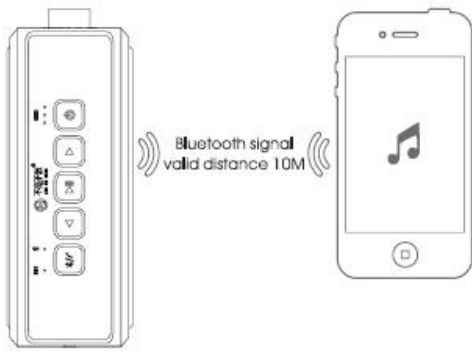

3 Connected and play

There is "Ding-dong-ding" sound once paired, white LED stay, then you can enjoy your music via BV370 from your smart phone or tablet etc.

1. If need password, please input "0000" and confirm to connect

2. BV370 will reconnect the last paired device automatically

13

Micro SD card mode and play



1 Insert TF card and turn on
Insert the TF card, turn on the speaker

2 Short press

and shift to "TF card mode", the speaker will play the stored music.



Note: If the speaker is on stand by mode, insert the TF card, it will shift to TF card mode automatically.

15

Connect other Bluetooth devices

1 Bluetooth disconnect

Long press **M** can disconnect current Bluetooth device. Then the speaker enter pairing mode, white LED flash and the voice prompt is "deng"



Turn on the Bluetooth function on smart phone or other devices, then search "BV370" to connect.

2 short press

to reconnect the last paired device.

 
14

Handsfree



1 BV370 connected with the smart phone


When a call comes in, the playing will be paused, then ring tong, short press **M** to answer the call, short press again to hang up; Long press to reject the call

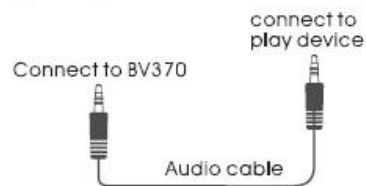

Line in mode paly

Long press to turn on the speaker, press **M** to shift the "Line in mode", then use the audio cable to play music.

 16

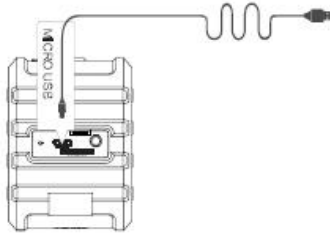

Charing: take DC 5V-500mA adapter or computer USB port

Note: Please charging the speaker if long time no using.

FAQ

Questions	Settlement
Fail to Bluetooth connect	1,Restart the speaker 2.If need password, please input"0000"
Mulsic play break	1,Please check the Bluetooth connection valid distance or if something cut off the signal
TF card format wrong	1, Check the TF format correct or not, BV370 support FAT32 2,the music format are WAV, WMA,MP3, APE, FLAC or not?
No sound	1,Check the volume adjustment on the speaker 2,Check the speaker is in mute or paused
Line-In no sound	1,Check if the audio cable connected in right way
Fail to turn on	1,Check if the power is low
Speaker froze	1,Insert a thin metal sticker stick to reset the speaker